



**MODEL:**  
**KINO-DAL**

**Mini-ITX SBC with 14nm Intel® Atom™, Pentium® or Celeron®  
On-board SoC, HDMI, LVDS, VGA, Dual PCIe GbE, USB 3.0,  
PCIe Mini, M.2, SATA 6Gb/s, RS-232/422/485, Audio, TPM and RoHS**

# User Manual

# Revision

---

Date	Version	Changes
January 4, 2018	1.00	Initial release

# Copyright

---

## **COPYRIGHT NOTICE**

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## **TRADEMARKS**

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

# Manual Conventions

---



## **WARNING**

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



## **CAUTION**

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



## **NOTE**

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



## **HOT SURFACE**

This symbol indicates a hot surface that should not be touched without taking care.

# Table of Contents

<b>1 INTRODUCTION.....</b>	<b>1</b>
1.1 INTRODUCTION.....	2
1.2 MODEL VARIATIONS .....	3
1.3 FEATURES.....	3
1.4 CONNECTORS .....	4
1.5 DIMENSIONS.....	5
1.6 DATA FLOW .....	6
1.7 TECHNICAL SPECIFICATIONS .....	7
<b>2 UNPACKING .....</b>	<b>10</b>
2.1 ANTI-STATIC PRECAUTIONS .....	11
2.2 UNPACKING PRECAUTIONS.....	11
2.3 PACKING LIST.....	12
2.4 OPTIONAL ITEMS .....	13
<b>3 CONNECTORS .....</b>	<b>14</b>
3.1 PERIPHERAL INTERFACE CONNECTORS.....	15
3.1.1 <i>KINO-DAL Layout</i> .....	15
3.1.2 <i>Peripheral Interface Connectors</i> .....	16
3.1.3 <i>External Interface Panel Connectors</i> .....	17
3.2 INTERNAL PERIPHERAL CONNECTORS .....	18
3.2.1 <i>Audio Connector</i> .....	18
3.2.2 <i>Battery Connector</i> .....	19
3.2.1 <i>Chassis Intrusion Connector</i> .....	20
3.2.1 <i>DC-IN Power Connector</i> .....	21
3.2.2 <i>Digital I/O Connector</i> .....	22
3.2.3 <i>Fan Connector, CPU</i> .....	23
3.2.1 <i>Fan Connector, System</i> .....	24
3.2.2 <i>Front Panel Connector</i> .....	25
3.2.1 <i>I<sup>2</sup>C Connector</i> .....	26
3.2.2 <i>Keyboard and Mouse Connector</i> .....	27



3.2.3 LAN LED Connectors .....	28
3.2.1 LCD Inverter Connector .....	29
3.2.1 LVDS Connector .....	30
3.2.2 M.2 Slot .....	31
3.2.3 microSD Slot (Optional) .....	32
3.2.4 PCIe Mini Card Slot .....	32
3.2.5 PCIe x1 Card Slot .....	34
3.2.6 RS-232 Serial Port Connector .....	35
3.2.7 SATA 6Gb/s Drive Connectors .....	37
3.2.8 SATA Power Connectors .....	38
3.2.9 SIM Card Slot .....	39
3.2.1 SMBus Connector .....	40
3.2.2 SPI Flash Connector, BIOS .....	41
3.2.1 SPI Flash Connector, EC .....	42
3.2.2 TPM Connector .....	43
3.2.3 USB Connectors .....	44
3.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL .....	45
3.3.1 Audio Jacks .....	46
3.3.1 HDMI Connector .....	47
3.3.2 LAN & USB 3.0 Combo Connectors .....	48
3.3.3 Power Connector .....	50
3.3.1 RS-232/422/485 Serial Port Connectors (COM1, COM2) .....	51
3.3.1 VGA Connector .....	52
<b>4 INSTALLATION .....</b>	<b>53</b>
4.1 ANTI-STATIC PRECAUTIONS .....	54
4.2 INSTALLATION CONSIDERATIONS .....	54
4.3 SO-DIMM INSTALLATION .....	56
4.4 M.2 MODULE INSTALLATION .....	57
4.5 PCIe MINI CARD INSTALLATION .....	59
4.5.1 Full-size PCIe Mini Card Installation .....	59
4.5.2 Half-size PCIe Mini Card Installation .....	61
4.6 SIM CARD INSTALLATION .....	63
4.7 SYSTEM CONFIGURATION .....	65
4.7.1 AT/ATX Mode Select Switch .....	65

**KINO-DAL SBC**

4.7.2	<i>Clear CMOS Button</i> .....	66
4.7.3	<i>Flash Descriptor Security Override Jumper</i> .....	67
4.7.1	<i>LVDS Voltage Select Jumper</i> .....	68
4.7.2	<i>LVDS Panel Resolution Select Switch</i> .....	69
4.7.3	<i>M.2 and SATA2 Select Switch</i> .....	70
4.8	<b>CHASSIS INSTALLATION</b> .....	71
4.8.1	<i>Airflow</i> .....	71
4.8.2	<i>Motherboard Installation</i> .....	71
4.9	<b>SATA DRIVE CONNECTION</b> .....	71
<b>5</b>	<b>BIOS</b> .....	<b>73</b>
5.1	<b>INTRODUCTION</b> .....	74
5.1.1	<i>Starting Setup</i> .....	74
5.1.2	<i>Using Setup</i> .....	74
5.1.3	<i>Getting Help</i> .....	75
5.1.4	<i>Unable to Reboot after Configuration Changes</i> .....	75
5.1.5	<i>BIOS Menu Bar</i> .....	75
5.2	<b>MAIN</b> .....	76
5.3	<b>ADVANCED</b> .....	77
5.3.1	<i>ACPI Settings</i> .....	78
5.3.2	<i>F81866 Super IO Configuration</i> .....	79
5.3.2.1	<i>Serial Port n Configuration</i> .....	79
5.3.2.1.1	<i>Serial Port 1 Configuration</i> .....	80
5.3.2.1.2	<i>Serial Port 2 Configuration</i> .....	81
5.3.2.1.3	<i>Serial Port 3 Configuration</i> .....	82
5.3.2.1.4	<i>Serial Port 4 Configuration</i> .....	83
5.3.2.1.5	<i>Serial Port 5 Configuration</i> .....	84
5.3.2.1.6	<i>Serial Port 6 Configuration</i> .....	85
5.3.3	<i>iWDD H/W Monitor</i> .....	86
5.3.3.1	<i>Smart Fan Mode Configuration</i> .....	87
5.3.4	<i>USB Configuration</i> .....	88
5.3.5	<i>CPU Configuration</i> .....	89
5.3.6	<i>RTC Wake Settings</i> .....	91
5.3.7	<i>Power Saving Configuration</i> .....	92
5.3.8	<i>Serial Port Console Redirection</i> .....	93

5.3.8.1 Legacy Console Redirection Settings .....	94
5.3.9 IEI Feature .....	95
5.4 CHIPSET .....	96
5.4.1 North Bridge Configuration.....	97
5.4.1.1 Intel IGD Configuration.....	98
5.4.1.2 LCD Control .....	100
5.4.2 South Bridge Configuration.....	102
5.4.2.1 HD-Audio Configuration .....	104
5.4.2.2 PCI Express Configuration .....	105
5.4.2.2.1 Onboard LAN .....	106
5.4.2.2.2 MPCIE1 .....	107
5.4.2.2.3 SATA Configuration.....	108
5.5 SECURITY.....	110
5.6 BOOT.....	111
5.7 SAVE & EXIT .....	113
<b>6 SOFTWARE DRIVERS .....</b>	<b>115</b>
6.1 SOFTWARE INSTALLATION .....	116
6.2 AVAILABLE SOFTWARE DRIVERS .....	117
<b>A REGULATORY COMPLIANCE .....</b>	<b>118</b>
<b>B PRODUCT DISPOSAL .....</b>	<b>120</b>
<b>C BIOS MENU OPTIONS.....</b>	<b>122</b>
<b>D TERMINOLOGY .....</b>	<b>125</b>
<b>E DIGITAL I/O INTERFACE .....</b>	<b>129</b>
<b>F WATCHDOG TIMER.....</b>	<b>132</b>
<b>G HAZARDOUS MATERIALS DISCLOSURE .....</b>	<b>135</b>



# List of Figures

Figure 1-1: KINO-DAL.....	2
Figure 1-2: Connectors (Front Side).....	4
Figure 1-3: Dimensions (mm).....	5
Figure 1-4: Data Flow Diagram.....	6
Figure 3-1: Connector and Jumper Locations.....	15
Figure 3-2: Audio Connector Location.....	18
Figure 3-3: Battery Connector Location.....	19
Figure 3-4: Chassis Intrusion Connector Location.....	20
Figure 3-5: DC-IN Power Connector Location.....	21
Figure 3-6: Digital I/O Connector Location.....	22
Figure 3-7: CPU Fan Connector Locations.....	23
Figure 3-8: System Fan Connector Locations.....	24
Figure 3-9: Front Panel Connector Location.....	25
Figure 3-10: I2C Connector Pinout Locations.....	26
Figure 3-11: Keyboard and Mouse Connector Location.....	27
Figure 3-12: LAN LED Connector Locations.....	28
Figure 3-13: LCD Inverter Connector Location.....	29
Figure 3-14: LVDS Connector Location.....	30
Figure 3-15: M.2 Slot Location.....	31
Figure 3-16: microSD Card Slot Location.....	32
Figure 3-17: PCIe Mini Card Slot Location.....	33
Figure 3-18: PCIe x1 Slot Location.....	34
Figure 3-19: RS-232 Serial Port Connector Locations.....	36
Figure 3-20: SATA 6Gb/s Drive Connectors Locations.....	37
Figure 3-21: SATA Power Connector Locations.....	38
Figure 3-22: SIM Card Slot Location.....	39
Figure 3-23: SMBus Connector Location.....	40
Figure 3-24: BIOS SPI Flash Connector Location.....	41
Figure 3-25: EC SPI Flash Connector Location.....	42
Figure 3-26: TPM Connector Location.....	43
Figure 3-27: USB Connector Locations.....	44

Figure 3-28: External Peripheral Interface Connector .....	45
Figure 3-29: Audio Connector .....	46
Figure 3-30: HDMI Connector .....	47
Figure 3-31: LAN Connector .....	48
Figure 3-32: USB 3.0 Port Pinout Locations .....	49
Figure 3-33: Power Jack .....	50
Figure 3-34: Serial Port Pinouts .....	51
Figure 3-35: VGA Connector .....	52
Figure 4-1: SO-DIMM Installation .....	56
Figure 4-2: Removing the M.2 Module Retention Screw and Plastic Ring .....	57
Figure 4-3: Inserting the M.2 Module into the Slot at an Angle .....	58
Figure 4-4: Securing the M.2 Module.....	58
Figure 4-5: Removing the Retention Screw .....	59
Figure 4-6: Inserting the Full-size PCIe Mini Card into the Slot at an Angle .....	60
Figure 4-7: Securing the Full-size PCIe Mini Card .....	60
Figure 4-8: Removing Retention Screw and Standoff .....	61
Figure 4-9: Installing the Standoff .....	62
Figure 4-10: Inserting the Half-size PCIe Mini Card into the Slot at an Angle.....	62
Figure 4-11: Securing the Half-size PCIe Mini Card .....	63
Figure 4-12: Unlock SIM Card Slot Cover .....	63
Figure 4-13: SIM Card Installation.....	64
Figure 4-14: Lock SIM Card Slot Cover .....	64
Figure 4-15: AT/ATX Mode Select Switch Location .....	65
Figure 4-16: Clear CMOS Button Location.....	66
Figure 4-17: Flash Descriptor Security Override Jumper Location .....	67
Figure 4-18: LVDS Voltage Select Jumper Location.....	68
Figure 4-19: LVDS Panel Resolution Select Switch Location.....	69
Figure 4-20: M.2 and SATA2 Select Switch Location.....	70
Figure 4-21: SATA Drive Cable Connection.....	72

# List of Tables

Table 1-1: KINO-DAL Model Variations .....	3
Table 1-2: Technical Specifications.....	9
Table 3-1: Peripheral Interface Connectors .....	17
Table 3-2: Rear Panel Connectors .....	17
Table 3-3: Audio Connector Pinouts .....	18
Table 3-4: Battery Connector Pinouts .....	19
Table 3-5: Chassis Intrusion Connector Pinouts .....	20
Table 3-6: DC-IN Power Connector Pinouts.....	21
Table 3-7: Digital I/O Connector Pinouts.....	22
Table 3-8: CPU Fan Connector Pinouts.....	23
Table 3-9: System Fan Connector Pinouts .....	24
Table 3-10: Front Panel Connector Pinouts.....	25
Table 3-11: I2C Connector Pinouts .....	26
Table 3-12: Keyboard and Mouse Connector Pinouts .....	27
Table 3-13: LAN LED Connector Pinouts .....	28
Table 3-14: LCD Inverter Connector Pinouts.....	29
Table 3-15: LVDS Connector Pinouts.....	31
Table 3-16: PCIe Mini Card Slot Pinouts .....	34
Table 3-17: PCIe x1 Slot Pinouts.....	35
Table 3-18: RS-232 Serial Port Connector Pinouts .....	36
Table 3-19: SATA Power Connector Pinouts.....	38
Table 3-20: SMBus Connector Pinouts .....	40
Table 3-21: BIOS SPI Flash Connector Pinouts .....	41
Table 3-22: EC SPI Flash Connector Pinouts .....	42
Table 3-23: TPM Connector Pinouts .....	43
Table 3-24: USB Connector Pinouts .....	44
Table 3-25: HDMI Connector Pinouts .....	47
Table 3-26: LAN Pinouts .....	48
Table 3-27: Connector LEDs.....	48
Table 3-28: USB 3.0 Port Pinouts.....	49
Table 3-29: RS-232/422/485 Serial Port Pinouts .....	51

<b>Table 3-30: VGA Connector Pinouts.....</b>	<b>52</b>
<b>Table 4-1: AT/ATX Mode Select Switch Settings.....</b>	<b>65</b>
<b>Table 4-2: Flash Descriptor Security Override Jumper Settings.....</b>	<b>67</b>
<b>Table 4-3: LVDS Voltage Select Jumper Settings .....</b>	<b>68</b>
<b>Table 4-4: LVDS Panel Resolution Selection.....</b>	<b>69</b>
<b>Table 4-5: M.2 and SATA2 Select Switch Settings .....</b>	<b>70</b>
<b>Table 5-1: BIOS Navigation Keys .....</b>	<b>75</b>

# List of BIOS Menus

BIOS Menu 1: Main .....	76
BIOS Menu 2: Advanced .....	77
BIOS Menu 3: ACPI Settings .....	78
BIOS Menu 4: F81866 Super IO Configuration .....	79
BIOS Menu 5: Serial Port n Configuration .....	79
BIOS Menu 6: iWDD H/W Monitor .....	86
BIOS Menu 7: Smart Fan Mode Configuration .....	87
BIOS Menu 8: USB Configuration .....	88
BIOS Menu 9: CPU Configuration .....	89
BIOS Menu 10: RTC Wake Settings .....	91
BIOS Menu 11: Power Saving Configuration .....	92
BIOS Menu 12: Serial Port Console Redirection .....	93
BIOS Menu 13: Legacy Console Redirection Settings .....	94
BIOS Menu 14: IEI Feature .....	95
BIOS Menu 15: Chipset .....	96
BIOS Menu 16: North Bridge Configuration .....	97
BIOS Menu 17: Intel IGD Configuration .....	98
BIOS Menu 18: LCD Control .....	100
BIOS Menu 19: South Bridge Configuration .....	102
BIOS Menu 20: HD-Audio Configuration .....	104
BIOS Menu 21: PCI Express Configuration .....	105
BIOS Menu 22: Onboard LAN .....	106
BIOS Menu 23: MPCIE1 .....	107
BIOS Menu 24: SATA Configuration .....	108
BIOS Menu 25: Security .....	110
BIOS Menu 26: Boot .....	111
BIOS Menu 27: Save & Exit .....	113





Chapter

1

# Introduction

---

## 1.1 Introduction



**Figure 1-1: KINO-DAL**

The KINO-DAL series is a Mini-ITX form factor single board computer. It has an on-board 14nm Intel® Atom™, Pentium® or Celeron® processor, and supports two 204-pin 1867/1600 MHz dual-channel DDR3 Low Voltage (DDR3L) SDRAM SO-DIMM slots with up to 8.0 GB of memory.

The KINO-DAL series includes one internal LVDS connector, one VGA connector and one HDMI connectors for triple independent. Expansion and I/O include one PCIe x1 slot, one PCIe Mini slot supporting WWAN modules, one M.2 B-key slot for expansion, four USB 3.0 connectors on the rear panel, four USB 2.0 connectors by pin header and two SATA 6Gb/s connectors. Serial device connectivity is provided by four internal RS-232 connectors and two external RS-232/422/485 connectors. Two RJ-45 GbE connectors provide the system with smooth connections to an external LAN.

## KINO-DAL SBC

### 1.2 Model Variations

The model variations of the KINO-DAL series are listed below.

Model No.	SoC	Power Input	Operating Temp.
KINO-DAL-N2	Intel® Pentium® N4200	12 V DC	-20°C ~ 70°C
KINO-DAL-N1	Intel® Celeron® N3350	12 V DC	-20°C ~ 70°C
KINO-DAL-E3W2*	Intel® Atom™ E3950	9 V ~ 30 V DC	-40°C ~ 85°C
KINO-DAL-E2W2	Intel® Atom™ E3940	9 V ~ 30 V DC	-40°C ~ 85°C
KINO-DAL-E1W2	Intel® Atom™ E3930	9 V ~ 30 V DC	-40°C ~ 85°C
*By order production, MOQ 100			

**Table 1-1: KINO-DAL Model Variations**

### 1.3 Features

Some of the KINO-DAL motherboard features are listed below:

- Mini-ITX motherboard supports 14nm Intel® Atom™/Pentium®/Celeron® on-board SoC
- Triple independent display support
- Two 1867/1600 MHz DDR3L SO-DIMM slots support up to 8 GB of memory
- Two SATA 6Gb/s connectors with 5 V / 12 V power output
- Full-size/half-size PCIe Mini card slot with SIM card holder for WWAN expansion
- M.2 2242/2260/2280 B-key modules supported
- Four USB 3.0 external connectors
- Two external RS-232/422/485 connectors and four internal RS-232 connectors
- Optional 9 V ~ 30 V DC wide power input range
- IEI One Key Recovery solution allows you to create rapid OS backup and recovery



## 1.4 Connectors

The connectors on the KINO-DAL are shown in the figure below.

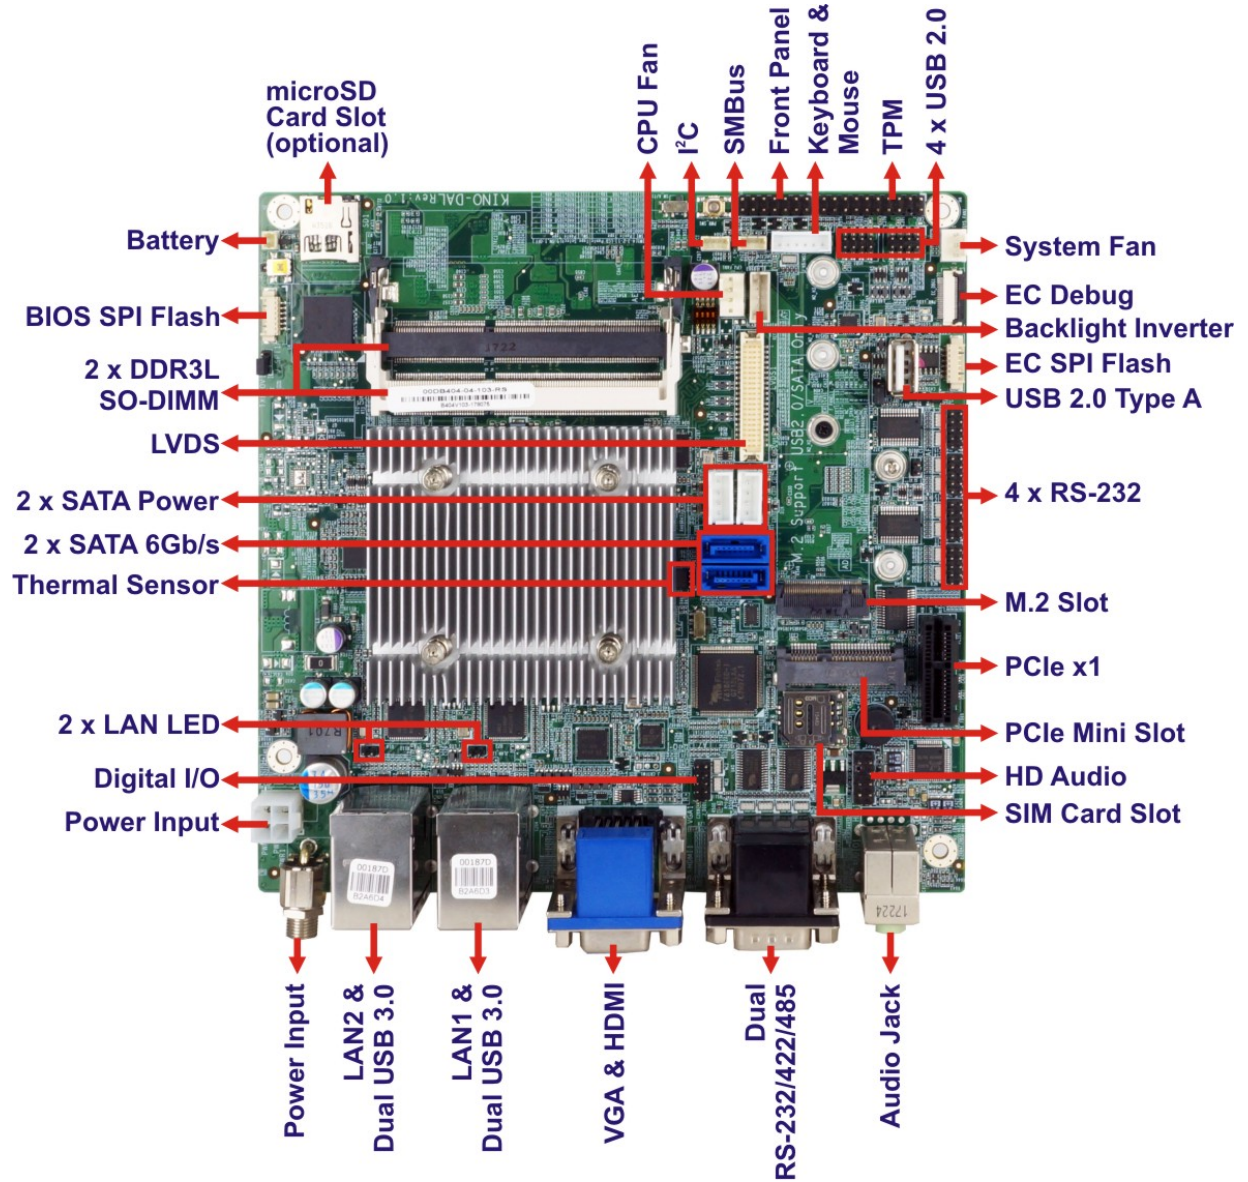


Figure 1-2: Connectors (Front Side)



KINO-DAL SBC

1.5 Dimensions

The dimensions of the board are listed below:

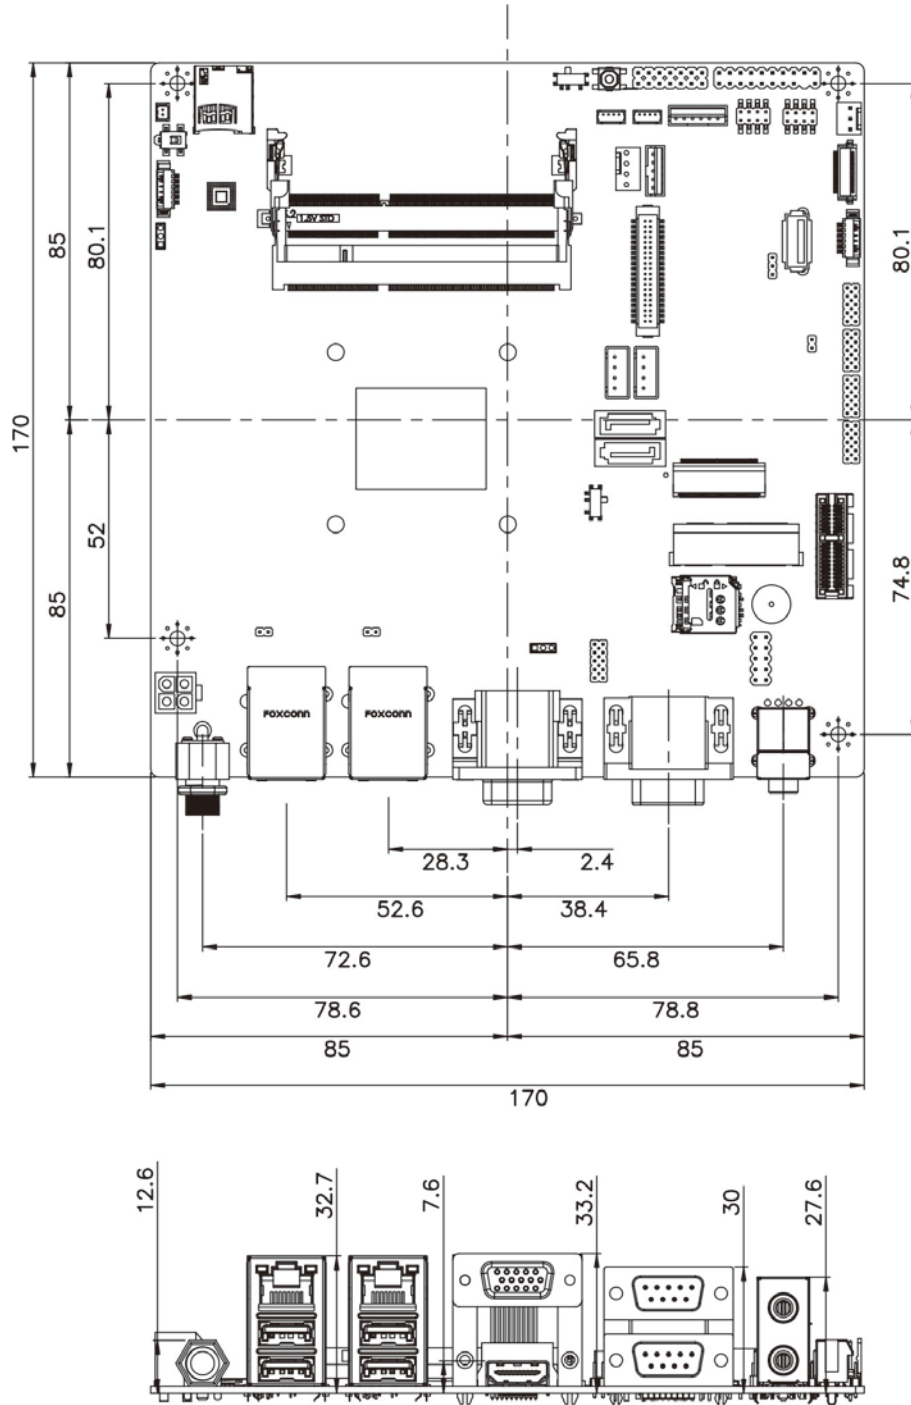


Figure 1-3: Dimensions (mm)

### 1.6 Data Flow

Figure 1-4 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

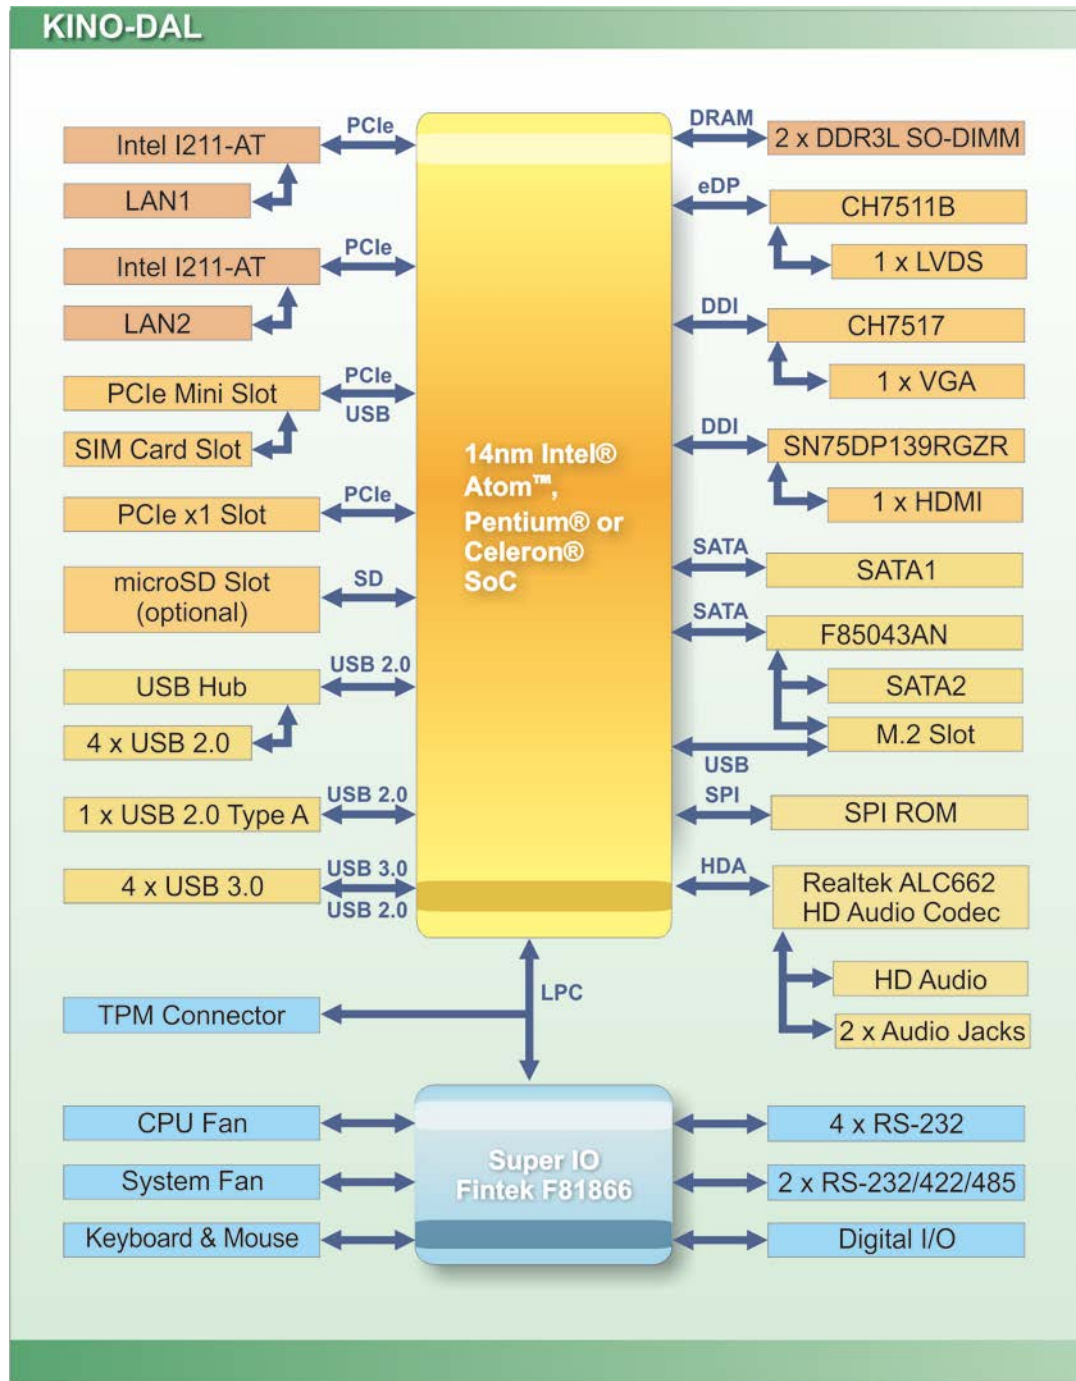


Figure 1-4: Data Flow Diagram

## KINO-DAL SBC

### 1.7 Technical Specifications

KINO-DAL technical specifications are listed below.

Specification	KINO-DAL
<b>Form Factor</b>	Mini-ITX
<b>SoC</b>	Intel® Pentium® N4200 on-board SoC (up to 2.5 GHz, quad-core, 2 MB cache, TDP=6 W) Intel® Celeron® N3350 on-board SoC (up to 2.4 GHz, dual-core, 2 MB cache, TDP=6 W) Intel® Atom™ E3950 on-board SoC (up to 2.0 GHz, quad-core, 2 MB cache, TDP=12 W) Intel® Atom™ E3940 on-board SoC (up to 1.8 GHz, quad-core, 2 MB cache, TDP=9 W) Intel® Atom™ E3930 on-board SoC (up to 1.8 GHz, dual-core, 2 MB cache, TDP=6 W)
<b>BIOS</b>	AMI UEFI BIOS
<b>Memory</b>	Two 204-pin 1867/1600 MHz dual-channel DDR3L SDRAM SO-DIMM slots (system max. 8 GB) Optional eMMC 5.0 (up to 32 GB)
<b>Graphics</b>	9 <sup>th</sup> generation Intel® HD Graphics with 18 execution units, supporting 4K codec decode & encode for HEVC, H.264, VP8, SVC and MVC
<b>Display Output</b>	Triple independent display 1 x 18/24-bit dual channel LVDS (up to 1920x1200 @ 60Hz) 1 x VGA (up to 1920x1200 @ 60Hz) 1 x HDMI (up to 3840x2160 @ 30Hz)
<b>Ethernet</b>	Dual Intel® I211-AT PCIe GbE controller
<b>Digital I/O</b>	8-bit digital I/O by 10-pin (2x5) header
<b>Super IO</b>	Fintek F81866
<b>Embedded Controller</b>	ITE IT8528

Specification	KINO-DAL
<b>Audio</b>	Realtek ALC662 HD Audio codec
<b>Watchdog Timer</b>	Software programmable support 1~255 sec. system reset
<b>I/O Interface</b>	
<b>Audio Connector</b>	2 x Audio jack (line-out, mic-in) 1 x Front audio by 10-pin (2x5) header
<b>Ethernet</b>	2 x RJ-45 GbE port
<b>Keyboard/Mouse</b>	1 x KB/MS by 6-pin (1x6) wafer
<b>Serial Ports</b>	2 x RS-232/422/485 by DB-9 4 x RS-232 by 10-pin (2x5) header
<b>USB Ports</b>	4 x USB 3.0 on rear I/O 4 x USB 2.0 by 8-pin (2x4) header 1 x USB 2.0 by internal 180° Type A
<b>Front Panel</b>	1 x Front panel connector by 14-pin (2x7) header for power LED, HDD LED, speaker, power button and reset button
<b>LAN LED</b>	2 x LAN link LED connector by 2-pin header
<b>Fan</b>	1 x CPU smart fan connector by 4-pin (1x4) wafer 1 x System smart fan connector by 3-pin (1x3) wafer
<b>SMBus</b>	1 x SMBus connector by 4-pin (1x4) wafer
<b>I<sup>2</sup>C</b>	1 x I <sup>2</sup> C connector by 4-pin (1x4) wafer
<b>TPM</b>	1 x TPM connector by 20-pin (2x10) header
<b>Storage</b>	2 x SATA 6Gb/s with 5 V / 12 V SATA power connectors 1 x microSD socket (optional)
<b>Expansion</b>	1 x Full-size/Half-size PCIe Mini card slot (with SIM holder) 1 x M.2 2242/2260/2280 slot (B key, SATA 1 port + USB 2.0 signal) 1 x PCIe x1 slot
<b>Environmental and Power Specifications</b>	



## KINO-DAL SBC

Specification	KINO-DAL
<b>Power Supply</b>	Default: 12 V DC input Optional: 9 V ~ 30 V DC input (KINO-DAL-ExW2) AT/ATX mode supported
<b>Power Connector</b>	1 x External DC power jack (ø5.5 mm) 1 x Internal power connector by 4-pin (2x2) connector
<b>Power Consumption</b>	+12 V@ 3.64 A (Intel® Pentium® N4200 processor with two 4 GB 1600 MHz DDR3L memory)
<b>Operating Temperature</b>	-20°C ~ 70°C / -40°C ~ 85°C (KINO-DAL-ExW2 series)
<b>Storage Temperature</b>	-40°C ~ 85°C
<b>Humidity</b>	5% ~ 95%, non-condensing
<b>Safety</b>	CE, FCC
<b>Physical Specifications</b>	
<b>Dimensions</b>	170 mm x 170 mm
<b>Weight GW/NW</b>	1100 g / 700 g

**Table 1-2: Technical Specifications**



Chapter

2

# Unpacking

---

## KINO-DAL SBC

### 2.1 Anti-static Precautions

---



#### WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

---

Make sure to adhere to the following guidelines:

- **Wear an anti-static wristband:** Wearing an anti-static wristband can prevent electrostatic discharge.
- **Self-grounding:** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- **Use an anti-static pad:** When configuring any circuit board, place it on an anti-static mat.
- **Only handle the edges of the PCB:** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

### 2.2 Unpacking Precautions

When the KINO-DAL is unpacked, please do the following:

- Follow the antistatic guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.






## 2.3 Packing List




**NOTE:**

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the KINO-DAL was purchased from or contact an IEI sales representative directly by sending an email to [sales@ieiworld.com](mailto:sales@ieiworld.com).

The KINO-DAL is shipped with the following components:





Quantity	Item and Part Number	Image
1	KINO-DAL single board computer	
1	SATA with 5V/12V output cable kit (P/N: 32801-000100-300-RS)	
1	I/O shielding	
1	Utility CD	
1	One Key Recovery CD	

## KINO-DAL SBC

1	Quick Installation Guide	
---	--------------------------	---

## 2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
KB/MS PS/2 Y-cable, 135 mm, P=2.0 (P/N: 32000-023800-RS)	
Dual USB cable (wo bracket), 210mm, P=2.0 (P/N: 32000-070301-RS)	
RS-232 cable, 200mm, P=2.0 (P/N: 32205-002700-100-RS)	
Infineon TPM 2.0 module, 20-pin, firmware v5.5 (P/N: TPM-IN02-R20)	

Chapter

**3**

# Connectors

---



## KINO-DAL SBC

### 3.1 Peripheral Interface Connectors

This chapter details all the jumpers and connectors.

#### 3.1.1 KINO-DAL Layout

The figures below show all the connectors and jumpers.

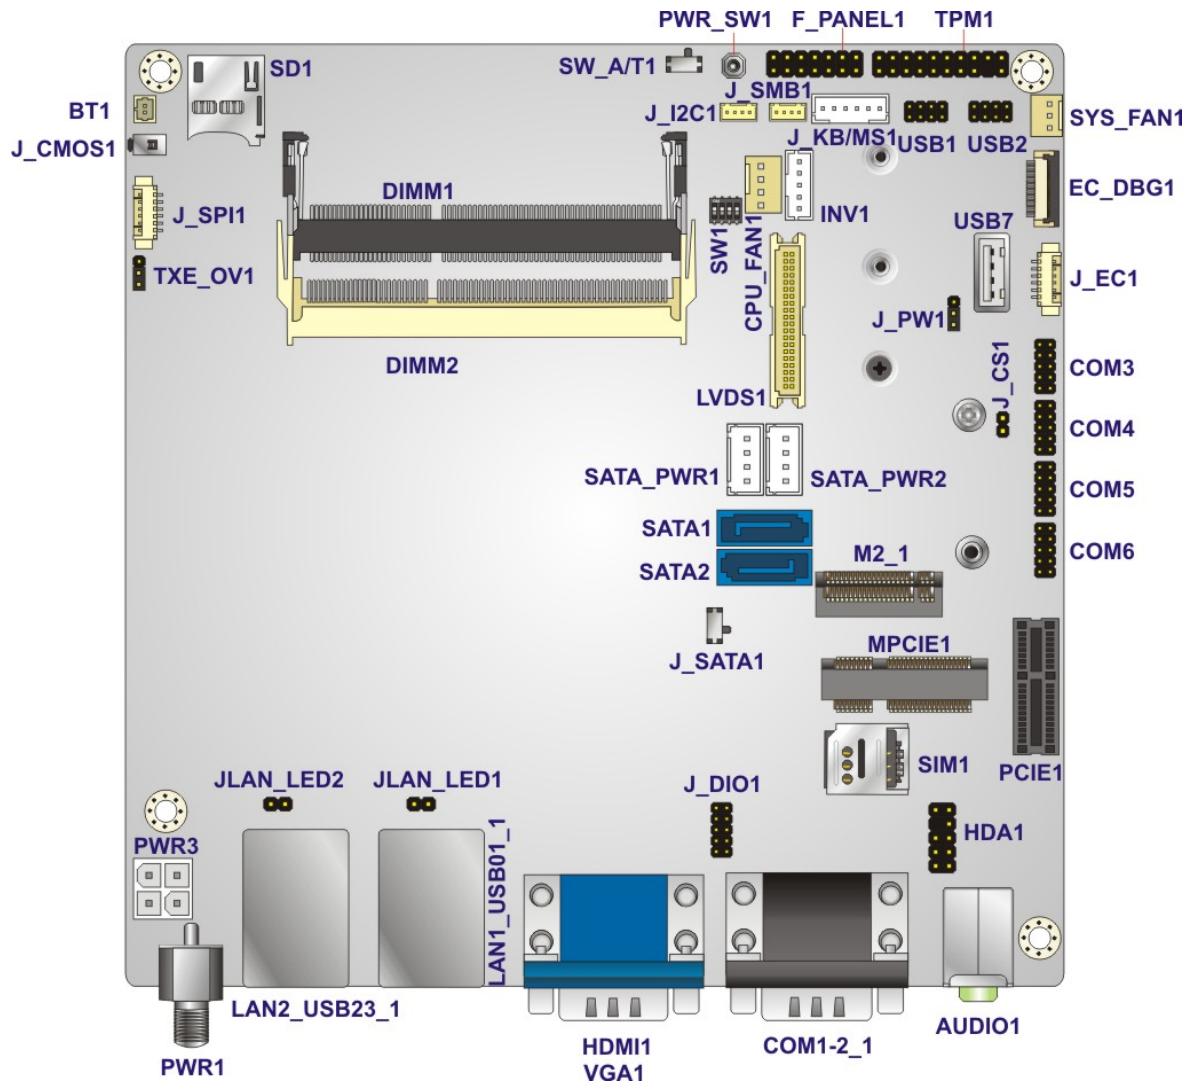


Figure 3-1: Connector and Jumper Locations

### 3.1.2 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
Audio connector	10-pin header	HDA1
Battery connector	2-pin wafer	BT1
Chassis intrusion connector	2-pin header	J_CS1
DC-IN power connector	4-pin Molex	PWR3
Digital I/O connector	10-pin header	J_DIO1
Fan connector, CPU	4-pin wafer	CPU_FAN1
Fan connector, system	3-pin wafer	SYS_FAN1
Front panel connector	14-pin header	F_PANEL1
I <sup>2</sup> C connector	4-pin wafer	J_I2C1
Keyboard & mouse connector	6-pin wafer	J_KB/MS1
LAN LED connectors	2-pin header	JLAN_LED1, JLAN_LED2
LCD inverter connector	5-pin wafer	INV1
LVDS connector	40-pin crimp	LVDS1
M.2 slot	M.2 B-key slot	M2_1
Memory slot	204-pin DDR3L SO-DIMM	DIMM1, DIMM2
microSD slot (optional)	microSD slot	SD1
PCIe Mini card slot	PCIe Mini slot	MPCIE1
PCIe x1 slot	PCIe x1 slot	PCIE1
Power button	On-board power button	PWR_SW1

## KINO-DAL SBC

RS-232 serial port connectors	10-pin header	COM3, COM4, COM5, COM6
SATA 6Gb/s drive connectors	7-pin SATA connector	SATA1, SATA2
SATA power connectors	4-pin wafer	SATA_PWR1, SATA_PWR2
SIM card slot	micro-SIM card slot	SIM1
SMBus connector	4-pin wafer	J_SMB1
SPI flash connector, BIOS	6-pin wafer	J_SPI1
SPI flash connector, EC	6-pin wafer	J_EC1
TPM connector	20-pin header	TPM1
USB 2.0 connector	8-pin header	USB1, USB2

**Table 3-1: Peripheral Interface Connectors**

### 3.1.3 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
Audio jack	Audio jack	AUDIO1
DC-IN power jack	Power jack	PWR1
HDMI connector	HDMI	HDMI1
LAN and USB 3.0 combo connectors	RJ-45, USB 3.0	LAN1_USB01_1, LAN2_USB23_1
RS-232/422/485 serial port connectors	DB-9	COM1-2_1
VGA connector	DB-15	VGA1

**Table 3-2: Rear Panel Connectors**


### 3.2 Internal Peripheral Connectors

The section describes all of the connectors on the KINO-DAL.

#### 3.2.1 Audio Connector

- CN Label:** HDA1
- CN Type:** 10-pin header, p=2.54 mm
- CN Location:** See **Figure 3-2**
- CN Pinouts:** See **Table 3-3**

The audio connector supporting High-Definition Audio is connected to external audio devices including speakers and microphones for the input and output of audio signals to and from the system.

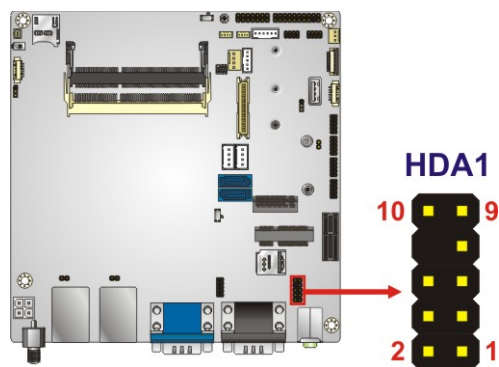

**Figure 3-2: Audio Connector Location**

Pin	Description	Pin	Description
1	MIC2-L	2	GND
3	MIC2-R	4	Pre-Sense#
5	LINE2-R	6	MIC2-JD
7	GND	8	Key
9	LINE2-L	10	LINE2-JD

**Table 3-3: Audio Connector Pinouts**

## KINO-DAL SBC

### 3.2.2 Battery Connector




**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- CN Label:** BT1
- CN Type:** 2-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-3**
- CN Pinouts:** See **Table 3-4**

The battery connector is connected to the system battery. The battery provides power to the system clock to retain the time when power is turned off.

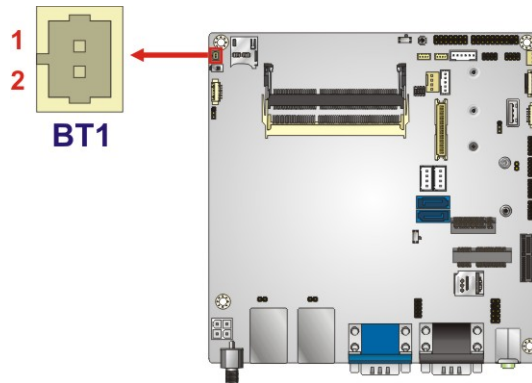

**Figure 3-3: Battery Connector Location**

Pin	Description
1	RTC Battery+
2	RTC Battery-


**Table 3-4: Battery Connector Pinouts**



### 3.2.1 Chassis Intrusion Connector

- CN Label:** J\_CS1
- CN Type:** 2-pin header, , p=2.0 mm
- CN Location:** See **Figure 3-4**
- CN Pinouts:** See **Table 3-5**

The chassis intrusion connector is for a chassis intrusion detection sensor or switch that detects if a chassis component is removed or replaced.

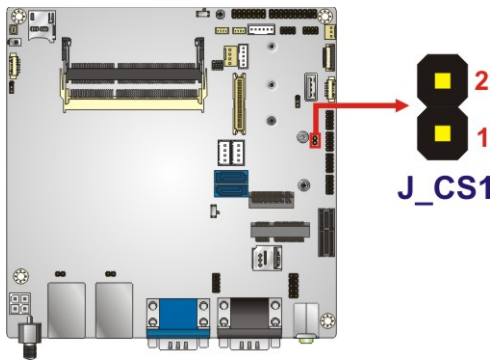

**Figure 3-4: Chassis Intrusion Connector Location**

Pin	Description
1	+V3.3A_EC
2	CHASSIS_EC

**Table 3-5: Chassis Intrusion Connector Pinouts**


## KINO-DAL SBC

### 3.2.1 DC-IN Power Connector

- CN Label:** PWR3
- CN Type:** 4-pin Molex, p=4.2 mm
- CN Location:** See **Figure 3-5**
- CN Pinouts:** See **Table 3-6**

The connector supports power input. The input voltage varies by models:

- 12 V DC: KINO-DAL-N2  
KINO-DAL-N1
- 9 V ~ 30 V DC: KINO-DAL-E3W2  
KINO-DAL-E2W2  
KINO-DAL-E1W2

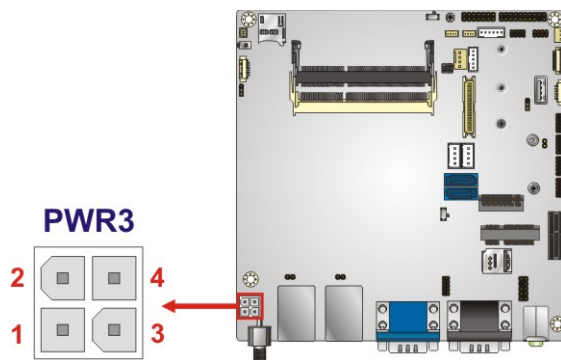

**Figure 3-5: DC-IN Power Connector Location**


Pin	Description	Pin	Description
1	GND	2	GND
3	VCC	4	VCC

**Table 3-6: DC-IN Power Connector Pinouts**

### 3.2.2 Digital I/O Connector

- CN Label:** J\_DIO1
- CN Type:** 10-pin header, p=2.00 mm
- CN Location:** See **Figure 3-6**
- CN Pinouts:** See **Table 3-7**

The 8-bit digital I/O connector provides programmable input and output for external devices.

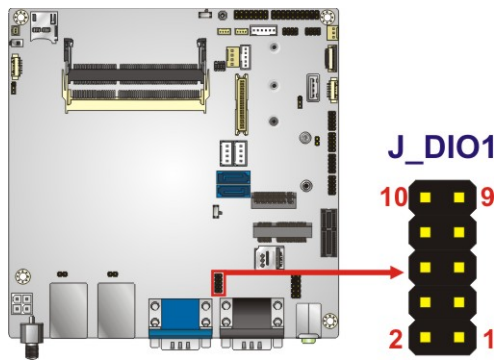

**Figure 3-6: Digital I/O Connector Location**

Pin	Description	Pin	Description
1	GND	2	+5V
3	D_OUT3	4	D_OUT2
5	D_OUT1	6	D_OUT0
7	D_IN3	8	D_IN2
9	D_IN1	10	D_IN0


**Table 3-7: Digital I/O Connector Pinouts**

## KINO-DAL SBC

### 3.2.3 Fan Connector, CPU

- CN Label:** CPU\_FAN1
- CN Type:** 4-pin wafer, p=2.54 mm
- CN Location:** See **Figure 3-7**
- CN Pinouts:** See **Table 3-8**

The fan connector attaches to a cooling fan.

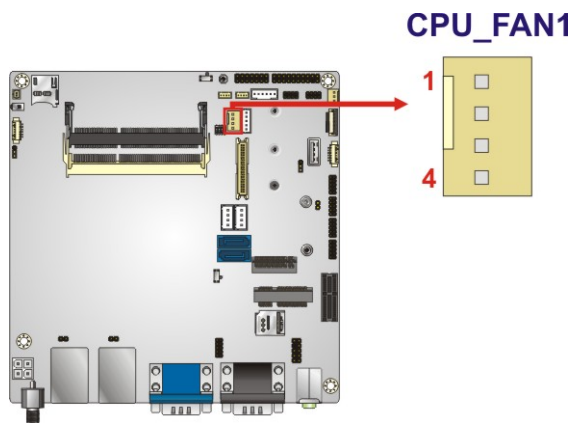

**Figure 3-7: CPU Fan Connector Locations**


Pin	Description
1	GND
2	12V
3	FAN_IO
4	FANCTL

**Table 3-8: CPU Fan Connector Pinouts**

### 3.2.1 Fan Connector, System

- CN Label:**        **SYS\_FAN1**
- CN Type:**        3-pin wafer, p=2.54 mm
- CN Location:**    See **Figure 3-8**
- CN Pinouts:**     See **Table 3-9**

The fan connector attaches to a cooling fan.

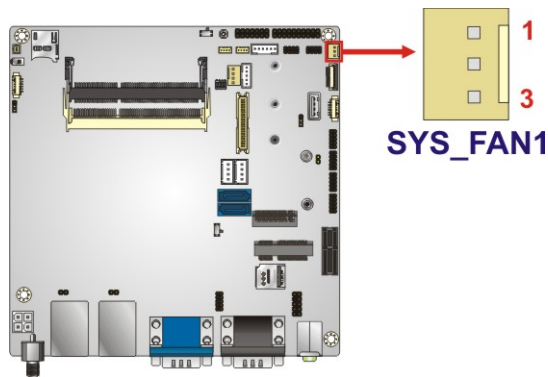

**Figure 3-8: System Fan Connector Locations**

Pin	Description
1	FAN_IN
2	12V
3	GND

**Table 3-9: System Fan Connector Pinouts**




## KINO-DAL SBC

### 3.2.2 Front Panel Connector

- CN Label:** F\_PANEL1
- CN Type:** 14-pin header, p=2.54 mm
- CN Location:** See **Figure 3-9**
- CN Pinouts:** See **Table 3-10**

The front panel connector connects to the indicator LEDs, buttons and speaker on the system front panel.

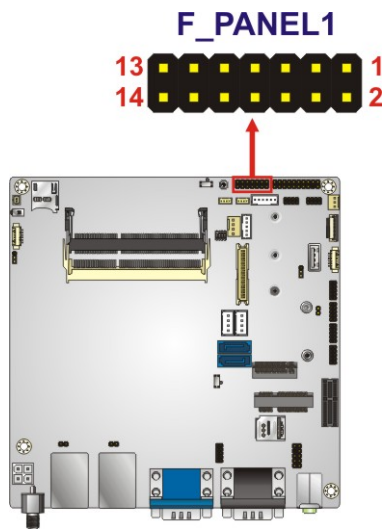

**Figure 3-9: Front Panel Connector Location**


Pin	Description	Pin	Description
1	PWR_LED+	2	SPKR+
3	NC	4	NC
5	PWR_LED-	6	NC
7	PWR_SW+	8	SPKR-
9	PWR_SW-	10	NC
11	HDD_LED+	12	RESET_SW+
13	HDD_LED-	14	RESET_SW-

**Table 3-10: Front Panel Connector Pinouts**

### 3.2.1 I<sup>2</sup>C Connector

- CN Label:** J\_I2C1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-10**
- CN Pinouts:** See **Table 3-11**

The I<sup>2</sup>C connector is used to connect I<sup>2</sup>C-bus devices to the mainboard.

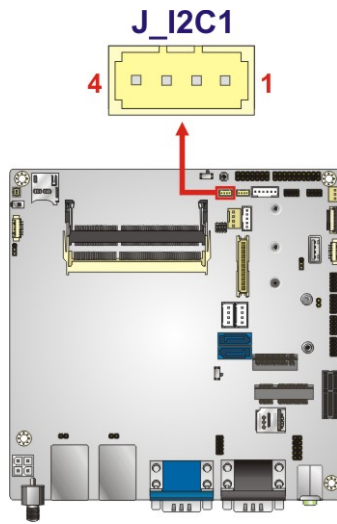

**Figure 3-10: I2C Connector Pinout Locations**

Pin	Description
1	GND
2	I2C_DATA
3	I2C_CLK
4	+5V


**Table 3-11: I2C Connector Pinouts**

## KINO-DAL SBC

### 3.2.2 Keyboard and Mouse Connector

- CN Label:** J\_KB/MS1
- CN Type:** 6-pin wafer, p=2.00 mm
- CN Location:** See **Figure 3-11**
- CN Pinouts:** See **Table 3-12**

The keyboard/mouse connector connects to a PS/2 Y-cable that can be connected to a PS/2 keyboard and mouse.

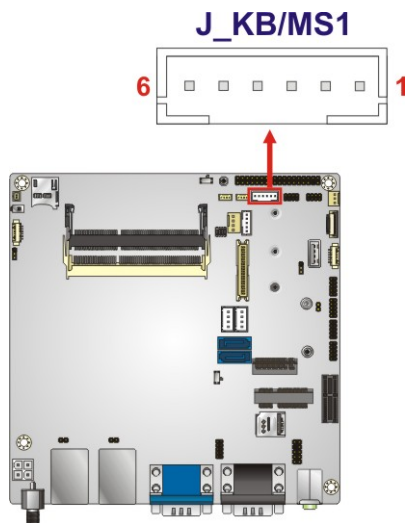

**Figure 3-11: Keyboard and Mouse Connector Location**

Pin	Description
1	+5V
2	Mouse Data
3	Mouse Clock
4	Keyboard Data
5	Keyboard Clock
6	GND

**Table 3-12: Keyboard and Mouse Connector Pinouts**

### 3.2.3 LAN LED Connectors


**CN Label:** JLAN\_LED1, JLAN\_LED2

**CN Type:** 2-pin header, p=2.00 mm

**CN Location:** See **Figure 3-12**

**CN Pinouts:** See **Table 3-13**

The LAN LED connectors connect to the LAN link LEDs on the system.

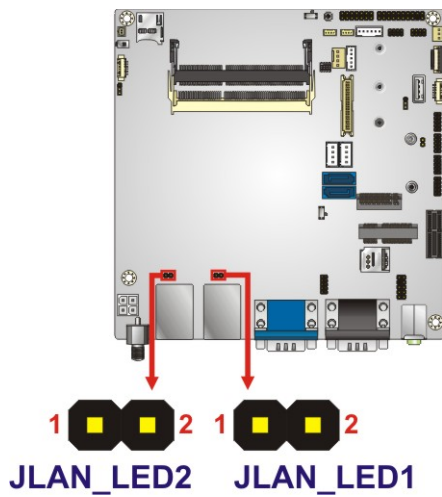

**Figure 3-12: LAN LED Connector Locations**

Pin	Description
1	LED+
2	LED-


**Table 3-13: LAN LED Connector Pinouts**

## KINO-DAL SBC

### 3.2.1 LCD Inverter Connector

- CN Label:** INV1
- CN Type:** 5-pin wafer, p=2.00 mm
- CN Location:** See **Figure 3-13**
- CN Pinouts:** See **Table 3-14**

Use the LCD inverter connector provides power to an LCD panel.

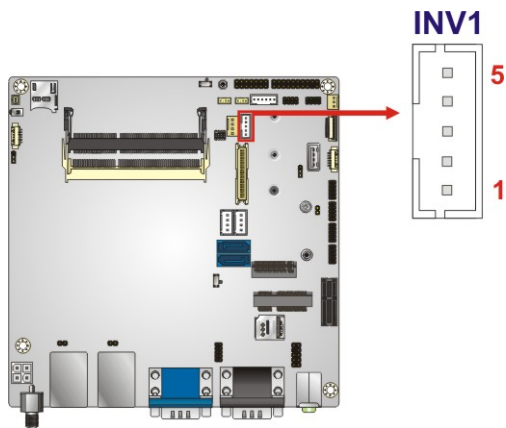

**Figure 3-13: LCD Inverter Connector Location**

Pin	Description
1	LCD Adjust
2	GND
3	+12V
4	GND
5	Backlight Enable


**Table 3-14: LCD Inverter Connector Pinouts**



### 3.2.1 LVDS Connector

- CN Label:** LVDS1
- CN Type:** 40-pin crimp
- CN Location:** See **Figure 3-14**
- CN Pinouts:** See **Table 3-15**

The LVDS connector is for connecting 18-bit/24-bit dual channel LVDS devices.

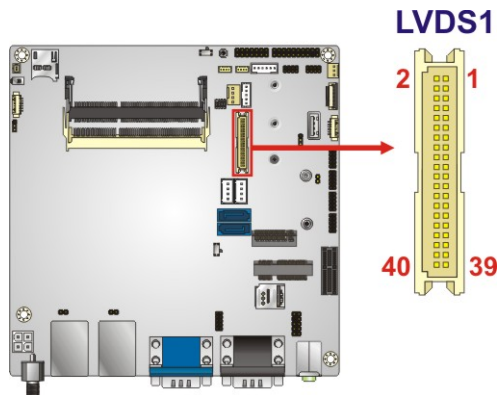

**Figure 3-14: LVDS Connector Location**

Pin	Description	Pin	Description
1	GND	2	GND
3	A_DATA0-	4	A_DATA1-
5	A_DATA0+	6	A_DATA1+
7	GND	8	GND
9	A_DATA2-	10	Clock1-
11	A_DATA2+	12	Clock1+
13	GND	14	GND
15	A_DATA3-	16	A_DATA4-
17	A_DATA3+	18	A_DATA4+
19	GND	20	GND
21	A_DATA5-	22	A_DATA6-
23	A_DATA5+	24	A_DATA6+
25	GND	26	GND

## KINO-DAL SBC

Pin	Description	Pin	Description
27	Clock2-	28	A_DATA7-
29	Clcok2+	30	A_DATA7+
31	GND	32	GND
33	LVDS Detect (GND)*	34	GND
35	LCD VCC	36	LCD VCC
37	LCD VCC	38	LCD VCC
39	LCD VCC	40	LCD VCC


\*LVDS Detect must be connected to GND.

**Table 3-15: LVDS Connector Pinouts**

### 3.2.2 M.2 Slot

- CN Label:** M2\_1
- CN Type:** M.2 B-key slot
- CN Location:** See **Figure 3-15**

The M.2 slot is keyed in the B position and provides three positions for the mounting screw, accepting 2242, 2260 and 2280 sizes of M.2 modules. The M.2 slot supports SATA and USB 2.0 interfaces only.

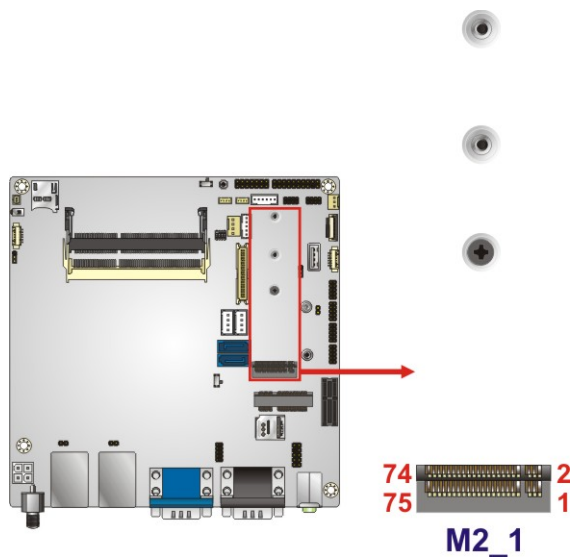


**Figure 3-15: M.2 Slot Location**

### 3.2.3 microSD Slot (Optional)

<b>CN Label:</b>	<b>SD1</b>
<b>CN Type:</b>	microSD card slot
<b>CN Location:</b>	See <b>Figure 3-16</b>

The microSD card slot accepts a microSD card for storage.

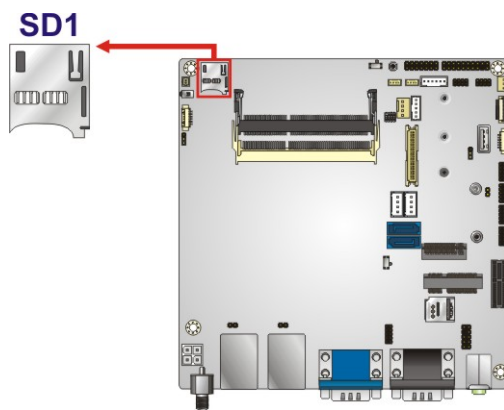

**Figure 3-16: microSD Card Slot Location**

### 3.2.4 PCIe Mini Card Slot

<b>CN Label:</b>	<b>MPCIE1</b>
<b>CN Type:</b>	Half-size/Full-size PCIe Mini card slot
<b>CN Location:</b>	See <b>Figure 3-17</b>
<b>CN Pinouts:</b>	See <b>Table 3-16</b>

The PCIe Mini card slot is for installing a full-size or half-size PCIe Mini expansion card.

KINO-DAL SBC

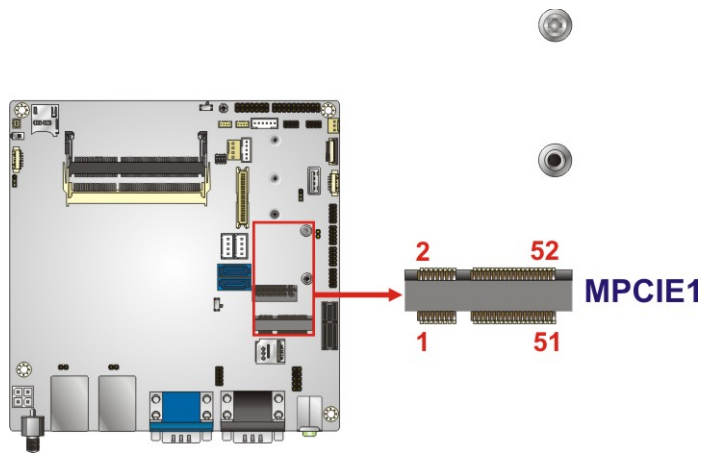


Figure 3-17: PCIe Mini Card Slot Location

Pin	Description	Pin	Description
1	PCIE_WAKE#	2	VCC3
3	N/C	4	GND
5	N/C	6	1.5 V
7	PCIE_CLKREQ#	8	SIM_VCC
9	GND	10	SIM_IO
11	CLK-	12	SIM_CLK
13	CLK+	14	SIM_RST
15	GND	16	SIM_VPP
17	N/C	18	GND
19	N/C	20	WLAN_EN
21	GND	22	BUF_PLT_RST#
23	PCIE_RXN3	24	VCC3A
25	PCIE_RXP3	26	GND
27	GND	28	1.5 V
29	GND	30	SMBCLK
31	PCIE_TXN3	32	SMBDATA
33	PCIE_TXP3	34	GND
35	GND	36	USB2-
37	GND	38	USB2+
39	VCC3	40	GND


Pin	Description	Pin	Description
41	VCC3	42	N/C
43	N/C	44	N/C
45	N/C	46	N/C
47	N/C	48	1.5 V
49	N/C	50	GND
51	N/C	52	VCC3

**Table 3-16: PCIe Mini Card Slot Pinouts**

### 3.2.5 PCIe x1 Card Slot

- CN Label:** PCIE1
- CN Type:** PCIe x1 slot
- CN Location:** See **Figure 3-18**
- CN Pinouts:** See **Table 3-17**

The PCIe x1 slot is for PCIe x1 expansion cards.

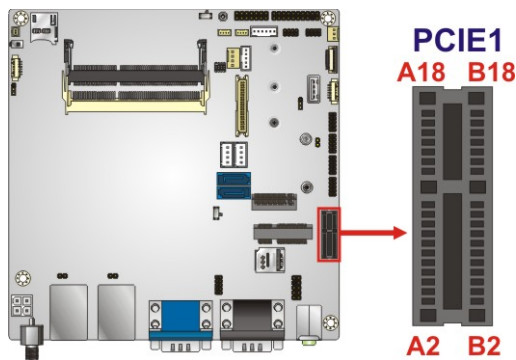

**Figure 3-18: PCIe x1 Slot Location**

Pin	Description	Pin	Description
A1	+12V	B1	PRSNT#1
A2	+12V	B2	+12V
A3	RSVD	B3	+12V
A4	GND	B4	GND
A5	SMCLK	B5	JTAG2



## KINO-DAL SBC

Pin	Description	Pin	Description
A6	SMDAT	B6	JTAG3
A7	GND	B7	JTAG4
A8	+3.3V	B8	JTAG5
A9	JTAG1	B9	+3.3V
A10	3.3 Vaux	B10	+3.3V
A11	WAKE#	B11	PWRGD
A12	RSVD	B12	GND
A13	GND	B13	REFCLK+
A14	HSOp(0)	B14	REFCLK-
A15	HSON(0)	B15	GND
A16	GND	B16	HSIp(0)
A17	PRSNT#2	B17	HSIn(0)
A18	GND	B18	GND

Table 3-17: PCIe x1 Slot Pinouts

## 3.2.6 RS-232 Serial Port Connector


**CN Label:** COM3, COM4, COM5, COM6

**CN Type:** 10-pin header, p=2.00 mm

**CN Location:** See Figure 3-19

**CN Pinouts:** See Table 3-18

The serial connectors provide RS-232 connections.

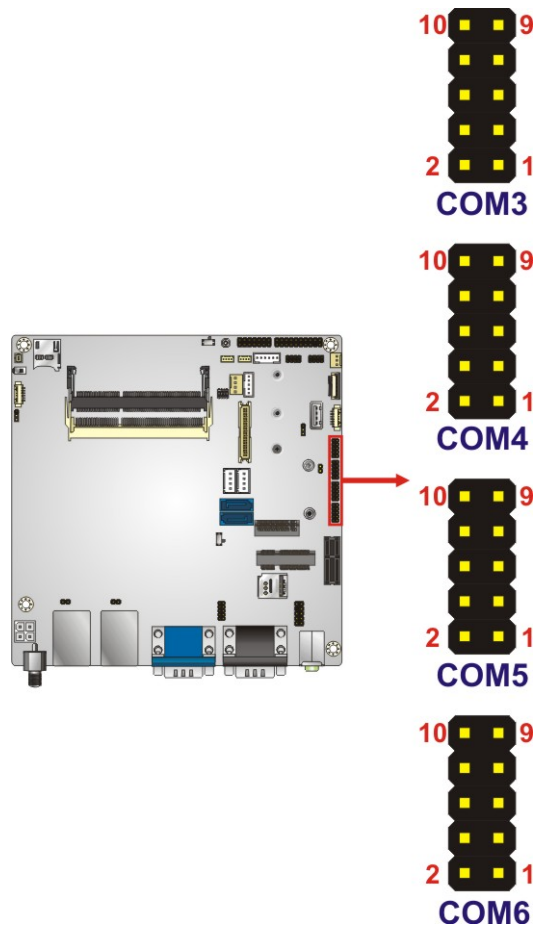

**Figure 3-19: RS-232 Serial Port Connector Locations**

Pin	Description	Pin	Description
1	DCD	2	DSR
3	RX	4	RTS
5	TX	6	CTS
7	DTR	8	RI
9	GND	10	GND

**Table 3-18: RS-232 Serial Port Connector Pinouts**

## KINO-DAL SBC

### 3.2.7 SATA 6Gb/s Drive Connectors



#### CAUTION:

If an M.2 module is installed in the M.2 slot (M2\_1), the SATA port 2 (SATA2) will be disabled. Choose either the SATA2 connector or the M.2 module for storage.

---

<b>CN Label:</b>	<b>SATA1, SATA2</b>
<b>CN Type:</b>	7-pin SATA connector
<b>CN Location:</b>	See <b>Figure 3-20</b>

The SATA 6Gb/s drive connector is connected to a SATA 6Gb/s drive. The SATA 6Gb/s drive transfers data at speeds as high as 6Gb/s.

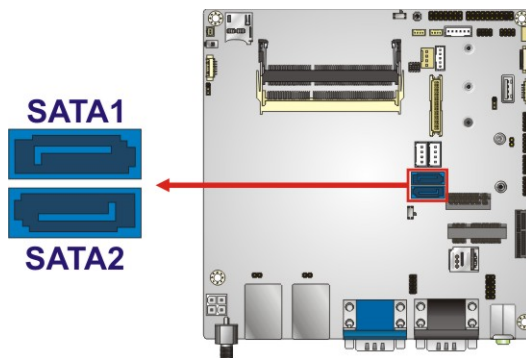


Figure 3-20: SATA 6Gb/s Drive Connectors Locations

### 3.2.8 SATA Power Connectors


**CN Label:** SATA\_PWR1, SATA\_PWR2

**CN Type:** 4-pin wafer, p=2.54 mm

**CN Location:** See Figure 3-21

**CN Pinouts:** See Table 3-19

The SATA power connector provides +5 V and +12 V power output to the SATA connector.

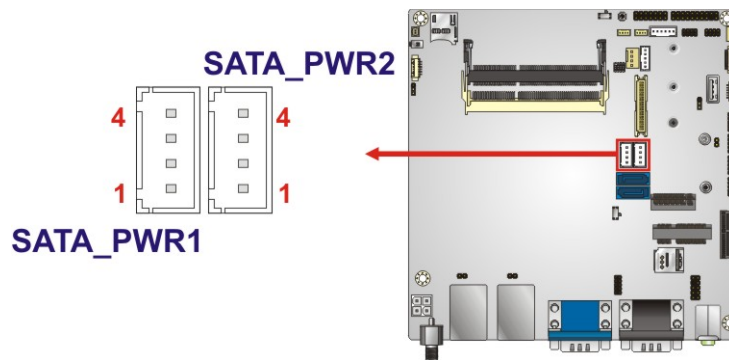

**Figure 3-21: SATA Power Connector Locations**

Pin	Description
1	+12V
2	GND
3	GND
4	+5V


**Table 3-19: SATA Power Connector Pinouts**

## KINO-DAL SBC

### 3.2.9 SIM Card Slot

- CN Label:** SIM1
- CN Type:** micro-SIM card slot
- CN Location:** See **Figure 3-22**

The SIM card slot accepts a SIM card for 3G network communication.

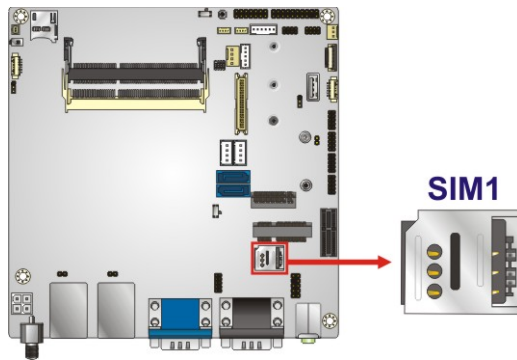


**Figure 3-22: SIM Card Slot Location**



### 3.2.1 SMBus Connector

- CN Label:** J\_SMB1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-23**
- CN Pinouts:** See **Table 3-20**

The SMBus (System Management Bus) connector provides low-speed system management communications.

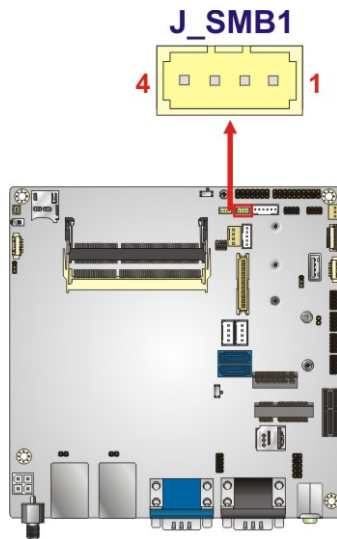

**Figure 3-23: SMBus Connector Location**

Pin	Description
1	GND
2	SMB_DATA
3	SMB_CLK
4	+5V


**Table 3-20: SMBus Connector Pinouts**

## KINO-DAL SBC

### 3.2.2 SPI Flash Connector, BIOS

- CN Label:** J\_SPI1
- CN Type:** 6-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-24**
- CN Pinouts:** See **Table 3-21**

The 6-pin SPI Flash connector is used to flash the BIOS.

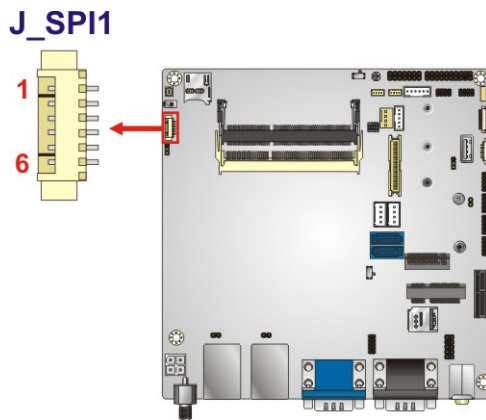

**Figure 3-24: BIOS SPI Flash Connector Location**


Pin	Description
1	+3.3V
2	CS#
3	MISO
4	Clock
5	MOSI
6	GND

**Table 3-21: BIOS SPI Flash Connector Pinouts**

### 3.2.1 SPI Flash Connector, EC

- CN Label:** J\_EC1
- CN Type:** 6-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-25**
- CN Pinouts:** See **Table 3-22**

The 6-pin SPI Flash connector is used to flash the EC.

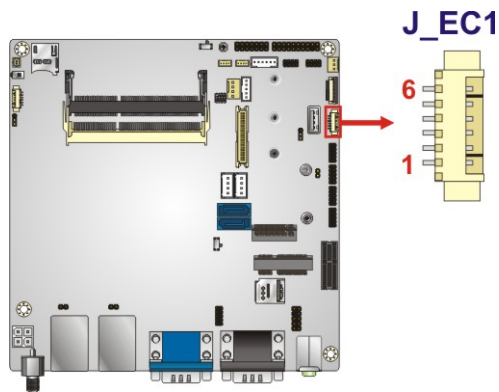

**Figure 3-25: EC SPI Flash Connector Location**

Pin	Description
1	+3.3V
2	CS#
3	MISO
4	Clock
5	MOSI
6	GND


**Table 3-22: EC SPI Flash Connector Pinouts**

## KINO-DAL SBC

### 3.2.2 TPM Connector

- CN Label:** TPM1
- CN Type:** 20-pin header, p=2.54 mm
- CN Location:** See **Figure 3-26**
- CN Pinouts:** See **Table 3-23**

The Trusted Platform Module (TPM) connector secures the system on bootup.

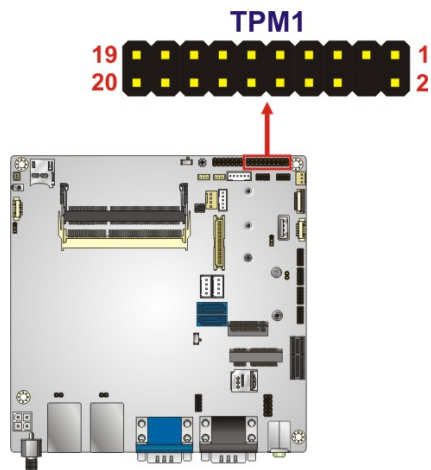

**Figure 3-26: TPM Connector Location**


Pin	Description	Pin	Description
1	Clock	2	GND
3	LFRAME#	4	Serial IRQ
5	LPC Reset	6	LAD2
7	LAD3	8	LAD1
9	+3.3V	10	LPC Reset
11	LAD0	12	GND
13	SCL	14	SDA
15	SB3V	16	SERIRQ
17	GND	18	CLKRUN#
19	LPCPD#	20	LDRQ#

**Table 3-23: TPM Connector Pinouts**

### 3.2.3 USB Connectors

- CN Label:** USB1, USB2
- CN Type:** 8-pin header, p=2.00 mm
- CN Location:** See **Figure 3-27**
- CN Pinouts:** See **Table 3-24**

The USB connectors provide four USB 2.0 ports by dual-port USB cable.

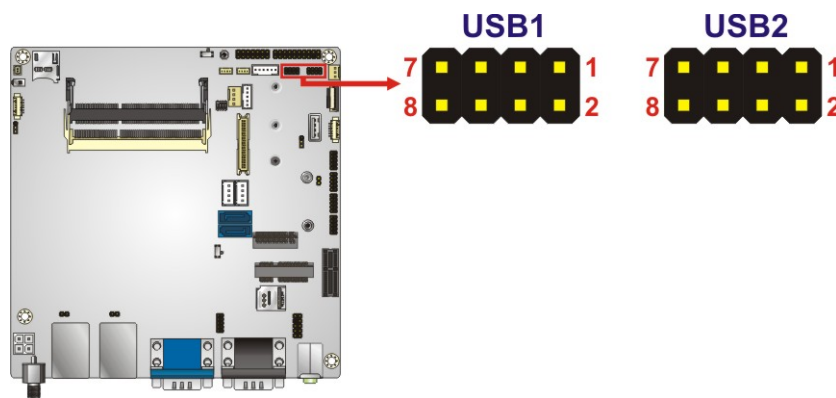

**Figure 3-27: USB Connector Locations**

Pin	Description	Pin	Description
1	+5V	2	GND
3	DATA-	4	DATA+
5	DATA+	6	DATA-
7	GND	8	+5V

**Table 3-24: USB Connector Pinouts**



## KINO-DAL SBC

### 3.3 External Peripheral Interface Connector Panel

Figure 3-28 shows the KINO-DAL external peripheral interface connector (EPIC) panel.

The EPIC panel consists of the following:

- 2 x Audio jack (AUDIO1)
- 1 x DC-in power jack (PWR1)
- 2 x GbE connector (LAN1, LAN2)
- 1 x HDMI connector (HDMI1)
- 2 x RS-232/422/485 serial port (COM1, COM2)
- 4 x USB 3.0 connector (USB01, USB23)
- 1 x VGA connector (VGA1)

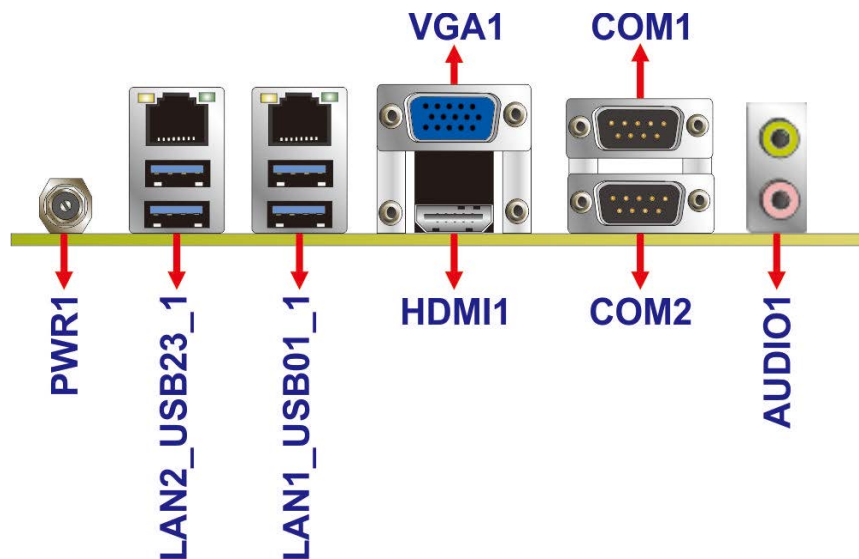


Figure 3-28: External Peripheral Interface Connector

### 3.3.1 Audio Jacks

<b>CN Label:</b>	<b>AUDIO1</b>
<b>CN Type:</b>	Audio jack
<b>CN Location:</b>	See <b>Figure 3-28</b>

The audio jacks connect to external audio devices.

- **Line Out port (Lime):** Connects to a headphone or a speaker. With multi-channel configurations, this port can also connect to front speakers.
- **Microphone (Pink):** Connects a microphone.



Figure 3-29: Audio Connector

## KINO-DAL SBC


### 3.3.1 HDMI Connector

- CN Label:** HDMI1
- CN Type:** 23-pin HDMI port
- CN Location:** See **Figure 3-28**
- CN Pinouts:** See **Figure 3-30** and **Table 3-25**

The HDMI connector can connect to an HDMI device.

Pin	Description	Pin	Description
1	HDMI_DATA2	2	GND
3	HDMI_DATA2#	4	HDMI_DATA1
5	GND	6	HDMI_DATA1#
7	HDMI_DATA0	8	GND
9	HDMI_DATA0#	10	HDMI_CLK
11	GND	12	HDMI_CLK#
13	N/C	14	N/C
15	HDMI_SCL	16	HDMI_SDA
17	GND	18	+5V
19	HDMI_HPD	20	HDMI_GND
21	HDMI_GND	22	HDMI_GND
23	HDMI_GND		

**Table 3-25: HDMI Connector Pinouts**

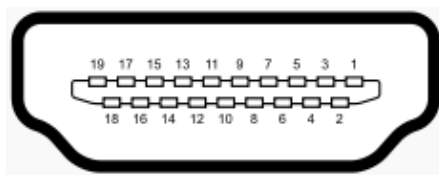

**Figure 3-30: HDMI Connector**


### 3.3.2 LAN & USB 3.0 Combo Connectors

**CN Label:** LAN1\_USB01\_1, LAN2\_USB23\_1

**CN Type:** RJ-45, USB 3.0

**CN Location:** See **Figure 3-28**

The LAN connector connects to a local network.

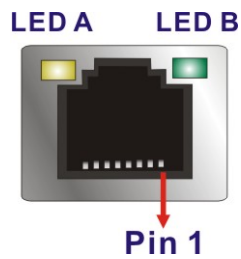

**Figure 3-31: LAN Connector**

Pin	Description	Pin	Description
1	MDIA0+	5	MDIA2-
2	MDIA0-	6	MDIA1-
3	MDIA1+	7	MDIA3+
4	MDIA2+	8	MDIA3-

**Table 3-26: LAN Pinouts**

LED	Description	LED	Description
A	on: linked blinking: data is being sent/received	B	off: 10 Mb/s green: 100 Mb/s orange: 1000 Mb/s


**Table 3-27: Connector LEDs**

## KINO-DAL SBC

The USB connector can be connected to a USB 2.0 or USB 3.0 device. The pinouts of USB 3.0 connectors are shown below.

Pin	Description	Pin	Description
1	USB_VCC	10	USB_VCC
2	USB2_D0-	11	USB2_D0-
3	USB2_D0+	12	USB2P0_D0+
4	GND	13	GND
5	USB3P0_RXDN1	14	USB3P0_RXDN2
6	USB3P0_RXDP1	15	USB3P0_RXDP2
7	GND	16	GND
8	USB3P0_TXDN1	17	USB3P0_TXDN2
9	USB3P0_TXDP1	18	USB3P0_TXDP2

**Table 3-28: USB 3.0 Port Pinouts**

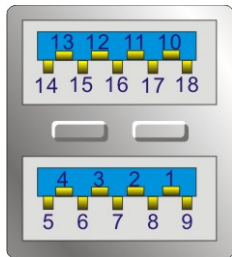

**Figure 3-32: USB 3.0 Port Pinout Locations**



### 3.3.3 Power Connector

<b>CN Label:</b>	<b>PWR1</b>
<b>CN Type:</b>	Power jack
<b>CN Location:</b>	See <b>Figure 3-28</b>

The power connector supports a power adapter. The input voltage varies by models:

- 12 V DC: KINO-DAL-N2  
KINO-DAL-N1
- 9 V ~ 30 V DC: KINO-DAL-E3W2  
KINO-DAL-E2W2  
KINO-DAL-E1W2



**Figure 3-33: Power Jack**

## KINO-DAL SBC


### 3.3.1 RS-232/422/485 Serial Port Connectors (COM1, COM2)

- CN Label:** COM1, COM2
- CN Type:** DB-9 connector
- CN Location:** See **Figure 3-28**
- CN Pinouts:** See **Figure 3-34** and **Table 3-29**

These two connectors provide RS-232, RS-422 or RS-485 communications. The default mode is set to RS-232 by BIOS configuration. To configure the connectors as RS-422 or RS-485, please refer to **Section 5.3.2.1.1** and **Section 5.3.2.1.2**.

Pin	RS-232	RS-422	RS-485
1	DCD	TXD422-	TXD485-
2	RX	TXD422+	TXD485+
3	TX	RXD422+	
4	DTR	RXD422-	
5	GND	GND	GND
6	DSR		
7	RTS		
8	CTS		
9	RI		

**Table 3-29: RS-232/422/485 Serial Port Pinouts**

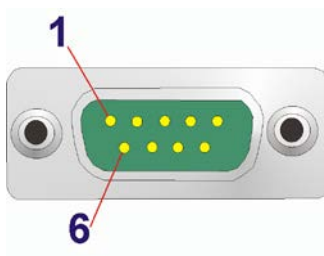


**Figure 3-34: Serial Port Pinouts**

### 3.3.1 VGA Connector

- CN Label:** VGA1
- CN Type:** 15-pin Female
- CN Location:** See **Figure 3-28**
- CN Pinouts:** See **Figure 3-35** and **Table 3-30**

The VGA connector connects to a monitor that accepts a standard VGA input.

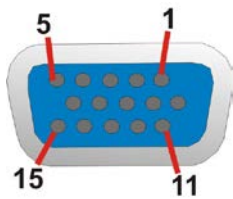

**Figure 3-35: VGA Connector**

Pin	Description	Pin	Description
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	GND
7	GND	8	GND
9	VCC / NC	10	GND
11	NC	12	DDC DAT
13	HSYNC	14	VSYNC
15	DDCCLK		

**Table 3-30: VGA Connector Pinouts**

Chapter

4

# Installation

---

## 4.1 Anti-static Precautions

---



### WARNING:

Failure to take ESD precautions during the installation of the KINO-DAL may result in permanent damage to the KINO-DAL and severe injury to the user.

---

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the KINO-DAL. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the KINO-DAL or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding** Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the KINO-DAL, place it on an anti-static pad. This reduces the possibility of ESD damaging the KINO-DAL.
- **Only handle the edges of the PCB:** When handling the PCB, hold the PCB by the edges.

## 4.2 Installation Considerations

---



### NOTE:

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.

---



## KINO-DAL SBC

---



### **WARNING:**

The installation instructions described in this manual should be carefully followed in order to prevent damage to the KINO-DAL, KINO-DAL components and injury to the user.

---

Before and during the installation please **DO** the following:


- Read the user manual:
  - The user manual provides a complete description of the KINO-DAL installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
  - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the KINO-DAL on an antistatic pad:
  - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- Turn all power to the KINO-DAL off:
  - When working with the KINO-DAL, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the KINO-DAL **DO NOT:**

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

### 4.3 SO-DIMM Installation

To install an SO-DIMM, please follow the steps below and refer to **Figure 4-1**.

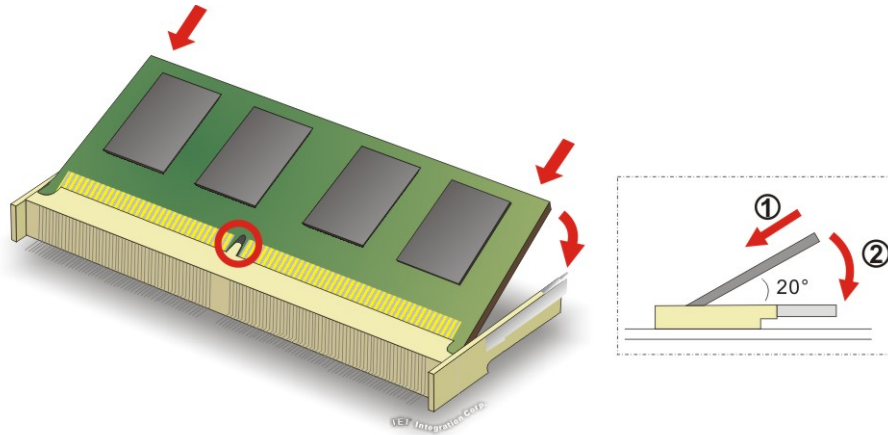

**Figure 4-1: SO-DIMM Installation**

- Step 1:** Locate the SO-DIMM socket. Place the board on an anti-static mat.
- Step 2:** Align the SO-DIMM with the socket. Align the notch on the memory with the notch on the memory socket.
- Step 3:** Insert the SO-DIMM. Push the memory in at a 20° angle. (See **Figure 4-1**)
- Step 4:** Seat the SO-DIMM. Gently push downwards and the arms clip into place. (See **Figure 4-1**)



**CAUTION:**

For dual channel configuration, always install two identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

---

## KINO-DAL SBC

## 4.4 M.2 Module Installation

**CAUTION:**


If an M.2 module is installed in the M.2 slot (M2\_1), the SATA port 2 (SATA2) will be disabled. Choose either the SATA2 connector or the M.2 module for storage.

To install an M.2 module, please follow the steps below.

**Step 1:** Locate the M.2 module slot. See **Chapter 3**.


**Step 2:** Remove the on-board retention screw and the plastic ring as shown in

**Figure 4-2.**

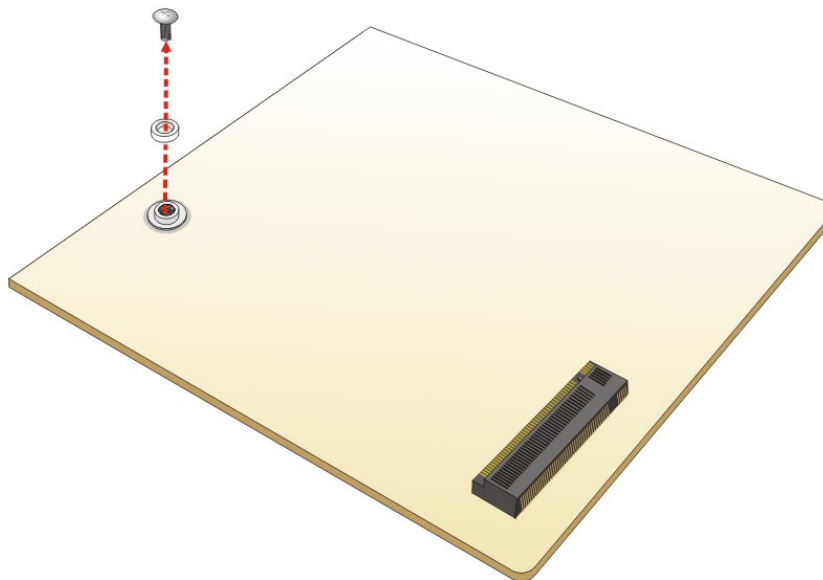


**Figure 4-2: Removing the M.2 Module Retention Screw and Plastic Ring**

**Step 3:** Line up the notch on the card with the notch on the slot. Slide the PCIe Mini card into the socket at an angle of about 20° (**Figure 4-3**).

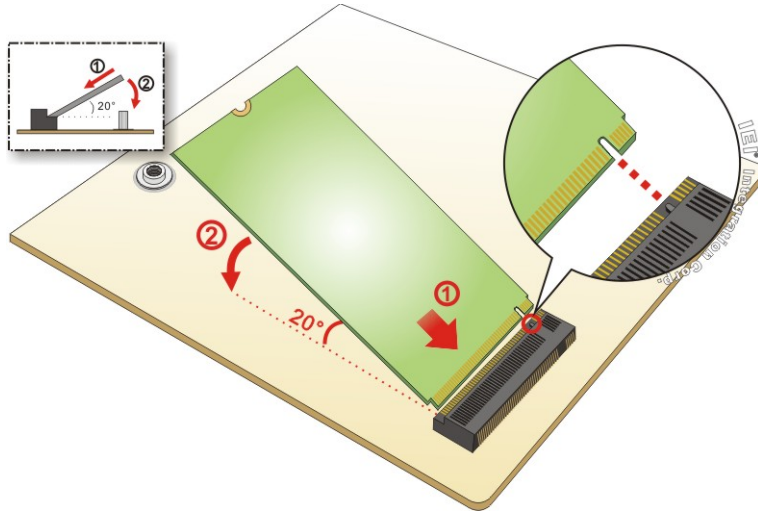

**Figure 4-3: Inserting the M.2 Module into the Slot at an Angle**

**Step 4:** Put the plastic ring onto the screw holes. Push the M.2 module down and secure it with the previously removed retention screw (**Figure 4-4**).

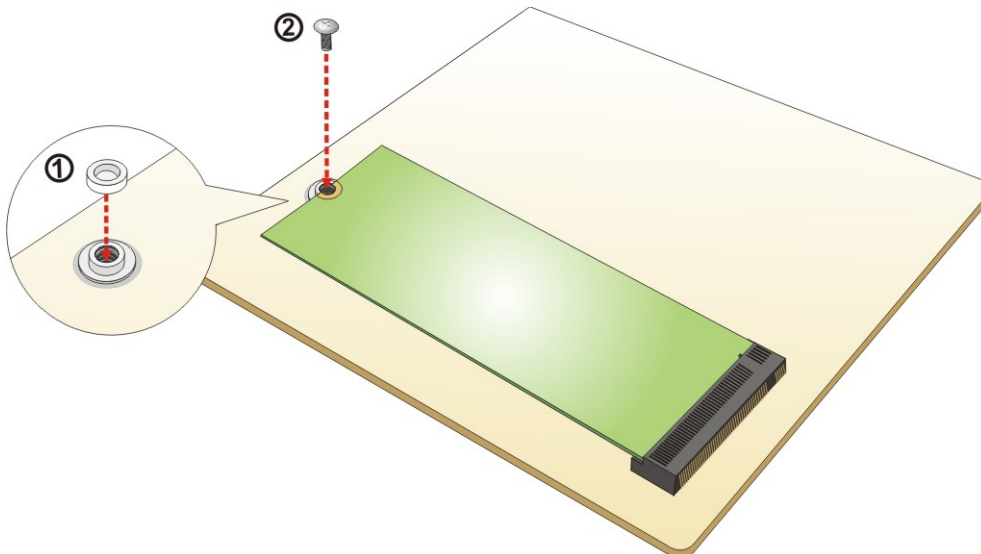

**Figure 4-4: Securing the M.2 Module**

## KINO-DAL SBC

### 4.5 PCIe Mini Card Installation


The PCIe Mini card slot on the KINO-DAL allows installation of either a full-size or half-size PCIe Mini card.

#### 4.5.1 Full-size PCIe Mini Card Installation

To install a full-size PCIe Mini card, please follow the steps below.

**Step 1:** Locate the PCIe Mini card slot. See **Chapter 3**.


**Step 2:** Remove the retention screw as shown in **Figure 4-5**.

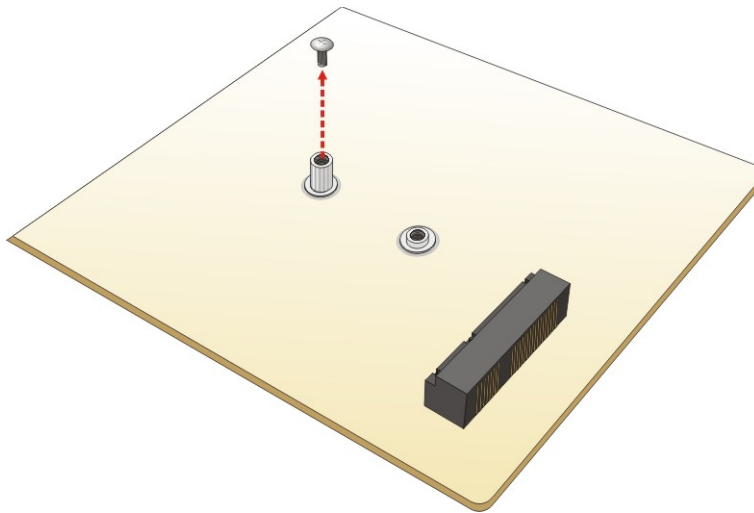

**Figure 4-5: Removing the Retention Screw**


**Step 3:** Line up the notch on the card with the notch on the slot. Slide the PCIe Mini card into the socket at an angle of about 20° (**Figure 4-6**).



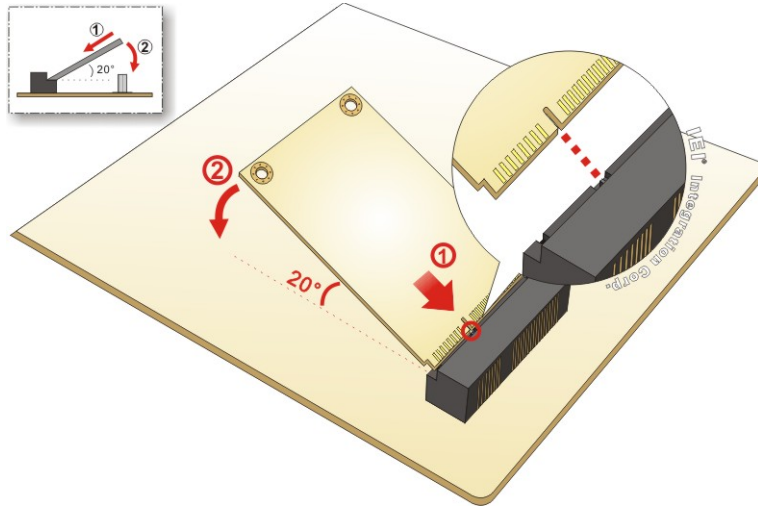

**Figure 4-6: Inserting the Full-size PCIe Mini Card into the Slot at an Angle**

**Step 4:** Secure the full-size PCIe Mini card with the retention screw previously removed (Figure 4-7).

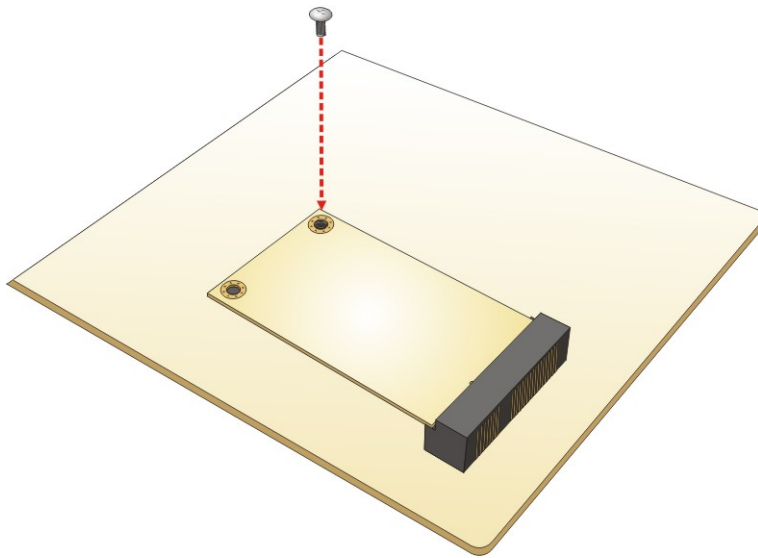

**Figure 4-7: Securing the Full-size PCIe Mini Card**


## KINO-DAL SBC

### 4.5.2 Half-size PCIe Mini Card Installation

To install a half-size PCIe Mini card, please follow the steps below.


**Step 1:** Locate the PCIe Mini card slot. See **Chapter 3**.

**Step 2:** Remove the retention screw first, then unscrew and remove the standoff secured on the motherboard. See **Figure 4-8**.

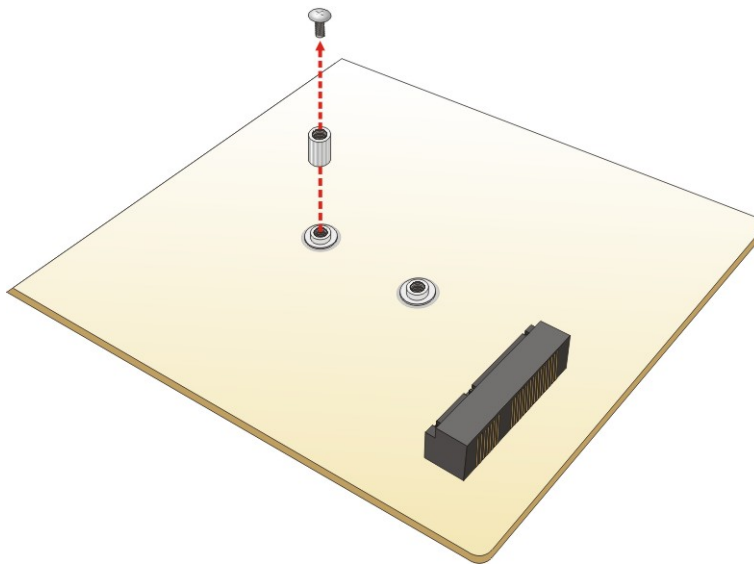


**Figure 4-8: Removing Retention Screw and Standoff**

**Step 3:** Install the previously removed standoff to the screw hole for the half-size PCIe Mini card (**Figure 4-9**).

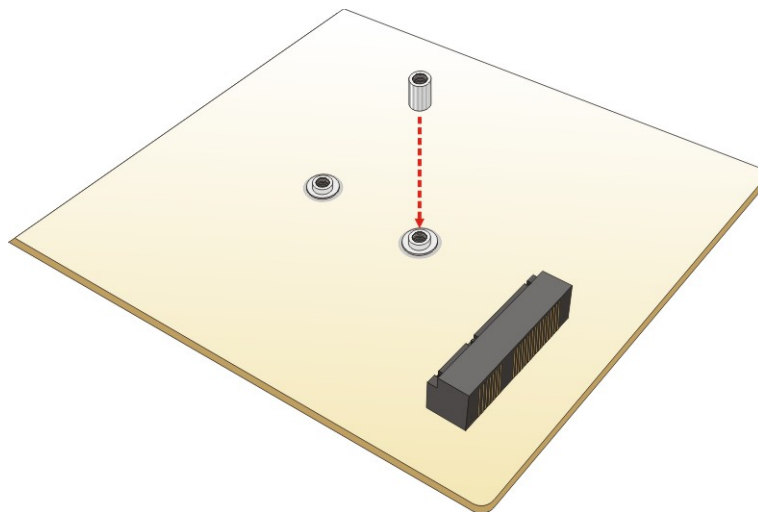

**Figure 4-9: Installing the Standoff**

**Step 4:** Line up the notch on the card with the notch on the slot. Slide the PCIe Mini card into the slot at an angle of about 20° (Figure 4-10).

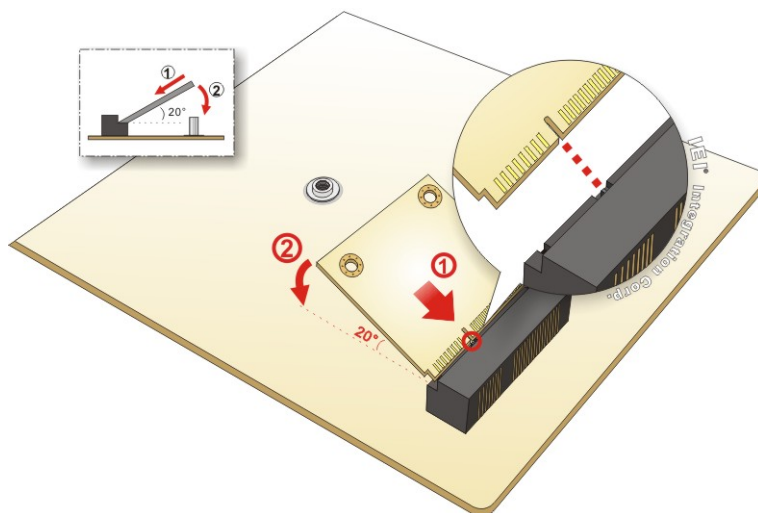

**Figure 4-10: Inserting the Half-size PCIe Mini Card into the Slot at an Angle**

**Step 5:** Secure the half-size PCIe Mini card with the retention screw previously removed (Figure 4-11).

## KINO-DAL SBC

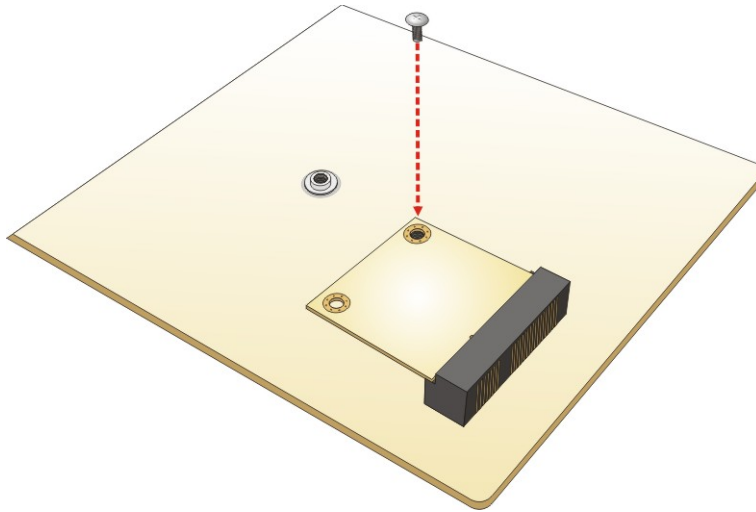


Figure 4-11: Securing the Half-size PCIe Mini Card

## 4.6 SIM Card Installation

To install a SIM card, please follow the steps below.


**Step 1:** Locate the SIM card slot. See **Section 3.2.9**.

**Step 2:** Unlock the SIM card slot cover by sliding the cover in the direction as shown by the arrow in **Figure 4-12**.



Figure 4-12: Unlock SIM Card Slot Cover

**Step 3:** Open the slot cover and place a SIM card onto the slot. The cut mark on the corner should be facing away from the slot as shown in **Figure 4-13**.

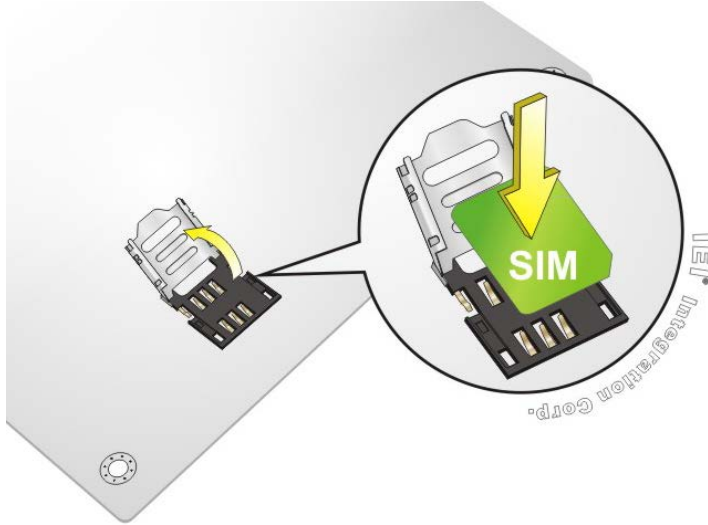

**Figure 4-13: SIM Card Installation**

**Step 4:** Close the slot cover and lock it by sliding it in the direction as shown by the arrow in **Figure 4-14**.



**Figure 4-14: Lock SIM Card Slot Cover**



## KINO-DAL SBC

### 4.7 System Configuration

The system configuration is controlled by buttons, jumpers and switches. The system configuration should be performed before installation.


#### 4.7.1 AT/ATX Mode Select Switch

The AT/ATX mode select switch (SW\_A/T1) specifies the systems power mode as AT or ATX. AT/ATX mode select switch settings are shown in **Table 4-1**.

Setting	Description
Short A-B	ATX Mode (Default)
Short B-C	AT Mode

**Table 4-1: AT/ATX Mode Select Switch Settings**

The location of the AT/ATX mode select switch is shown in **Figure 4-15** below.

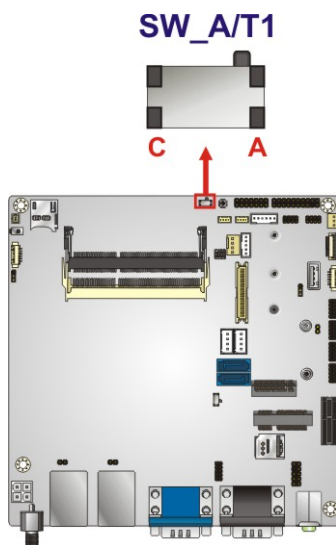


**Figure 4-15: AT/ATX Mode Select Switch Location**

### 4.7.2 Clear CMOS Button

If the KINO-DAL fails to boot due to improper BIOS settings, use the button to clear the CMOS data and reset the system BIOS information.

The location of the clear CMOS button (J\_CMOS1) is shown in **Figure 4-16**

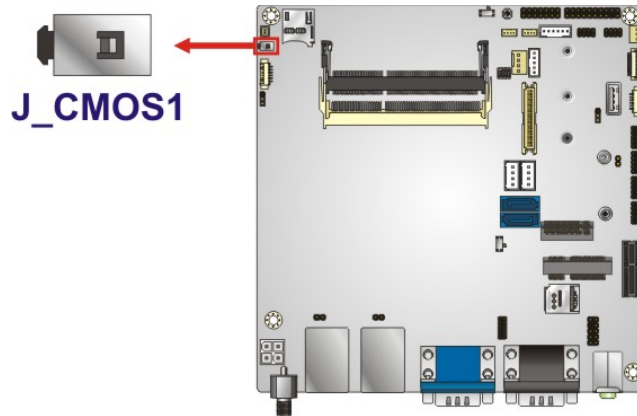

**Figure 4-16: Clear CMOS Button Location**


## KINO-DAL SBC

## 4.7.3 Flash Descriptor Security Override Jumper

The Flash Descriptor Security Override jumper (TXE\_OV1, p=2.00 mm) allows users to enable or disable the ME firmware update. Refer to **Figure 4-17** and **Table 4-2** for the jumper location and settings.

Setting	Description
Short 1-2	Disabled (default)
Short 2-3	Enabled

**Table 4-2: Flash Descriptor Security Override Jumper Settings**

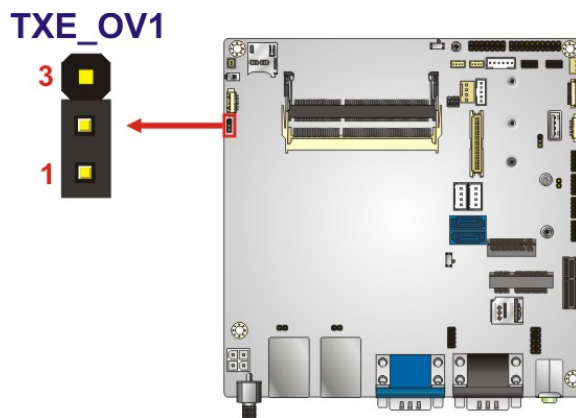

**Figure 4-17: Flash Descriptor Security Override Jumper Location**

To update the ME firmware, please follow the steps below.

- Step 1:** Before turning on the system power, short pin 2~3 of the Flash Descriptor Security Override jumper.
- Step 2:** Update the BIOS and ME firmware, and then turn off the system power.
- Step 3:** Remove the metal clip on the Flash Descriptor Security Override jumper to its default setting (short 1~2).
- Step 4:** Restart the system. The system will reboot 2 ~ 3 times to complete the ME firmware update.

### 4.7.1 LVDS Voltage Select Jumper




**WARNING:**

Permanent damage to the screen and KINO-DAL may occur if the wrong voltage is selected with this jumper. Please refer to the user guide that came with the monitor to select the correct voltage.

The LVDS voltage selection jumper (J\_PW1, p=2.00 mm) allows setting the voltage provided to the monitor connected to the LVDS connector. Refer to **Figure 4-18** and **Table 4-3** for the jumper location and settings.

Setting	Description
Short 1-2	+3.3 V (Default)
Short 2-3	+5 V

**Table 4-3: LVDS Voltage Select Jumper Settings**

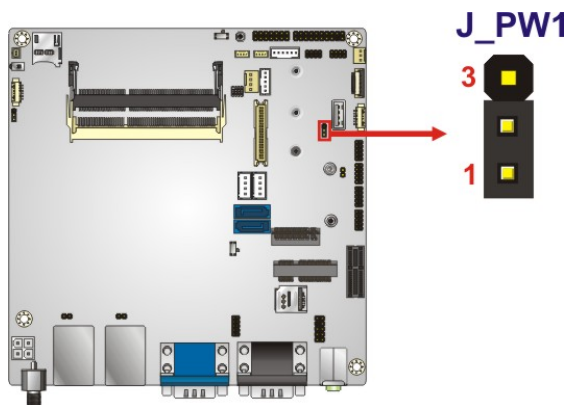

**Figure 4-18: LVDS Voltage Select Jumper Location**

## KINO-DAL SBC


### 4.7.2 LVDS Panel Resolution Select Switch

The SW1 selects the resolution of the LCD panel connected to the LVDS connector. Refer to **Figure 4-19** and **Table 4-4** for the jumper location and settings.

\* ON=0, OFF=1

SW1 (4-3-2-1)	Description
0000	800x600 18-bit (default)
0001	1024x768 18-bit
0010	1024x768 24-bit
0011	1280x768 18-bit
0100	1280x800 18-bit
0101	1280x960 18-bit
0110	1280x1024 48-bit
0111	1366x768 18-bit
1000	1366x768 24-bit
1001	1440x960 48-bit
1010	1400x1050 48-bit
1011	1600x900 24-bit
1100	1680x1050 48-bit
1101	1600x1200 48-bit
1110	1920x1080 48-bit
1111	1920x1200 48-bit

**Table 4-4: LVDS Panel Resolution Selection**

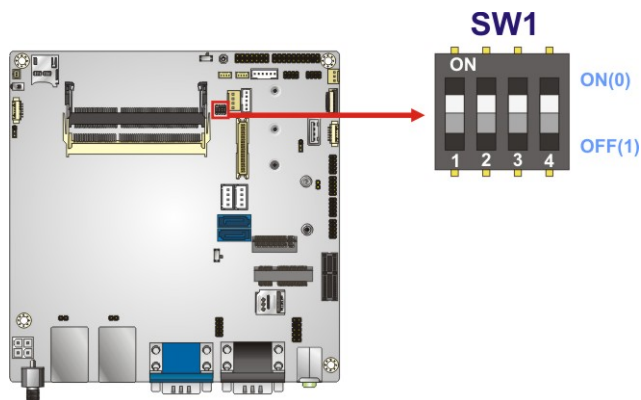

**Figure 4-19: LVDS Panel Resolution Select Switch Location**




### 4.7.3 M.2 and SATA2 Select Switch

Use the M.2 and SATA2 select switch (J\_SATA1) to set the priority of M2\_1 and SATA2 connectors since the M.2 (M2\_1) slot is co-lay with the SATA2 connector. The M.2 and SATA2 select switch settings are shown in **Table 4-5**.

Setting	Description
Short A-B	Automatically detect M.2 or SATA2 (Default) (SATA2 will be disabled if an M.2 module is installed in the M2_1 slot; vice versa)
Short B-C	M2_1 is enabled and SATA2 is disabled.

**Table 4-5: M.2 and SATA2 Select Switch Settings**

The location of the M.2 and SATA2 select switch is shown in **Figure 4-20** below.

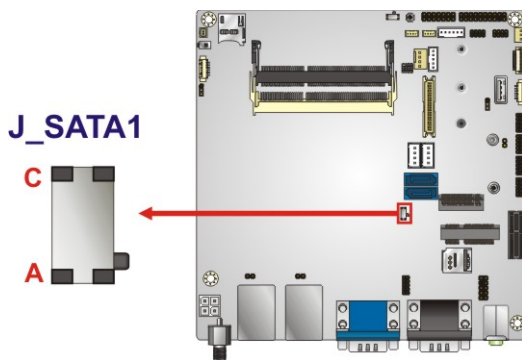

**Figure 4-20: M.2 and SATA2 Select Switch Location**

## KINO-DAL SBC

### 4.8 Chassis Installation

#### 4.8.1 Airflow



#### **WARNING:**

Airflow is critical for keeping components within recommended operating temperatures. The chassis should have fans and vents as necessary to keep things cool.

---

The KINO-DAL must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply unit, the cooling fan of a power supply can also help generate airflow through the board surface.

#### 4.8.2 Motherboard Installation

To install the KINO-DAL motherboard into the chassis please refer to the reference material that came with the chassis.

### 4.9 SATA Drive Connection

The KINO-DAL is shipped with a SATA drive cable. To connect the SATA drive to the connector, please follow the steps below.

**Step 1:** **Locate the SATA connector and the SATA power connector.** The locations of the connectors are shown in **Chapter 3**.

**Step 2:** **Insert the cable connector.** Insert the cable connector into the on-board SATA drive connector and the SATA power connector. See **Figure 4-21**.

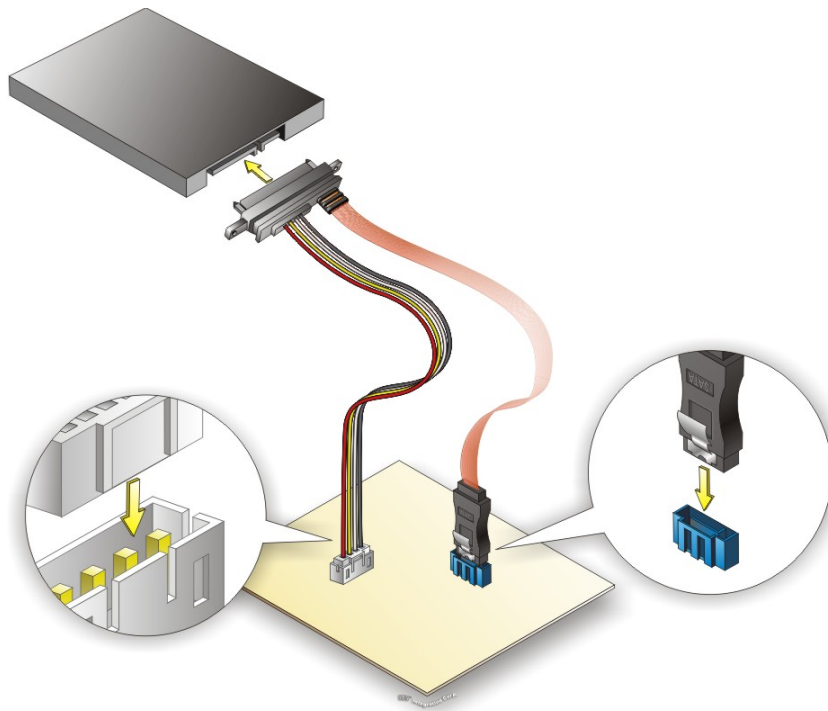


Figure 4-21: SATA Drive Cable Connection



**NOTE:**

The connector locations in the diagram above are just for reference. For the exact locations, please see **Section 3.2.7** and **3.2.8**.

**Step 3:** **Connect the cable to the SATA disk.** Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 4-21**.

**Step 4:** To remove the SATA cable from the SATA connector, press the clip on the connector at the end of the cable.

Chapter

**5**

# BIOS

---

## 5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



### NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

---

### 5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** or **F2** key as soon as the system is turned on or
2. Press the **DELETE** or **F2** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** or **F2** key is pressed, restart the computer and try again.

### 5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in Table 5-1.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes



## KINO-DAL SBC

Key	Function
-	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Load previous values.
F3 key	Load optimized defaults
F4 key	Save changes and Exit BIOS
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu

Table 5-1: BIOS Navigation Keys

### 5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

### 5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in **Section 4.7.2**.

### 5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

## 5.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit

BIOS Information
BIOS Vendor                American Megatrends
Core Version                5.12
Compliancy                 UEFI 2.5; PI 1.4
Project Version            B404AT12.BIN
Build Date and Time        11/17/2017 13:32:39

iWDD Vendor                iEi
iWDD Version               B404ET13.bin

Platform firmware Information
BXT SOC                    B1
MRC Version                0.56
PUNIT FW                   28
PMC FW                     03.28
TXE FW                     3.0.12.1138
ISH FW                     4.1.0.3364
GOP                        0.0.0036

Memory Information
Total Memory                2048 MB
Memory Speed                1600 MHz

System Date                 [Fri 01/01/2010]
System Time                 [00:18:35]

Set the Date. Use Tab to
switch between Data
elements.

-----
<->: Select Screen
^ v: Select Item
Enter>Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit

Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
  
```

### BIOS Menu 1: Main

➔ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

## KINO-DAL SBC

### → System Time [xx:xx:xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

## 5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



### WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
> ACPI Settings
> F81866 Super IO Configuration
> iWDD H/W Monitor
> USB Configuration
> CPU Configuration
> RTC Wake Settings
> Power Saving Configuration
> Serial Port Console Redirection
> iEi Feature

System ACPI Parameters.

-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
F1  General Help
F2  Previous Values
F3  Optimized Defaults
F4  Save
ESC Exit


Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.

```

### BIOS Menu 2: Advanced

### 5.3.1 ACPI Settings

The **ACPI Settings** menu (**BIOS Menu 3**) configures the Advanced Configuration and Power Interface (ACPI) options.

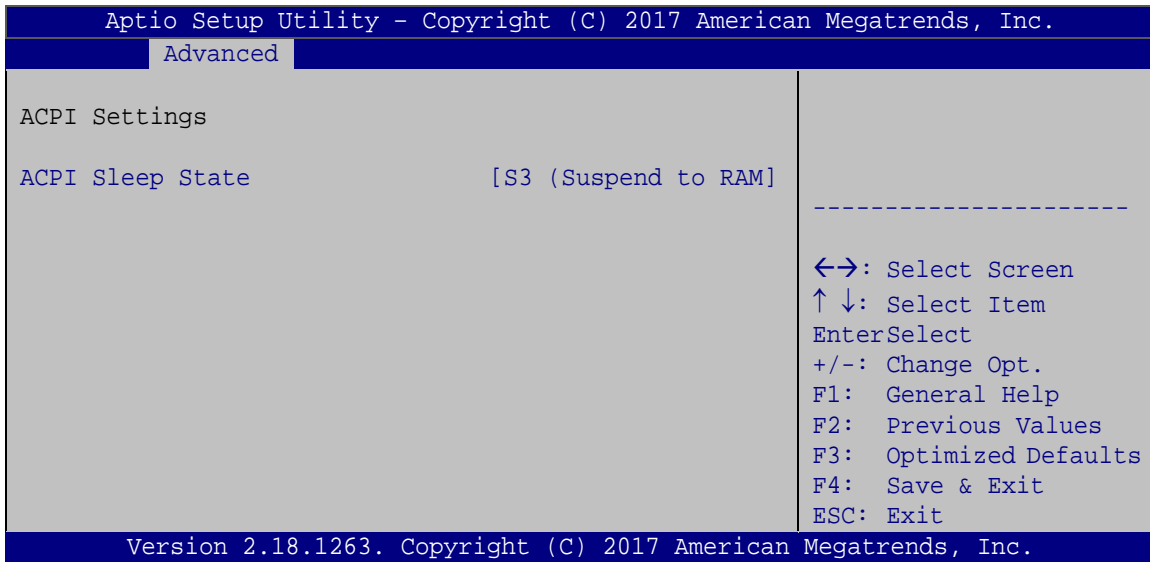

#### BIOS Menu 3: ACPI Settings

##### → **ACPI Sleep State [S3 (Suspend to RAM)]**

Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

- **S3 (Suspend to DEFAULT RAM)** The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.

## KINO-DAL SBC

### 5.3.2 F81866 Super IO Configuration

Use the **F81866 Super IO Configuration** menu (**BIOS Menu 4**) to set or change the configurations for the serial ports.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
  Advanced
F81866 Super IO Configuration
Super IO Chip                F81866
> Serial Port 1 Configuration
> Serial Port 2 Configuration
> Serial Port 3 Configuration
> Serial Port 4 Configuration
> Serial Port 5 Configuration
> Serial Port 6 Configuration

Set Parameters of Serial
Port 1 (COMA)
-----
<=>: Select Screen
↑ ↓: Select Item
EnterSelect
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit

Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
  
```

**BIOS Menu 4: F81866 Super IO Configuration**

#### 5.3.2.1 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 5**) to configure the serial port n.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
  Advanced
Serial Port 1 Configuration
Serial Port                [Enabled]
Device Settings            IO=3F8h; IRQ=4

Change Settings            [IO=3F8h; IRQ=4;]
Transfer Mode              [RS232]

Enable or Disable Serial
Port (COM)
-----
<=>: Select Screen
↑ ↓: Select Item
EnterSelect
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit

Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
  
```

**BIOS Menu 5: Serial Port n Configuration**



### 5.3.2.1.1 Serial Port 1 Configuration

→ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled      DEFAULT**      Enable the serial port

→ **Change Settings [IO=3F8h; IRQ=4]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=3F8h; IRQ=4      DEFAULT**      Serial Port I/O port address is 3F8h and the interrupt address is IRQ4
- **IO=3F8h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 3F8h and the interrupt address is IRQ4, 10, 11
- **IO=2F8h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 2F8h and the interrupt address is IRQ4, 10, 11
- **IO=3E8h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 3E8h and the interrupt address is IRQ4, 10, 11
- **IO=2E8h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 2E8h and the interrupt address is IRQ4, 10, 11

→ **Transfer Mode [RS232]**

Use the **Transfer Mode** option to select the Serial Port 1 signaling mode.

- **RS422**                              Serial Port 6 signaling mode is RS-422
- **RS232      DEFAULT**              Serial Port 6 signaling mode is RS-232
- **RS485**                              Serial Port 6 signaling mode is RS-485

## KINO-DAL SBC

## 5.3.2.1.2 Serial Port 2 Configuration

## → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port

## → Change Settings [IO=2F8h; IRQ=11]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=2F8h; IRQ=11**      **DEFAULT**      Serial Port I/O port address is 2F8h and the interrupt address is IRQ11
- **IO=3F8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 3F8h and the interrupt address is IRQ4, 10, 11
- **IO=2F8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 2F8h and the interrupt address is IRQ4, 10, 11
- **IO=3E8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 3E8h and the interrupt address is IRQ4, 10, 11
- **IO=2E8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 2E8h and the interrupt address is IRQ4, 10, 11

## → Transfer Mode [RS232]

Use the **Transfer Mode** option to select the Serial Port 2 signaling mode.

- **RS422**                      Serial Port 6 signaling mode is RS-422
- **RS232**      **DEFAULT**      Serial Port 6 signaling mode is RS-232
- **RS485**                      Serial Port 6 signaling mode is RS-485

### 5.3.2.1.3 Serial Port 3 Configuration

→ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                                      Disable the serial port
- **Enabled      DEFAULT**                      Enable the serial port

→ **Change Settings [IO=3E8h; IRQ=10]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=3E8h; IRQ=10      DEFAULT**                      Serial Port I/O port address is 3E8h and the interrupt address is IRQ10
- **IO=3E8h;  
IRQ=4, 10, 11**                                      Serial Port I/O port address is 3E8h and the interrupt address is IRQ4, 10, 11
- **IO=2E8h;  
IRQ=4, 10, 11**                                      Serial Port I/O port address is 2E8h and the interrupt address is IRQ4, 10, 11
- **IO=3E0h;  
IRQ=4, 10, 11**                                      Serial Port I/O port address is 3E0h and the interrupt address is IRQ4, 10, 11
- **IO=2E0h;  
IRQ=4, 10, 11**                                      Serial Port I/O port address is 2E0h and the interrupt address is IRQ4, 10, 11

## KINO-DAL SBC

## 5.3.2.1.4 Serial Port 4 Configuration

## → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port

## → Change Settings [IO=2E8h; IRQ=10]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=2E8h; IRQ=10**      **DEFAULT**      Serial Port I/O port address is 2E8h and the interrupt address is IRQ10
- **IO=3E8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 3E8h and the interrupt address is IRQ4, 10, 11
- **IO=2E8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 2E8h and the interrupt address is IRQ4, 10, 11
- **IO=3E0h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 3E0h and the interrupt address is IRQ4, 10, 11
- **IO=2E0h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 2E0h and the interrupt address is IRQ4, 10, 11

### 5.3.2.1.5 Serial Port 5 Configuration

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**                      Disable the serial port
- ➔ **Enabled      DEFAULT**      Enable the serial port

➔ **Change Settings [IO=3E0h; IRQ=10]**

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- ➔ **IO=3E0h; IRQ=10      DEFAULT**      Serial Port I/O port address is 3E0h and the interrupt address is IRQ10
- ➔ **IO=3E8h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 3E8h and the interrupt address is IRQ4, 10, 11
- ➔ **IO=2E8h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 2E8h and the interrupt address is IRQ4, 10, 11
- ➔ **IO=3E0h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 3E0h and the interrupt address is IRQ4, 10, 11
- ➔ **IO=2E0h;  
IRQ=4, 10, 11**                      Serial Port I/O port address is 2E0h and the interrupt address is IRQ4, 10, 11



## KINO-DAL SBC

## 5.3.2.1.6 Serial Port 6 Configuration

## → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port


## → Change Settings [IO=2E0h; IRQ=10]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=2E0h; IRQ=10**      **DEFAULT**      Serial Port I/O port address is 2E0h and the interrupt address is IRQ10
- **IO=3E8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 3E8h and the interrupt address is IRQ4, 10, 11
- **IO=2E8h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 2E8h and the interrupt address is IRQ4, 10, 11
- **IO=3E0h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 3E0h and the interrupt address is IRQ4, 10, 11
- **IO=2E0h;**  
**IRQ=4, 10, 11**      Serial Port I/O port address is 2E0h and the interrupt address is IRQ4, 10, 11

### 5.3.3 iWDD H/W Monitor

The **iWDD H/W Monitor** menu (**BIOS Menu 6**) contains the fan configuration submenus and displays operating temperature, fan speeds and system voltages.

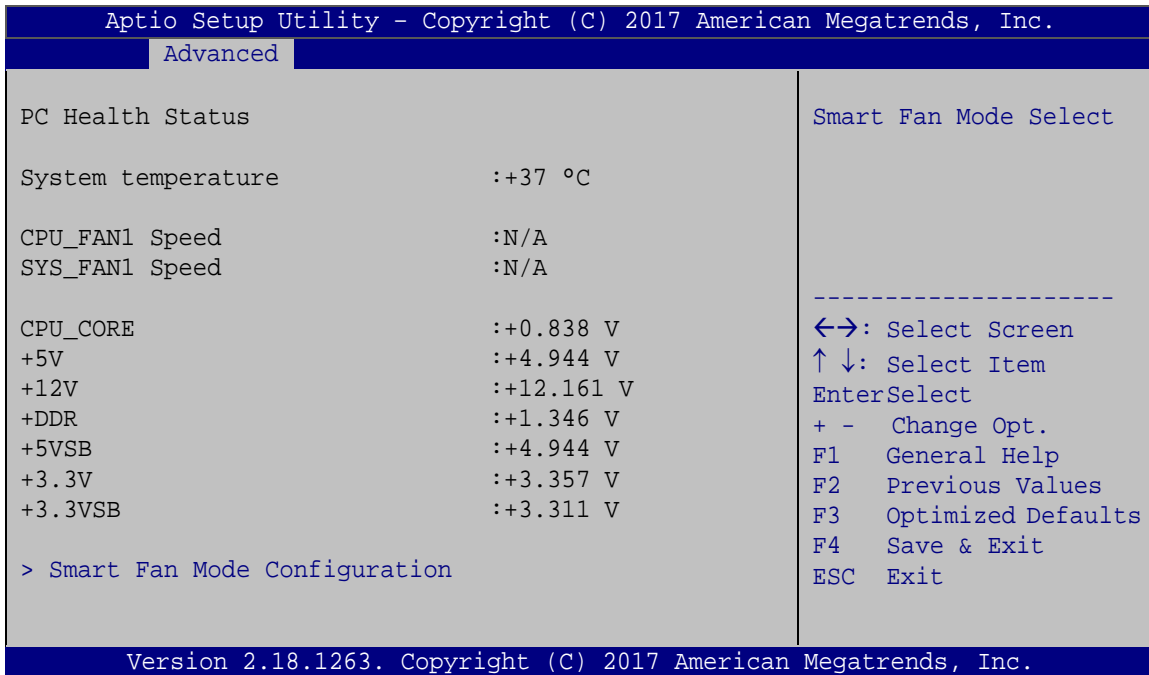

#### BIOS Menu 6: iWDD H/W Monitor

##### ➔ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
  - System temperature
- Fan Speed:
  - CPU Fan Speed
  - System Fan Speed
- Voltages
  - CPU\_CORE
  - +5V
  - +12V
  - +DDR

## KINO-DAL SBC

- +5VSB
- +3.3V
- +3.3VSB

### 5.3.3.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 7**) to configure fan temperature and speed settings.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
-----
Advanced
-----
Smart Fan Mode Configuration
CPU_FAN1 Smart Fan Control    [Manual Mode]
Manual Mode                    70
SYS_FAN1 Smart Fan Control    [Manual Mode]
Manual Mode                    70
-----
Smart Fan Mode Select
-----
<=>: Select Screen
↑ ↓: Select Item
Enter>Select
+ - Change Opt.
F1 General Help
F2 Previous Values
F3 Optimized Defaults
F4 Save & Exit
ESC Exit
-----
Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
    
```

#### BIOS Menu 7: Smart Fan Mode Configuration

##### → CPU\_FAN1/SYS\_FAN1 Smart Fan Control [Manual Mode]

Use the **CPU\_FAN1 Smart Fan Control** BIOS option to configure the CPU Smart Fan.


→ **Manual Mode**      **DEFAULT**      The fan spins at the speed set in the Manual Mode option

##### → Manual Mode

Users can set expected fan PWM. Use the + or – key to change the value or enter a decimal number between 1 and 100.

### 5.3.4 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 8**) to read USB configuration information and configure the USB settings.

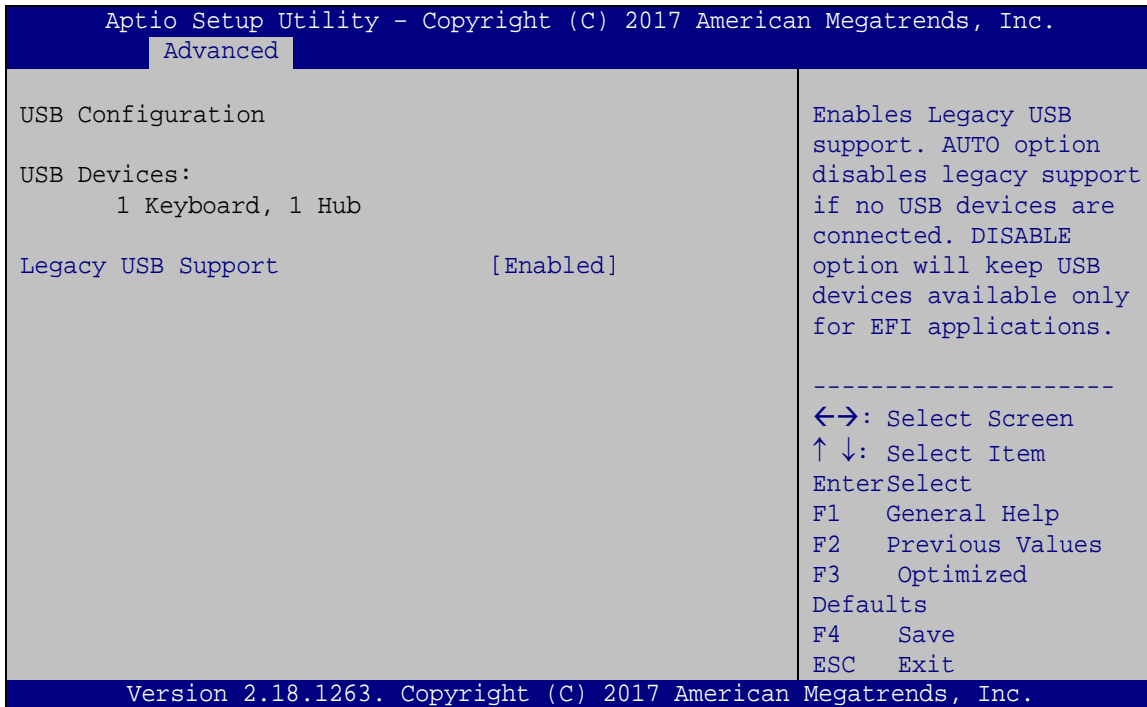

#### BIOS Menu 8: USB Configuration

##### → USB Devices

The **USB Devices Enabled** field lists the USB devices that are enabled on the system

##### → Legacy USB Support [Enabled]

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

## KINO-DAL SBC

- ➔ **Enabled**      **DEFAULT**      Legacy USB support enabled
- ➔ **Disabled**                      Legacy USB support disabled
- ➔ **Auto**                              Legacy USB support disabled if no USB devices are connected

### 5.3.5 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 9**) to view detailed CPU specifications and configure the CPU.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
  Advanced
CPU Configuration
Intel(R) Pentium(R) CPU N4200 @ 1.10GHz
CPU Signature          506C9
Microcode Patch        24
Max CPU Speed          1100 MHz
Min CPU Speed          800 MHz
Processor Cores        4
Intel HT Technology    Not Supported
Intel VT-x Technology  Supported

L1 Data Cache          24 KB x 4
L1 Code Cache          32 KB x 4
L2 Cache               1024 KB x 2
L3 Cache               Not Present

EIST                   [Enabled]
C-States               [Disabled]
Intel Virtualization Technology [Disabled]
VT-d                   [Disabled]

Number of cores to enable
in each processor
package.

-----
<=>: Select Screen
↑ ↓: Select Item
EnterSelect
F1   General Help
F2   Previous Values
F3   Optimized
Defaults
F4   Save
ESC  Exit

Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
  
```

**BIOS Menu 9: CPU Configuration**



**→ EIST [Enabled]**

Use the **EIST** option to enable or disable the Intel® Speed Step Technology.

- Disabled** Disables the Intel® Speed Step Technology.
- Enabled** **DEFAULT** Enables the Intel® Speed Step Technology.

**→ C-States [Disabled]**

Use the **C-States** option to enable or disable the C-states.

- Disabled** **DEFAULT** Disables the C-state
- Enabled** Enables the C-state

**→ Intel Virtualization Technology [Disabled]**

Use the **Intel Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- Disabled** **DEFAULT** Disables Intel® Virtualization Technology.
- Enabled** Enables Intel® Virtualization Technology.

**→ VT-d [Disabled]**


Use the **VT-d** BIOS option to enable or disabled VT-d support.

- Disabled** **DEFAULT** Disable VT-d support.
- Enabled** Enable VT-d support.

## KINO-DAL SBC

### 5.3.6 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 10**) configures RTC wake event.

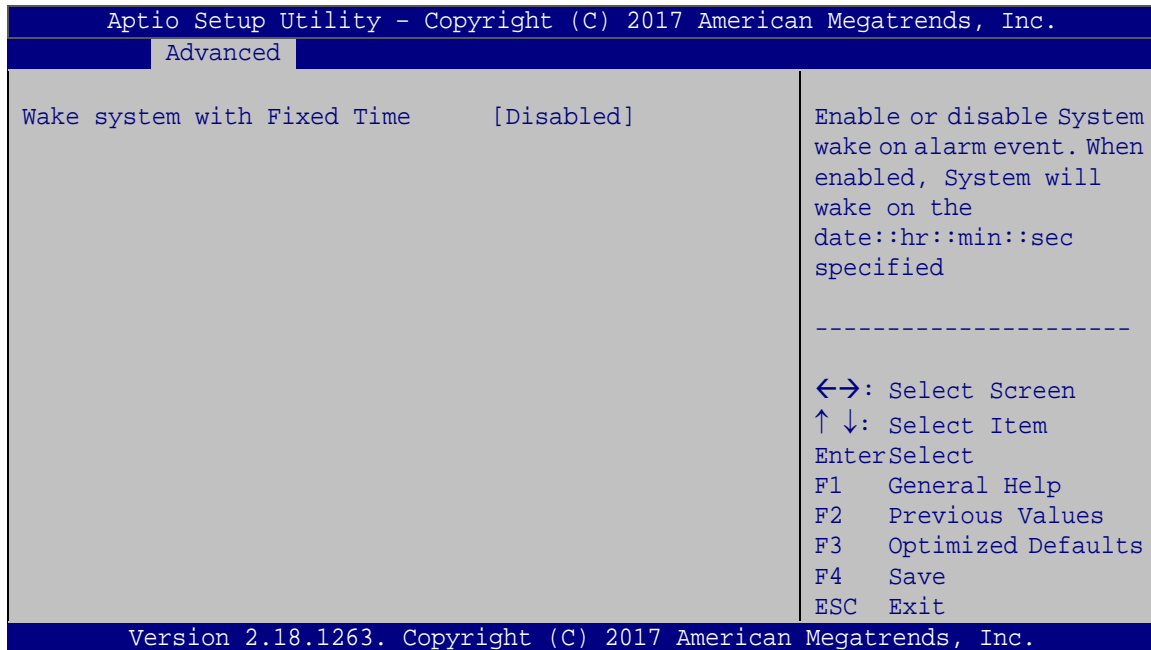

#### BIOS Menu 10: RTC Wake Settings

##### → Wake system with Fixed Time [Disabled]

Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.


- **Disabled**      **DEFAULT**      The real time clock (RTC) cannot generate a wake event
  
- **Enabled**      If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:
  - Wake up date
  - Wake up hour
  - Wake up minute

Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

### 5.3.7 Power Saving Configuration

Use the **Power Saving Configuration** menu (BIOS Menu 11) to configure system to reduce power consumption in system off state.

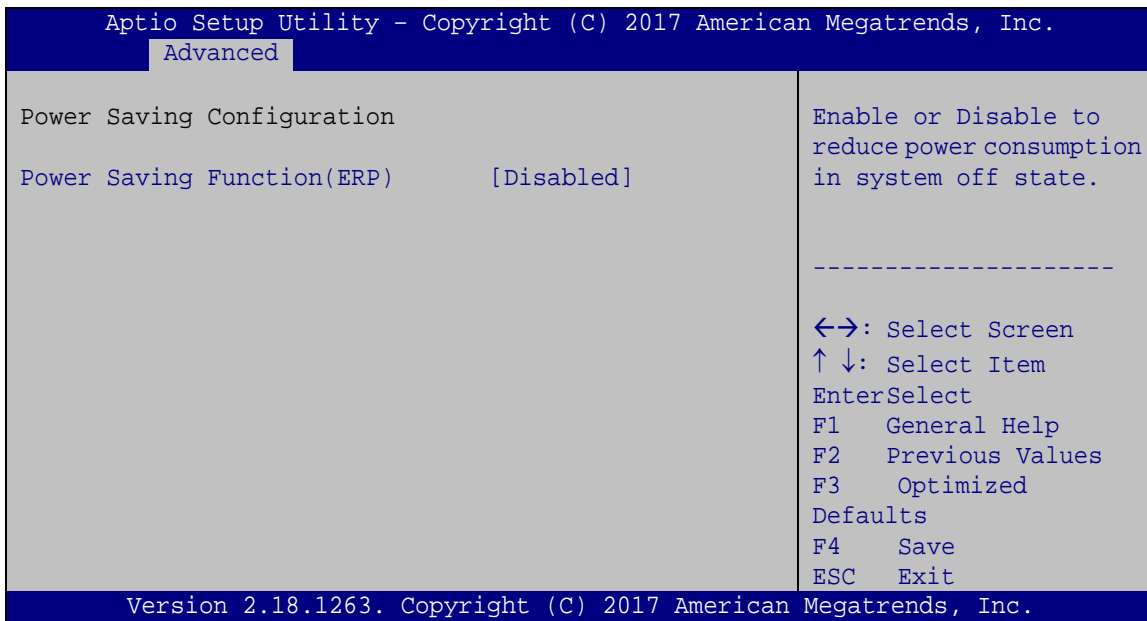

#### BIOS Menu 11: Power Saving Configuration

##### → Power Saving Function(ERP) [Disabled]

Use the **Power Saving Function** BIOS option to enable or disable the power saving function.

- **Disabled**      **DEFAULT**      Power saving function is disabled.
- **Enabled**        Power saving function is enabled. It will reduce power consumption when the system is off.

## KINO-DAL SBC

### 5.3.8 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 12**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
  Advanced
COM1
  Console Redirection          [Disabled]
> Console Redirection Settings
  Console Redirection          [Disabled]
> Console Redirection Settings
COM2
  Console Redirection          [Disabled]
> Console Redirection Settings
COM3
  Console Redirection          [Disabled]
> Console Redirection Settings
COM4
  Console Redirection          [Disabled]
> Console Redirection Settings
COM5
  Console Redirection          [Disabled]
> Console Redirection Settings
COM6
  Console Redirection          [Disabled]
> Console Redirection Settings
Legacy Console Redirection
> Legacy Console Redirection Settings

-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
F1   General Help
F2   Previous Values
F3   Optimized
Defaults
F4   Save
ESC  Exit
Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
  
```

#### BIOS Menu 12: Serial Port Console Redirection


##### ➔ Console Redirection [Disabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- ➔ **Disabled**     **DEFAULT**     Disabled the console redirection function
- ➔ **Enabled**     Enabled the console redirection function

### 5.3.8.1 Legacy Console Redirection Settings

The **Legacy Console Redirection Settings** menu (**BIOS Menu 13**) allows the legacy console redirection options to be configured.

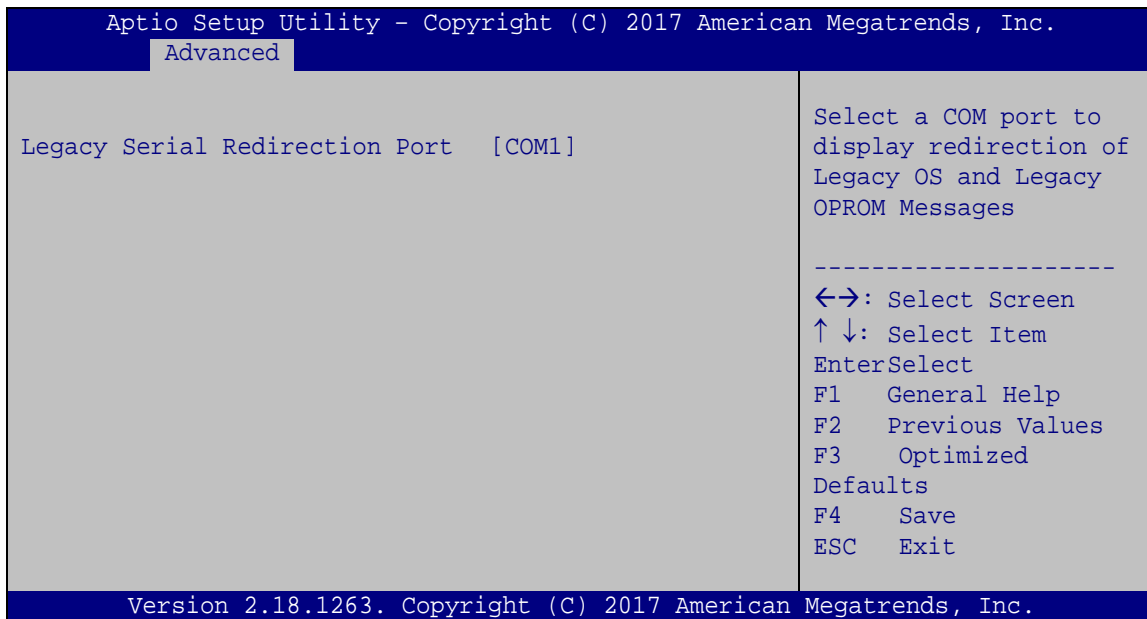

#### BIOS Menu 13: Legacy Console Redirection Settings

##### → Legacy Serial Redirection Port [COM1]

Use the **Legacy Serial Redirection Port** option to specify a COM port to display redirection of legacy OS and legacy OPROM messages. The options include:

- COM1           **DEFAULT**
- COM2
- COM3
- COM4
- COM5
- COM6



## KINO-DAL SBC

### 5.3.9 IEI Feature

Use the **IEI Feature** menu (**BIOS Menu 14**) to configure One Key Recovery function.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
-----
Advanced
-----
iEi Feature
Auto Recovery Function          [Disabled]
                                Auto Recovery Function
                                Reboot and recover
                                system automatically
                                within 10 min, when OS
                                crashes. Please install
                                Auto Recovery API
                                service before enabling
                                this function
                                -----
                                ←→: Select Screen
                                ↑↓: Select Item
                                Enter>Select
                                F1   General Help
                                F2   Previous Values
                                F3   Optimized Defaults
                                F4   Save
                                ESC  Exit
-----
Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.

```

#### BIOS Menu 14: IEI Feature

##### → Auto Recovery Function [Disabled]

Use the **Auto Recovery Function** BIOS option to enable or disable the auto recovery function of the IEI One Key Recovery.

- **Disabled**      **DEFAULT**      Auto recovery function disabled
- **Enabled**        Auto recovery function enabled

## 5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 15**) to access the north bridge and south bridge configuration menus



### **WARNING!**

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
Main   Advanced  Chipset  Security  Boot  Save & Exit
-----
> North Bridge
> South Bridge

North Bridge Parameters
-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
+/-: Change Opt.
F1   General Help
F2   Previous Values
F3   Optimized Defaults
F4   Save & Exit
ESC  Exit

Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
    
```

**BIOS Menu 15: Chipset**

## KINO-DAL SBC

### 5.4.1 North Bridge Configuration

Use the **North Bridge Configuration** menu (**BIOS Menu 16**) to configure the Intel IGD settings.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
  Chipset
> Intel IGD Configuration
> LCD Control

Memory Information
Total Memory          2048 MB(LPDDR3)
Dimm1                 2048 MB(LPDDR3)
Dimm2                 Not Present

Intel IGD Configuration
-----
<->: Select Screen
↑ ↓: Select Item
EnterSelect
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.17.1249. Copyright (C) 2017 American Megatrends, Inc.

```


#### BIOS Menu 16: North Bridge Configuration

##### → Memory Information

The **Memory Information** lists a brief summary of the on-board memory. The fields in **Memory Information** cannot be changed.

### 5.4.1.1 Intel IGD Configuration

Use the **Intel IGD Configuration** menu (**BIOS Menu 17**) to configure the video device connected to the system.

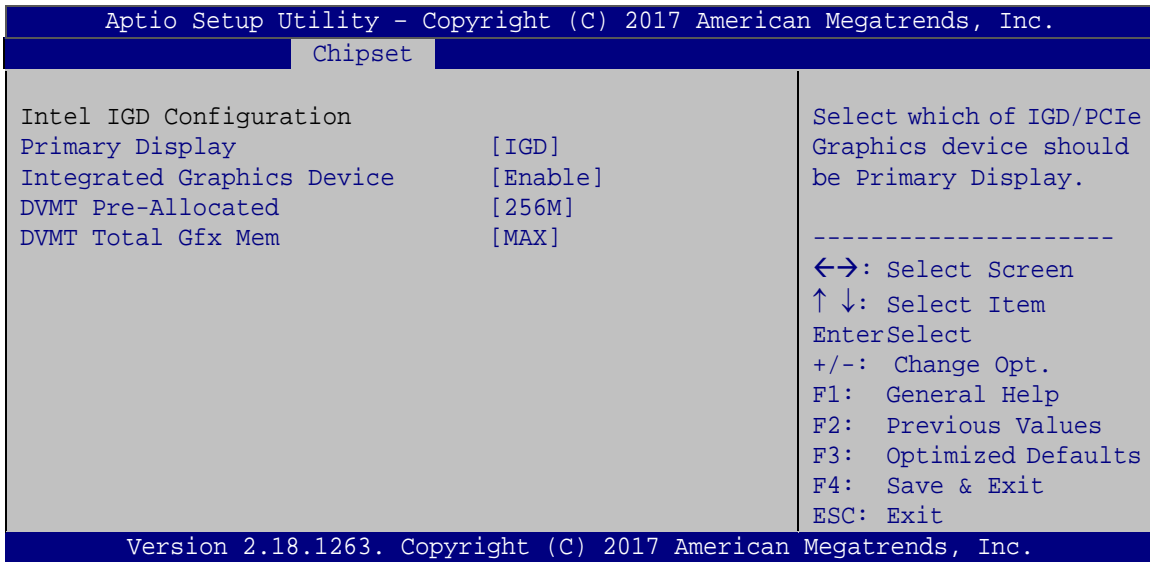

#### BIOS Menu 17: Intel IGD Configuration

##### → Primary Display [IGD]

Use the **Primary Display** option to select the graphics controller used as the primary boot device. Select either an integrated graphics controller (IGD) or a PCI express (PEG) controller. Configuration options are listed below:

- IGD                      **DEFAULT**
- PCIe

##### → Integrated Graphics Device [Enable]

Use the **Integrated Graphics Device** option enables or disables Integrated Graphics Device (IGD).

- **Disable**                      Always disable IGD.
- **Enable**                      **DEFAULT**      Enabled Integrated Graphics Device (IGD) when selected as the Primary Video Adaptor.

## KINO-DAL SBC

### → DVMT Pre-Allocated [256MB]

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- 64M
- 128M
- 256M      **DEFAULT**
- 512M

### → DVMT Total Gfx Mem [MAX]


Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M
- MAX      **DEFAULT**



### 5.4.1.2 LCD Control

Use the **LCD Control** menu (**BIOS Menu 18**) to configure the display device connected to the system.

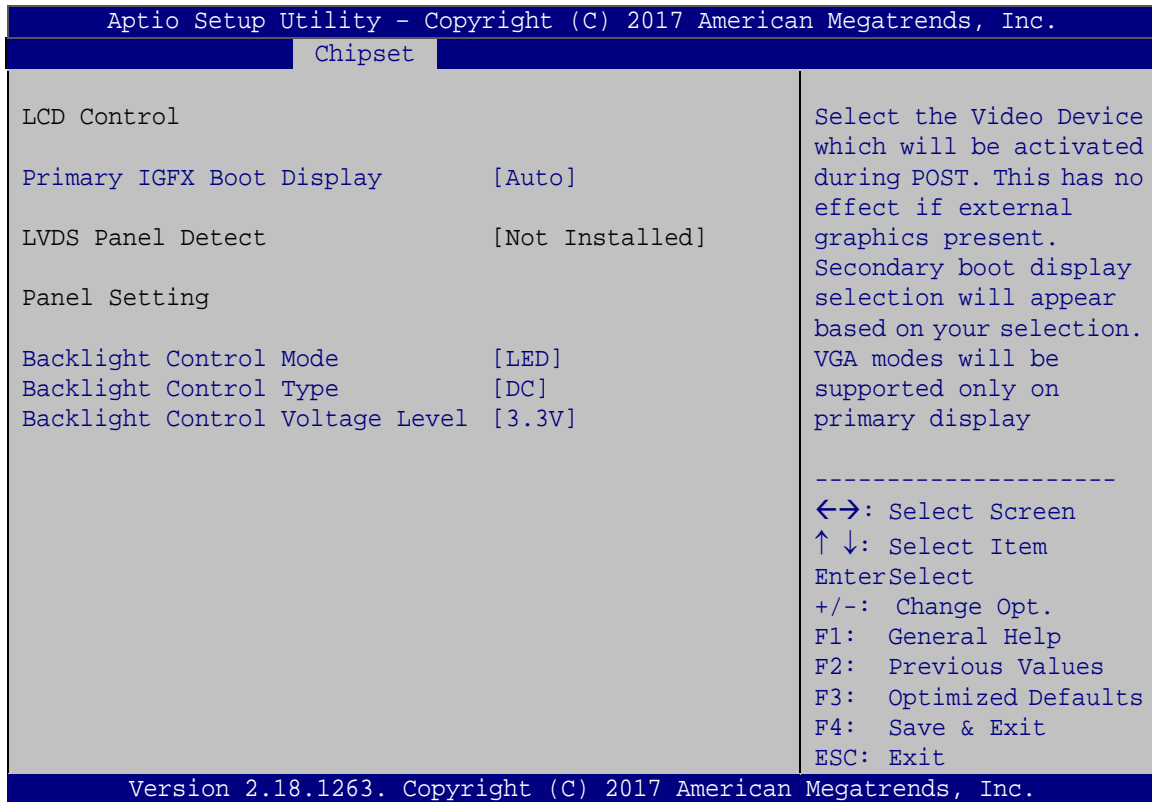

#### BIOS Menu 18: LCD Control

##### → Primary IGFX Boot Display [Auto]

Use the **Primary IGFX Boot Display** option to select the display device used by the system when it boots. Configuration options are listed below.

- Auto                   **DEFAULT**
- VGA1
- LVDS1
- HDMI1

## KINO-DAL SBC

### → Backlight Control Mode [LED]

Use the **Backlight Control Mode** option to specify the backlight control mode. Configuration options are listed below.

- LED                      **DEFAULT**
- CCFL

### → Backlight Control Type [DC]

Use the **Backlight Control Type** option to specify the backlight control type. Configuration options are listed below.

- PWM
- DC                      **DEFAULT**


### → Backlight Control Voltage Level [3.3V]

Use the **Backlight Control Voltage Level** option to specify the backlight control voltage. Configuration options are listed below.

- 3.3V                      **DEFAULT**
- 5.0V

### 5.4.2 South Bridge Configuration

Use the **South Bridge Configuration** menu (**BIOS Menu 19**) to configure the south bridge chipset.

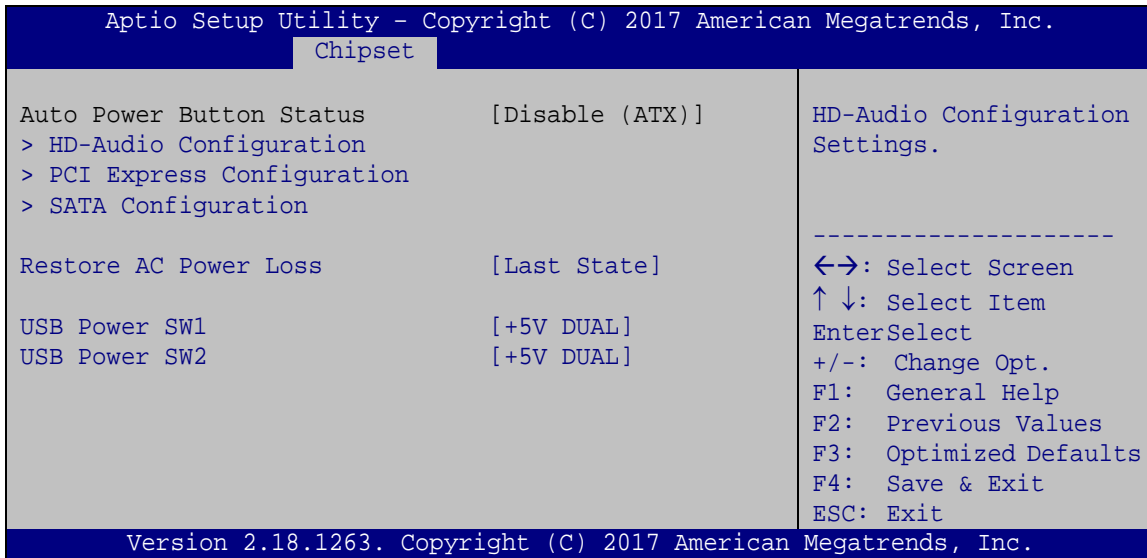

#### BIOS Menu 19: South Bridge Configuration

##### → Restore on AC Power Loss [Last State]

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off**                      The system remains turned off
- **Power On**                        The system turns on
- **Last State**    **DEFAULT**      The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

## KINO-DAL SBC

### → USB SW1 [+5V DUAL]

Use the **USB SW1** BIOS option to configure whether to provide power to the two external USB 3.0 connectors labeled USB23 (the one close to power input connector) when the system is in S3/S4 sleep state.

→ **+5V DUAL**      **DEFAULT**      Power is provided to the external USB 3.0 connectors (USB23) when the system is in S3/S4 sleep state.

→ **+5V**      Power is not provided to the external USB 3.0 connectors (USB23) when the system is in S3/S4 sleep state

### → USB SW2 [+5V DUAL]


Use the **USB SW2** BIOS option to configure whether to provide power to the two external USB 3.0 connectors labeled USB01 when the system is in S3/S4 sleep state.

→ **+5V DUAL**      **DEFAULT**      Power is provided to the external USB 3.0 connectors (USB01) when the system is in S3/S4 sleep state.

→ **+5V**      Power is not provided to the external USB 3.0 connectors (USB01) when the system is in S3/S4 sleep state

### 5.4.2.1 HD-Audio Configuration

Use the **HD-Audio Configuration** menu (**BIOS Menu 20**) to configure the HD Audio.

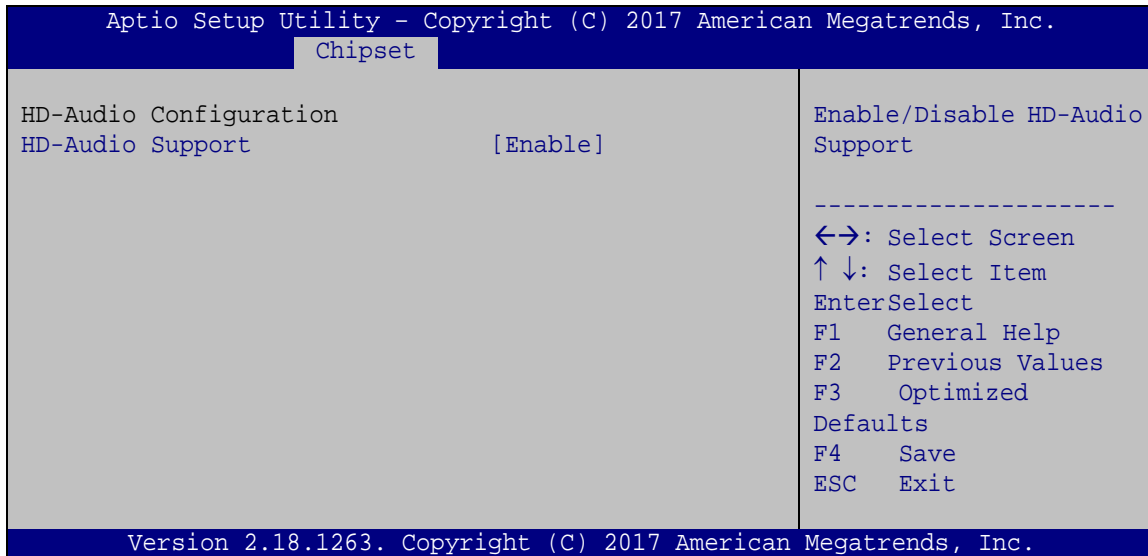

#### BIOS Menu 20: HD-Audio Configuration

##### → HD-Audio Support [Enable]

Use the **HD-Audio Support** option to enable or disable the High Definition Audio controller.

- **Disable**                      The onboard High Definition Audio controller is disabled
- **Enable**      **DEFAULT**      The onboard High Definition Audio controller is detected automatically and enabled



## KINO-DAL SBC

### 5.4.2.2 PCI Express Configuration


Use the **PCI Express Configuration** menu (**BIOS Menu 21**) to configure the PCI Express.

```
Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
Chipset
PCI Express Configuration
> Onboard LAN1
> Onboard LAN2
> MPCIE1
Compliance Mode
Enable/Disable
-----
<->: Select Screen
↑ ↓: Select Item
EnterSelect
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit
Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.
```

#### BIOS Menu 21: PCI Express Configuration

### 5.4.2.2.1 Onboard LAN

Use the **Onboard LAN** menus (**BIOS Menu 22**) to configure the LAN 1 or LAN 2 port.

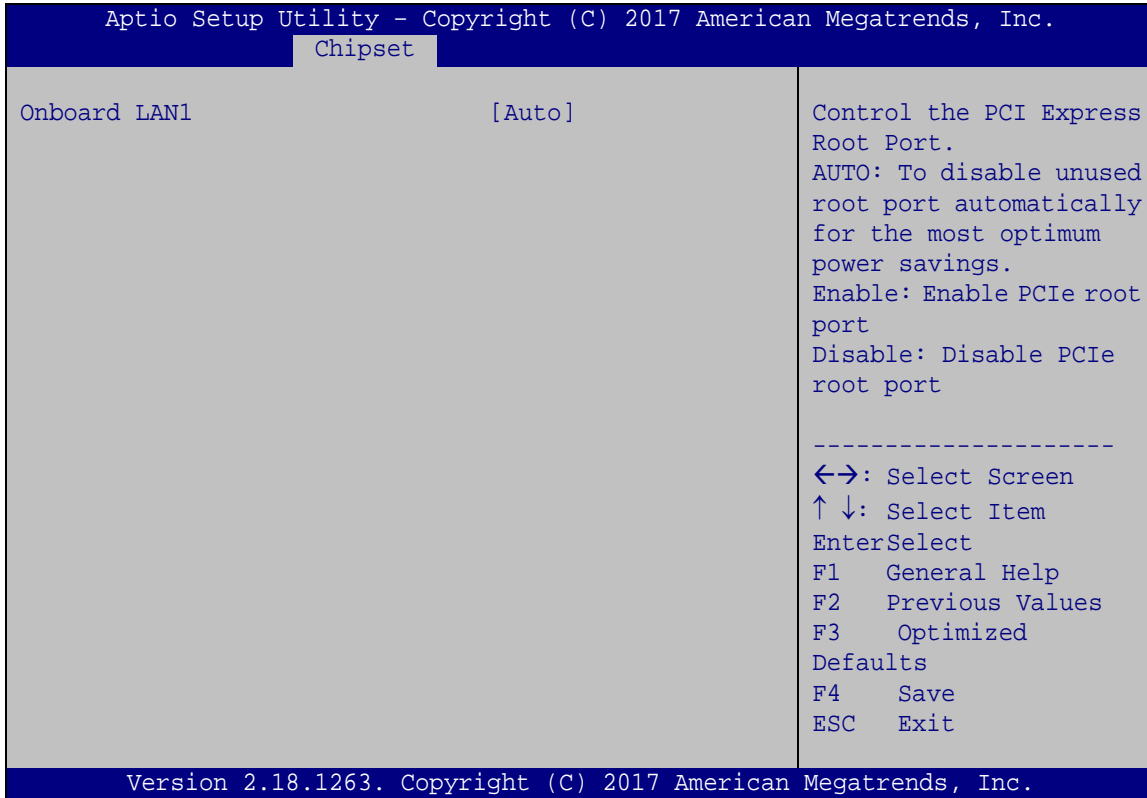

#### BIOS Menu 22: Onboard LAN

##### → Onboard LAN1/2 [Auto]


Use the **Onboard LAN1/** option to enable or disable the LAN port.

- **Disable**                      Disable the LAN port
- **Enable**                        Enable the LAN port
- **Auto**                      **DEFAULT**      Disable unused root LAN port automatically for the most optimum power savings.

## KINO-DAL SBC

### 5.4.2.2.2 MPCIE1

Use the **MPCIE1** menu (**BIOS Menu 23**) to configure the PCIe Mini slot.

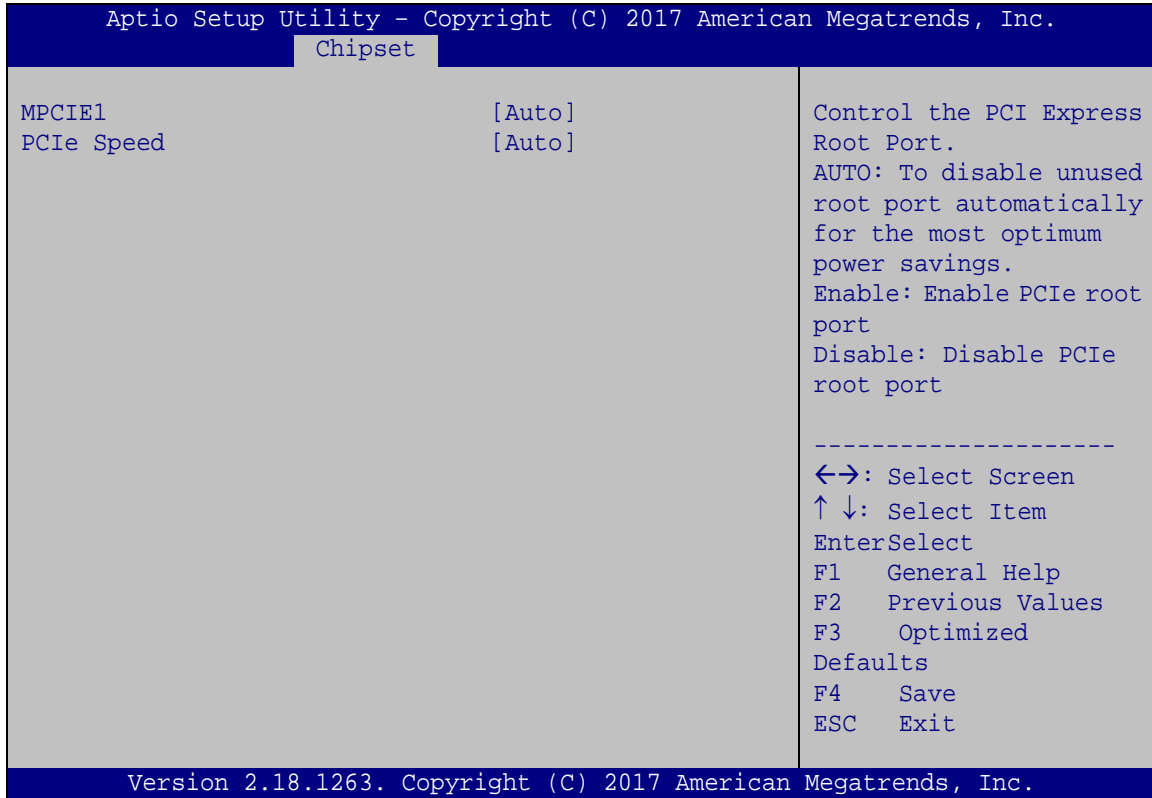

#### BIOS Menu 23: MPCIE1

##### → MPCIE1 [Auto]

Use the **MPCIE1** option to enable or disable the PCIe Mini slot.

- **Disable** Disable PCIe Mini slot.
- **Enable** Enable PCIe Mini slot.
- **Auto** **DEFAULT** Disable unused root port automatically for the most optimum power savings.


➔ **PCIe Speed [Auto]**

Use the **PCIe Speed** option to configure PCIe Mini slot speed.

- ➔ **Auto**            **DEFAULT**      Configure PCIe Mini slot speed to auto
- ➔ **Gen 1**                              Configure PCIe Mini slot speed to Gen1
- ➔ **Gen 2**                              Configure PCIe Mini slot speed to Gen2

**5.4.2.2.3 SATA Configuration**

Use the **SATA Configuration** menu (**BIOS Menu 24**) to change and/or set the configuration of the SATA devices installed in the system.

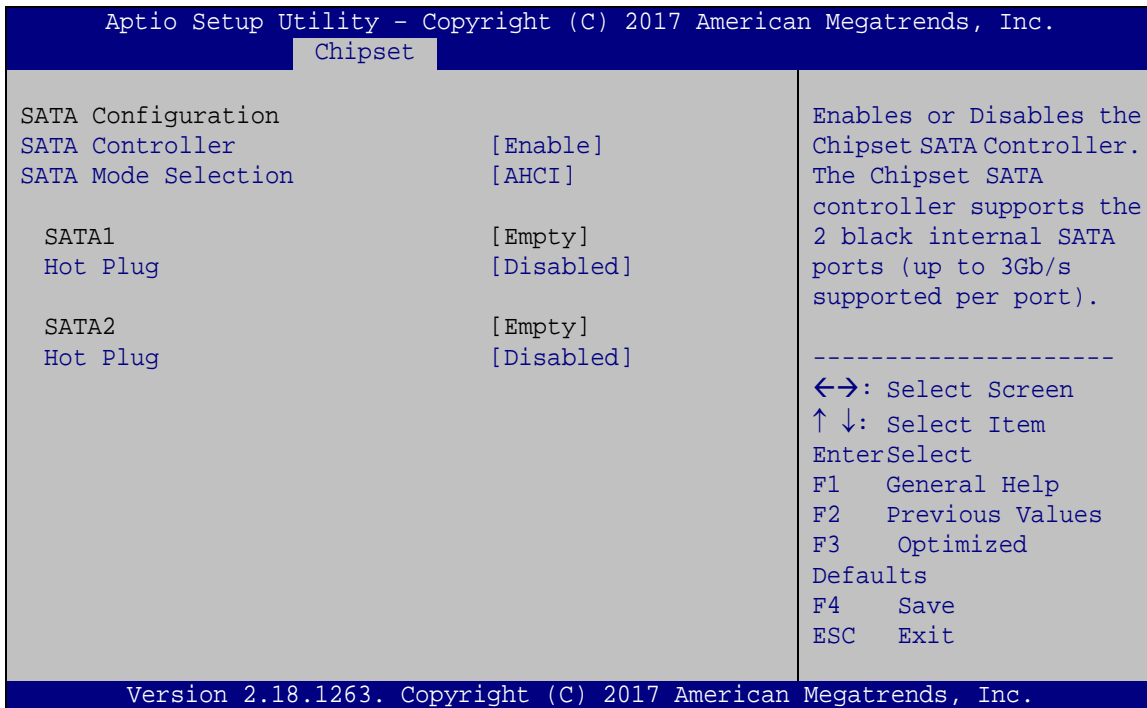


**BIOS Menu 24: SATA Configuration**





## 5.5 Security

Use the **Security** menu (**BIOS Menu 25**) to set system and user passwords.

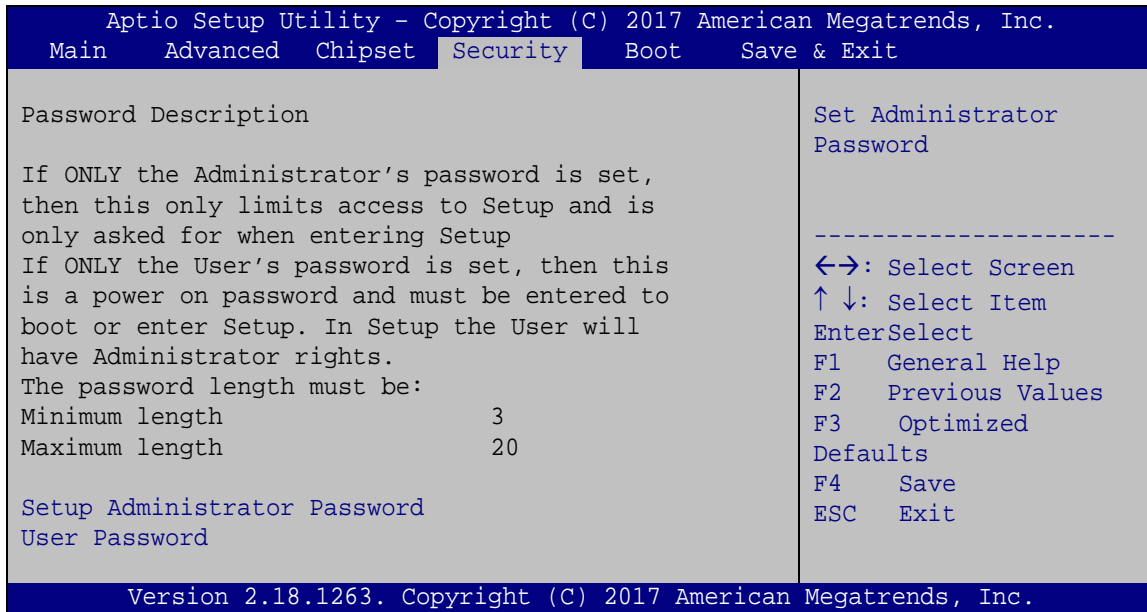

### BIOS Menu 25: Security

#### ➔ Setup Administrator Password

Use the **Administrator Password** to set or change an administrator password.


#### ➔ User Password

Use the **User Password** to set or change a user password.

## KINO-DAL SBC

### 5.6 Boot

Use the **Boot** menu (**BIOS Menu 26**) to configure system boot options.

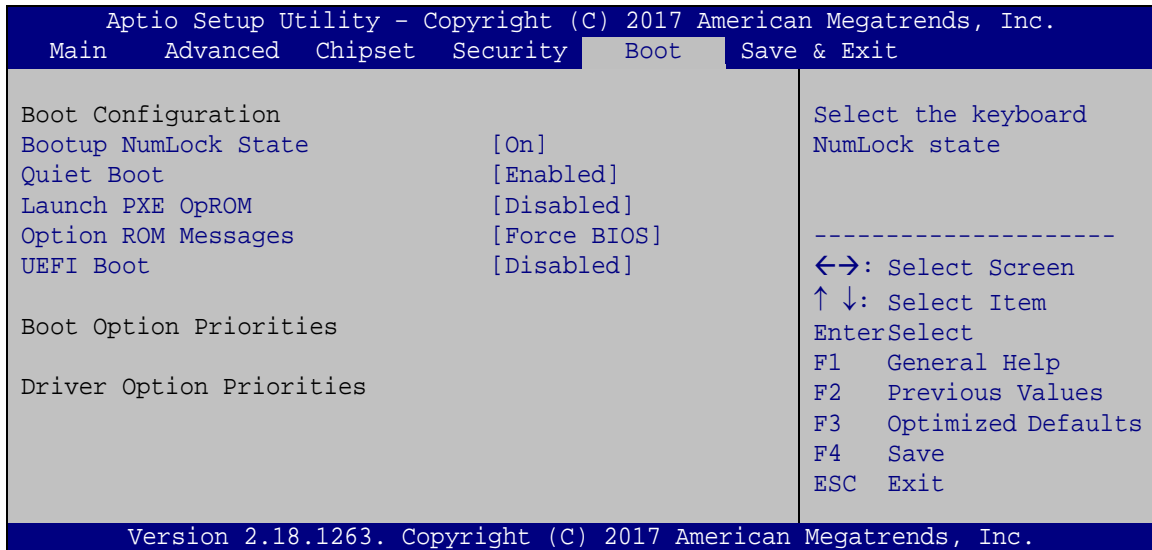

#### BIOS Menu 26: Boot

##### → Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

→ **On**                      **DEFAULT**                      Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

→ **Off**    Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

**→ Quiet Boot [Enabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** Normal POST messages displayed
- **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

**→ Launch PXE OpROM [Disabled]**

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- **Enabled** Load PXE Option ROMs.

**→ Option ROM Messages [Force BIOS]**

Use the **Option ROM Messages** option to set the Option ROM display mode.

- **Force BIOS** **DEFAULT** Sets display mode to force BIOS.
- **Keep Current** Sets display mode to current.

**→ UEFI Boot [Disabled]**

Use the **UEFI Boot** option to enable or disable to boot from the UEFI devices.

- **Enabled** Boot from UEFI devices is enabled.
- **Disabled** **DEFAULT** Boot from UEFI devices is disabled.

**→ Boot Option Priority**

Use the **Boot Option Priority** function to set the system boot sequence from the available devices. The drive sequence also depends on the boot sequence in the individual device section.

## KINO-DAL SBC

## 5.7 Save &amp; Exit

Use the **Save & Exit** menu (**BIOS Menu 27**) to load default BIOS values, optimal failsafe values and to save configuration changes.

```

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
Save Changes and Reset
Discard Changes and Reset

Restore Defaults
Save as User Defaults
Restore User Defaults

Reset the system after
saving the changes.

-----
<=>: Select Screen
↑ ↓: Select Item
Enter>Select
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit

Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.

```

**BIOS Menu 27: Save & Exit****→ Save Changes and Reset**

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

**→ Discard Changes and Reset**

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

**→ Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

→ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.



Chapter

6

# Software Drivers

---

**NOTE:**

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. Visit the IEI website or contact technical support for the latest updates.

---

## 6.1 Software Installation

All the drivers for the KINO-DAL are on the CD that came with the system. To install the drivers, please follow the steps below.

**Step 1:** Insert the CD into a CD drive connected to the system.

---

**NOTE:**

If the system does not initiate the "autorun" program when the CD is inserted, go to X:\autorun.exe (where X:\ is the system CD drive) to access the IEI Driver CD main menu.

---

**Step 2:** The driver main menu appears.

**Step 3:** Click **KINO-DAL**.

**Step 4:** A new screen with a list of available drivers appears.

**Step 5:** Install all of the necessary drivers in the menu.

## KINO-DAL SBC

### 6.2 Available Software Drivers

All the drivers for the KINO-DAL are on the utility CD that came with the system. The utility CD contains drivers for Windows 7, Windows 8 and Windows 10 operating systems. If the drivers are not installed automatically, please install the following drivers manually.

The following drivers can be installed on the **KINO-DAL**:

- Chipset
- Graphics
- LAN
- Audio
- Serial I/O
- TXE



#### NOTE:

The Intel TXE requires that Microsoft's "Kernel-Mode Driver Framework (KMDf) version 1.11 update for Windows 7" must be installed first on Windows 7 OS. If the KMDf is not installed, either error 37 or error 28 may appear on the Intel TXE device in Device Manager.

Please find the KMDf version 1.11 update for Windows 7 in the TXE driver folder in the driver CD or click the following link to download it.

<http://www.microsoft.com/en-us/download/details.aspx?id=38423>

---

Appendix

**A**

# Regulatory Compliance

---

**DECLARATION OF CONFORMITY**

This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

**FCC WARNING**

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Appendix

**B**

# Product Disposal

---


**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

---

- Outside the European Union – If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union – The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

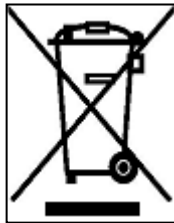

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

**C**

# BIOS Menu Options

---

## KINO-DAL SBC

<input type="checkbox"/>	System Date [xx/xx/xx].....	76
<input type="checkbox"/>	System Time [xx:xx:xx].....	77
<input type="checkbox"/>	ACPI Sleep State [S3 (Suspend to RAM)].....	78
<input type="checkbox"/>	Serial Port [Enabled].....	80
<input type="checkbox"/>	Change Settings [IO=3F8h; IRQ=4].....	80
<input type="checkbox"/>	Transfer Mode [RS232].....	80
<input type="checkbox"/>	Serial Port [Enabled].....	81
<input type="checkbox"/>	Change Settings [IO=2F8h; IRQ=11].....	81
<input type="checkbox"/>	Transfer Mode [RS232].....	81
<input type="checkbox"/>	Serial Port [Enabled].....	82
<input type="checkbox"/>	Change Settings [IO=3E8h; IRQ=10].....	82
<input type="checkbox"/>	Serial Port [Enabled].....	83
<input type="checkbox"/>	Change Settings [IO=2E8h; IRQ=10].....	83
<input type="checkbox"/>	Serial Port [Enabled].....	84
<input type="checkbox"/>	Change Settings [IO=3E0h; IRQ=10].....	84
<input type="checkbox"/>	Serial Port [Enabled].....	85
<input type="checkbox"/>	Change Settings [IO=2E0h; IRQ=10].....	85
<input type="checkbox"/>	PC Health Status.....	86
<input type="checkbox"/>	CPU_FAN1/SYS_FAN1 Smart Fan Control [Manual Mode].....	87
<input type="checkbox"/>	Manual Mode.....	87
<input type="checkbox"/>	USB Devices.....	88
<input type="checkbox"/>	Legacy USB Support [Enabled].....	88
<input type="checkbox"/>	EIST [Enabled].....	90
<input type="checkbox"/>	C-States [Disabled].....	90
<input type="checkbox"/>	Intel Virtualization Technology [Disabled].....	90
<input type="checkbox"/>	VT-d [Disabled].....	90
<input type="checkbox"/>	Wake system with Fixed Time [Disabled].....	91
<input type="checkbox"/>	Power Saving Function(ERP) [Disabled].....	92
<input type="checkbox"/>	Console Redirection [Disabled].....	93
<input type="checkbox"/>	Legacy Serial Redirection Port [COM1].....	94
<input type="checkbox"/>	Auto Recovery Function [Disabled].....	95
<input type="checkbox"/>	Memory Information.....	97
<input type="checkbox"/>	Primary Display [IGD].....	98
<input type="checkbox"/>	Integrated Graphics Device [Enable].....	98

<input type="checkbox"/>	DVMT Pre-Allocated [256MB].....	99
<input type="checkbox"/>	DVMT Total Gfx Mem [MAX].....	99
<input type="checkbox"/>	Primary IGFX Boot Display [Auto] .....	100
<input type="checkbox"/>	Backlight Control Mode [LED].....	101
<input type="checkbox"/>	Backlight Control Type [DC].....	101
<input type="checkbox"/>	Backlight Control Voltage Level [3.3V].....	101
<input type="checkbox"/>	Restore on AC Power Loss [Last State].....	102
<input type="checkbox"/>	USB SW1 [+5V DUAL].....	103
<input type="checkbox"/>	USB SW2 [+5V DUAL].....	103
<input type="checkbox"/>	HD-Audio Support [Enable] .....	104
<input type="checkbox"/>	Onboard LAN1/2 [Auto].....	106
<input type="checkbox"/>	MPCIE1 [Auto].....	107
<input type="checkbox"/>	PCIe Speed [Auto].....	108
<input type="checkbox"/>	STAT Controller [Enable].....	109
<input type="checkbox"/>	SATA Mode Selection [AHCI].....	109
<input type="checkbox"/>	Hot Plug [Disabled].....	109
<input type="checkbox"/>	Setup Administrator Password .....	110
<input type="checkbox"/>	User Password .....	110
<input type="checkbox"/>	Bootup NumLock State [On].....	111
<input type="checkbox"/>	Quiet Boot [Enabled] .....	112
<input type="checkbox"/>	Launch PXE OpROM [Disabled].....	112
<input type="checkbox"/>	Option ROM Messages [Force BIOS].....	112
<input type="checkbox"/>	UEFI Boot [Disabled] .....	112
<input type="checkbox"/>	Boot Option Priority.....	112
<input type="checkbox"/>	Save Changes and Reset .....	113
<input type="checkbox"/>	Discard Changes and Reset .....	113
<input type="checkbox"/>	Restore Defaults .....	113
<input type="checkbox"/>	Save as User Defaults .....	114
<input type="checkbox"/>	Restore User Defaults .....	114



Appendix

D

# Terminology

---

ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
APM	The Advanced Power Management (APM) application program interface (API) enables the inclusion of power management in the BIOS.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude (“volume”) of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CMOS	Complimentary metal-oxide-conductor is a type of integrated circuit used in chips like static RAM and microprocessors.
COM	COM is used to refer to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DE-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to

**KINO-DAL SBC**

	analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.
DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.
DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.
MAC	The Media Access Control (MAC) protocol enables several terminals or network nodes to communicate in a LAN, or other multipoint networks.
PCIe	PCI Express (PCIe) is a communications bus that uses dual data lines for full-duplex (two-way) serial (point-to-point) communications between the SBC components and/or expansion cards and the SBC chipsets. Each line has a 2.5 Gbps data transmission rate and a 250 MBps sustained data transfer rate.

POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
QVGA	Quarter Video Graphics Array (QVGA) refers to a display with a resolution of 320 x 240 pixels.
RAM	Random Access Memory (RAM) is a form of storage used in computer. RAM is volatile memory, so it loses its data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA 3Gb/s bus has data transfer speeds of up to 3.0 Gbps.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates, while USB 2.0 supports 480Mbps data transfer rates.

Appendix

E

# Digital I/O Interface

---



The DIO connector on the KINO-DAL is interfaced to GPIO ports on the Super I/O chipset. The DIO has both 8-bit digital inputs and 8-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



**NOTE:**

For further information, please refer to the datasheet for the Super I/O chipset.

The BIOS interrupt call **INT 15H** controls the digital I/O.

**INT 15H:**

<b>AH – 6FH</b>	
<u>Sub-function:</u>	
<b>AL – 8</b>	: Set the digital port as INPUT
<b>AL</b>	: Digital I/O input value

**Assembly Language Sample 1**

```

MOV     AX, 6F08H      ; setting the digital port as input
INT     15H           ;
    
```

**AL low byte = value**

## KINO-DAL SBC

<b>AH – 6FH</b>	
<u>Sub-function:</u>	
<b>AL – 9</b>	: Set the digital port as OUTPUT
<b>BL</b>	: Digital I/O output value

**Assembly Language Sample 2**

```
MOV    AX, 6F09H      ; setting the digital port as output  
MOV    BL, 09H        ; digital value is 09H  
INT    15H           ;
```

**Digital Output is 1001b**

Appendix

**F**

# Watchdog Timer

---

## KINO-DAL SBC

**NOTE:**

The following discussion applies to DOS. Contact IEI support or visit the IEI website for drivers for other operating systems.

The Watchdog Timer is a hardware-based timer that attempts to restart the system when it stops working. The system may stop working because of external EMI or software bugs. The Watchdog Timer ensures that standalone systems like ATMs will automatically attempt to restart in the case of system problems.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

<b>AH – 6FH Sub-function:</b>	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

**Table F-1: AH-6FH Sub-function**

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

The Watchdog Timer is activated through software. The software application that activates the Watchdog Timer must also deactivate it when closed. If the Watchdog Timer is not deactivated, the system will automatically restart after the Timer has finished its countdown.

**EXAMPLE PROGRAM:**

```
; INITIAL TIMER PERIOD COUNTER
```

```
;
```

```
W_LOOP:
```

```
;
```

```
    MOV     AX, 6F02H      ;setting the time-out value  
    MOV     BL, 30        ;time-out value is 48 seconds  
    INT     15H
```

```
;
```

```
; ADD THE APPLICATION PROGRAM HERE
```

```
;
```

```
    CMP     EXIT_AP, 1    ;is the application over?  
    JNE     W_LOOP       ;No, restart the application
```

```
    MOV     AX, 6F02H    ;disable Watchdog Timer  
    MOV     BL, 0        ;  
    INT     15H
```

```
;
```

```
; EXIT ;
```



Appendix

G

# Hazardous Materials Disclosure

---

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
Display	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

## KINO-DAL SBC

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	○	○	○	○	○	○
显示	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求。