

GENE-BT05

3.5" Subcompact Board

User's Manual 10th Ed

Copyright Notice

This document is copyrighted, 2021. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgements

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel® and Celeron® are registered trademarks of Intel Corporation
- Intel Atom™ is a trademark of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

| Item | Quantity |
|--------------|----------|
| GENE-BT05 MB | 1 |
| Heatsink | 1 |

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.
13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Main Board/ Daughter Board/ Backplane

| 部件名称 | 有毒有害物质或元素 | | | | | |
|--|-----------|-----------|-----------|-----------------|---------------|-----------------|
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 印刷电路板 及其电子组件 | ○ | ○ | ○ | ○ | ○ | ○ |
| 外部信号 连接器及线材 | ○ | ○ | ○ | ○ | ○ | ○ |
| <p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注: 此产品所标示之环保使用期限, 系指在一般正常使用状况下。</p> | | | | | | |

China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products

AAEON Main Board/ Daughter Board/ Backplane

| Component | Poisonous or Hazardous Substances or Elements | | | | | |
|---|---|--------------|--------------|------------------------------|--------------------------------|---------------------------------------|
| | Lead (Pb) | Mercury (Hg) | Cadmium (Cd) | Hexavalent Chromium (Cr(VI)) | Polybrominated Biphenyls (PBB) | Polybrominated Diphenyl Ethers (PBDE) |
| PCB & Other Components | ○ | ○ | ○ | ○ | ○ | ○ |
| Wires & Connectors for External Connections | ○ | ○ | ○ | ○ | ○ | ○ |
| <p>O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.</p> <p>X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.</p> <p>Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only</p> | | | | | | |

Table of Contents

| | |
|---|----------|
| Chapter 1 - Product Specifications | 1 |
| 1.1 Specifications | 2 |
| 1.2 Block Diagram | 5 |
| Chapter 2 – Hardware Information | 6 |
| 2.1 Dimensions | 7 |
| 2.2 Jumpers and Connectors..... | 11 |
| 2.3 List of Jumpers | 15 |
| 2.3.1 LVDS Port Backlight Inverter VCC Selection (JP1) | 15 |
| 2.3.2 LVDS Port Backlight Lightness Control Mode Selection (JP3)..... | 15 |
| 2.3.3 LVDS Port Operating VDD Selection (JP4)..... | 16 |
| 2.3.4 COM3 Pin8 Function Selection (JP8)..... | 16 |
| 2.3.5 COM2 Pin8 Function Selection (JP9)..... | 16 |
| 2.3.6 Auto Power Button Enable/Disable Selection (JP17)..... | 16 |
| 2.3.7 Front Panel Connector (JP19)..... | 17 |
| 2.3.8 Touchscreen 4/ 5/ 8-Wire Selection (JP20)..... | 17 |
| 2.3.9 Clear CMOS Jumper (JP21) | 17 |
| 2.4 List of Connectors..... | 18 |
| 2.4.1 +5VSB Output w/SMBus (CN1) | 19 |
| 2.4.2 LVDS Port Inverter / Backlight Connector (CN3)..... | 20 |
| 2.4.3 +5V Output for SATA HDD (CN4) | 20 |
| 2.4.4 External +5VSB Input (CN5)..... | 21 |
| 2.4.5 SATA Port (CN6)..... | 22 |
| 2.4.6 External +12V Input (CN7)..... | 22 |
| 2.4.7 LVDS Port (CN8) | 23 |
| 2.4.8 Audio I/O Port (CN9) | 25 |
| 2.4.9 Mini-Card Slot (Half Mini-Card) (CN10)..... | 26 |

| | | |
|--|---|-----------|
| 2.4.10 | LPC Port (CN11)..... | 29 |
| 2.4.11 | COM Port 2 (CN12)..... | 30 |
| 2.4.12 | COM Port 3 (CN14)..... | 33 |
| 2.4.13 | COM Port 4 (CN15)..... | 36 |
| 2.4.14 | Digital I/O Port (CN16)..... | 37 |
| 2.4.15 | USB 2.0 Port 3 (CN17)..... | 38 |
| 2.4.16 | USB 2.0 Port 2 (CN18)..... | 38 |
| 2.4.17 | BIOS Debug Port (CN19)..... | 39 |
| 2.4.18 | PS/2 Keyboard/Mouse Combo Port (CN22)..... | 40 |
| 2.4.19 | Touchscreen Connector (CN23)..... | 40 |
| 2.4.20 | CPU FAN (Optional) (CN24)..... | 43 |
| 2.4.21 | USB Ports 0 and 1 (CN25)..... | 43 |
| 2.4.22 | LAN (RJ-45) Port2 (CN26)..... | 44 |
| 2.4.23 | LAN (RJ-45) Port1 (CN27)..... | 45 |
| 2.4.24 | COM Port 1 (D-SUB 9) (CN28)..... | 46 |
| 2.4.25 | HDMI Port (CN29)..... | 46 |
| 2.4.26 | VGA Port (CN30)..... | 47 |
| 2.4.27 | Battery (CN31)..... | 48 |
| 2.4.28 | CFast Slot (CN33)..... | 49 |
| 2.4.29 | DDR3L SO-DIMM Slot (CN34)..... | 50 |
| 2.4.30 | UIM Card Socket (CN35)..... | 50 |
| 2.4.31 | Mini-Card Slot (Full Mini-Card) (CN37)..... | 50 |
| Chapter 3 - AMI BIOS Setup..... | | 53 |
| 3.1 | System Test and Initialization..... | 54 |
| 3.2 | AMI BIOS Setup..... | 55 |
| 3.3 | Setup Submenu: Main..... | 56 |
| 3.4 | Setup Submenu: Advanced..... | 57 |
| 3.4.1 | Power Management..... | 58 |

| | | |
|--|------------------------------------|-----------|
| 3.4.1.1 | S5 RTC Wake Settings | 60 |
| 3.4.2 | Super IO Configuration..... | 61 |
| 3.4.2.1 | Serial Port 1 Configuration | 62 |
| 3.4.2.2 | Serial Port 2 Configuration..... | 63 |
| 3.4.2.3 | Serial Port 3 Configuration..... | 64 |
| 3.4.2.4 | Serial Port 4 Configuration..... | 65 |
| 3.4.2.5 | Smart Fan Mod Configuration | 66 |
| 3.4.3 | Digital IO..... | 68 |
| 3.4.4 | Hardware Monitor..... | 69 |
| 3.4.5 | CPU Configuration..... | 70 |
| 3.4.5.1 | Socket 0 CPU Information..... | 71 |
| 3.4.6 | IDE Configuration..... | 72 |
| 3.4.7 | CSM Configuration | 74 |
| 3.4.8 | Trusted Computing | 76 |
| 3.4.9 | USB Configuration | 77 |
| 3.4.10 | Touch Device | 78 |
| 3.5 | Setup Submenu: Chipset | 79 |
| 3.5.1 | North Bridge | 80 |
| 3.5.1.1 | LVDS Panel Configuration | 81 |
| 3.5.2 | South Bridge | 84 |
| 3.5.2.1 | Azalia HD Audio..... | 85 |
| 3.5.2.2 | USB Configuration | 86 |
| 3.5.2.3 | PCI Express Configuration..... | 87 |
| 3.6 | Setup Submenu: Security..... | 88 |
| 3.7 | Setup Submenu: Boot | 89 |
| 3.8 | Setup Submenu: Save & Exit..... | 90 |
| Chapter 4 – Drivers Installation..... | | 91 |
| 4.1 | Driver Download/Installation | 92 |

| | |
|---|------------|
| Appendix A - Watchdog Timer Programming | 99 |
| A.1 Watchdog Timer Registers | 100 |
| A.2 Watchdog Sample Program..... | 101 |
| Appendix B - I/O Information | 104 |
| B.1 I/O Address Map | 105 |
| B.2 Memory Address Map | 106 |
| B.3 IRQ Mapping Chart..... | 107 |
| B.4 DMA Channel Assignments | 110 |
| Appendix C – Mating Connectors | 111 |
| C.1 List of Mating Connectors and Cables..... | 112 |
| Appendix D – Electrical Specifications for I/O Ports | 114 |
| D.1 Electrical Specifications for I/O Ports..... | 115 |

Chapter 1

Product Specifications

1.1 Specifications

System

| | |
|---------------------|---|
| Form Factor | 3.5" Subcompact Board |
| Processor | Intel® Atom™/ Celeron® Processor: Celeron® J1900 (4C/4T, 2.00GHz, up to 2.42GHz) Celeron® N2930 (4C/4T, 1.83GHz, up to 2.16GHz) Celeron® N2807 (2C/2T, 1.58GHz, up to 2.16GHz) Atom™ E3845 (4C/4T, 1.91 GHz) Atom™ E3825 (2C/2T, 1.33 GHz) |
| CPU TDP | Celeron® J1900 10W Celeron® N2930 7.5W Celeron® N2807 4.3W Atom™ E3845 10W Atom™ E3825 6.0W |
| Chipset | Integrated with Intel® SoC |
| Memory Type | DDR3L up to 1333MHz, SODIMM x 1 |
| ECC Support | Non-ECC |
| Max Memory Capacity | 8GB |
| BIOS | UEFI |
| Wake on LAN | Yes |
| Watchdog Timer | 255 Levels |
| Security | TPM 1.2 (Optional) |
| RTC Battery | Lithium Battery 3V/240mAH |

Power

| | |
|-----------------------------|---|
| Power Requirement | +12V Only |
| Power Supply Type | AT/ATX |
| Connector | Phoenix 2-pin Connector |
| Power Consumption (Typical) | 1.73A at +12V with Intel® Celeron® J1900, DDR3L 1600MHz 8GB memory |
| Power Consumption (Max) | 1.88A at +12V with Intel® Celeron® J1900, DDR3L 1600MHz 8GM memory |

Display

| | |
|--------------------------|--|
| Controller | Intel® HD Graphics for Intel Atom® Processor Z3700 Series |
| LVDS/eDP | LVDS Dual Channel 18/24bit x 1 |
| Display Interface | HDMI 1.4a x 1 VGA x 1 |
| Multiple Display Support | Up to 3 Simultaneous Displays |

Audio

| | |
|-----------------|------------------------|
| Codec | Realtek ALC897/892 |
| Audio Interface | Line-in/ Line-out/ Mic |
| Speaker | - |

External I/O

| | |
|-------------|--|
| Ethernet | Intel® i210/i211, 10/100/1000Base, RJ-45 x 2 |
| USB | USB3.2 Gen 1 x 1 USB2.0 x 1 |
| Serial Port | COM1 (RS232) |
| Video | HDMI 1.4a x 1 VGA x 1 |
| Power Input | Phoenix 2-pin Connector |

Internal I/O

| | |
|-------------|--|
| USB | USB2.0 x 2 |
| Serial Port | COM2, COM3 (RS232/422/485, supports 5V/12V/RI) COM4 (RS232) |
| Video | LVDS x 1 |
| SATA | SATA II x 1 +5V SATA Power Connector x 1 |
| Audio | Audio Header x 1 |
| DIO/GPIO | 8-bit |
| SMBus/I2C | I2C/SMBus x 1 (Default SMBus) |
| Touch | 4/5/8-wire Touch Controller x 1 (optional) |
| Fan | DC Fan x 1 (Optional: Smart Fan) |
| SIM | SIM x 1 |
| Front Panel | HDD LED, PWR LED, Power Button, Buzzer, Reset |
| Others | CFast™ (option with mSATA by BOM, occupies one Mini Card location) |

Expansion

| | |
|------------------|--|
| Mini PCIe/ mSATA | Full-Size mPCIe/ USB2.0 x 1 Half-Size mSATA/ mPCIe x 1 (Optional) |
| M.2 | - |
| BIO | - |

Mechanical

| | |
|--------------------|------------------------------|
| Dimensions (L x W) | 5.75" x 4" (146mm x 101.7mm) |
|--------------------|------------------------------|


Environment

| | |
|-----------------------|--|
| Operating Temperature | 32°F ~ 140°F (0°C ~ 60°C) |
| Storage Temperature | -40°F ~ 176°F (-40°C ~ 80°C) |
| Operating Humidity | 0% ~ 90% relative humidity, non-condensing |
| MTBF (Hours) | 344,859 |

Certification

| | |
|-----|----------------|
| EMC | CE/FCC Class A |
|-----|----------------|

1.2 Block Diagram

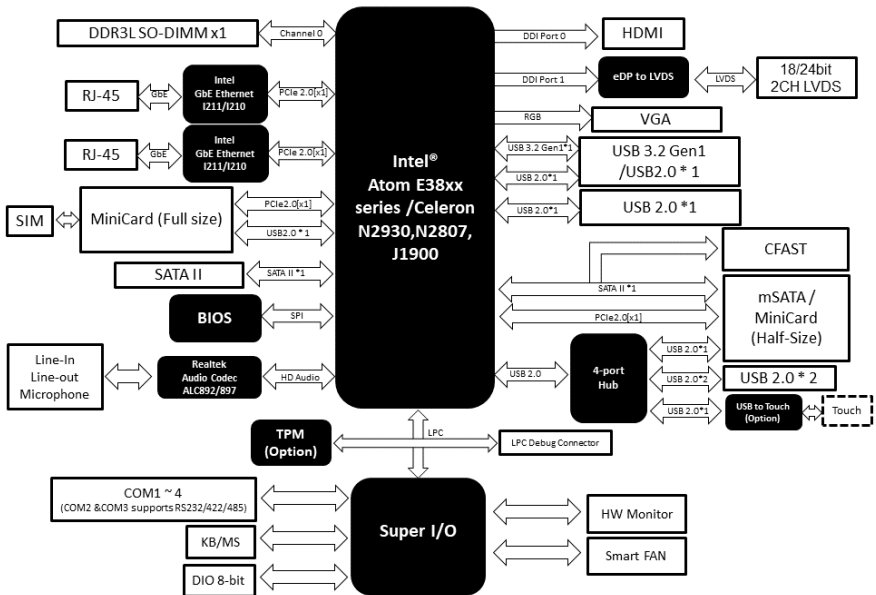


Chapter 2

Hardware Information

2.1 Dimensions


Standard Version (Component Side)

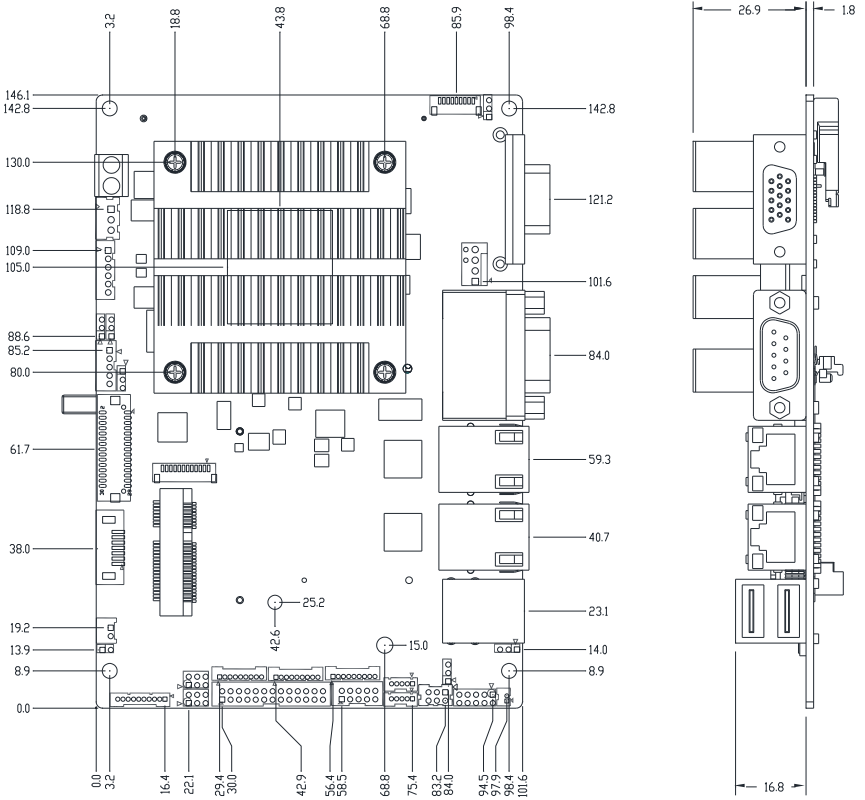

Standard Version (Solder Side)

3.5" Subcompact Board


GENE-BT05

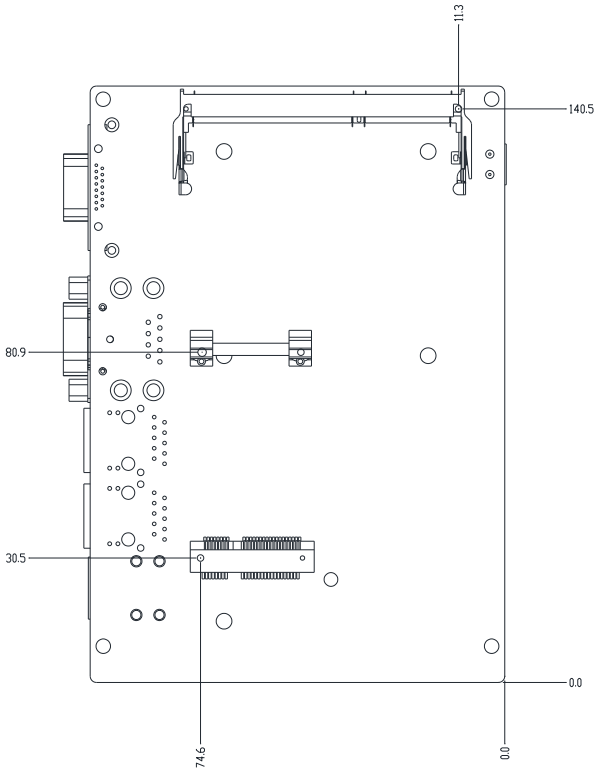


Advanced Version (Component Side)

3.5" Subcompact Board

GENE-BT05

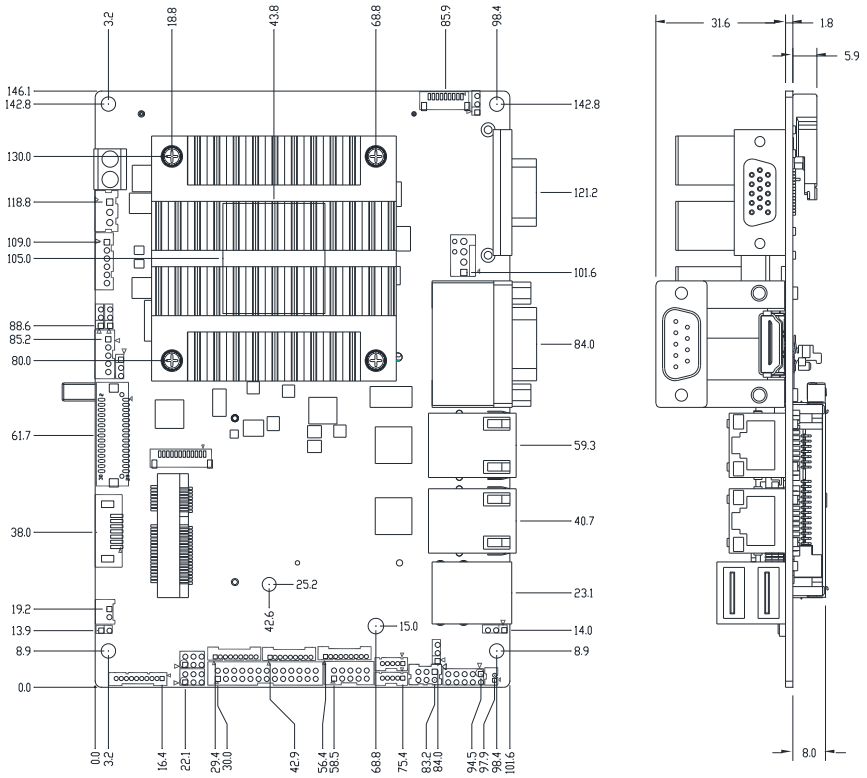


Advanced Version (Solder Side)

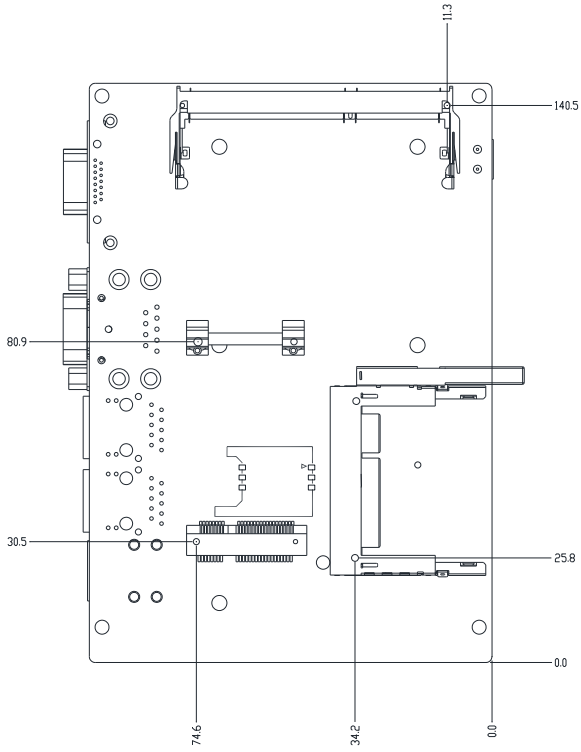


2.2 Jumpers and Connectors


Standard Version (Component Side)

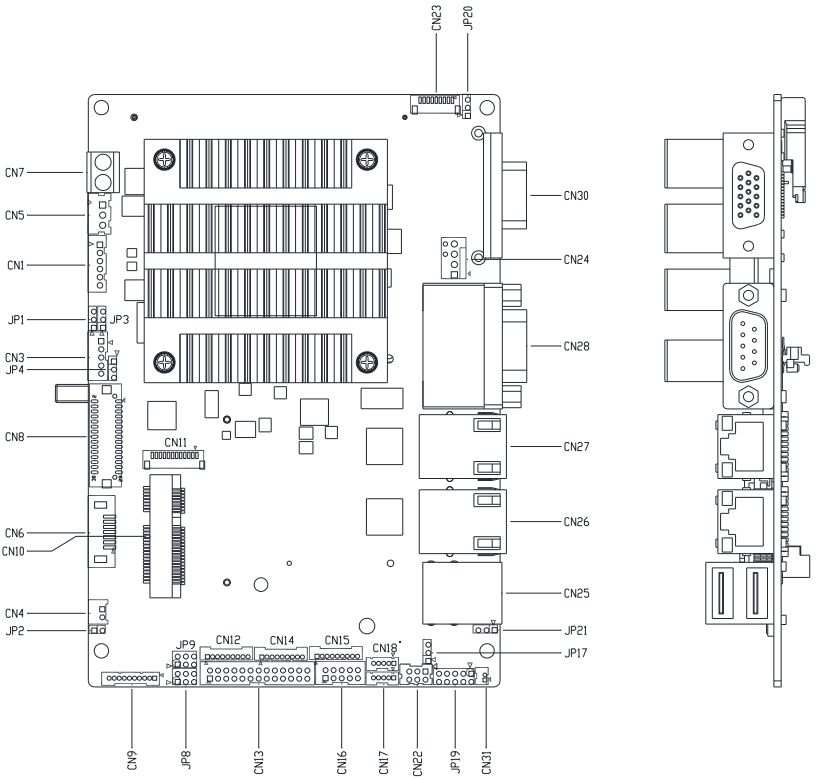


Standard Version (Solder Side)

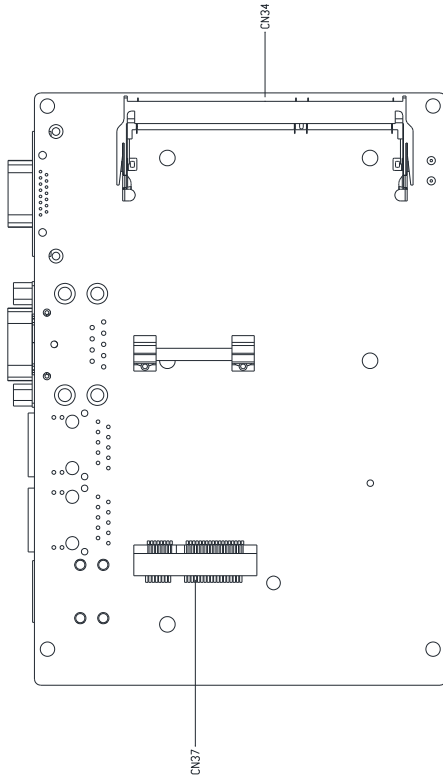

Advanced Version (Component Side)

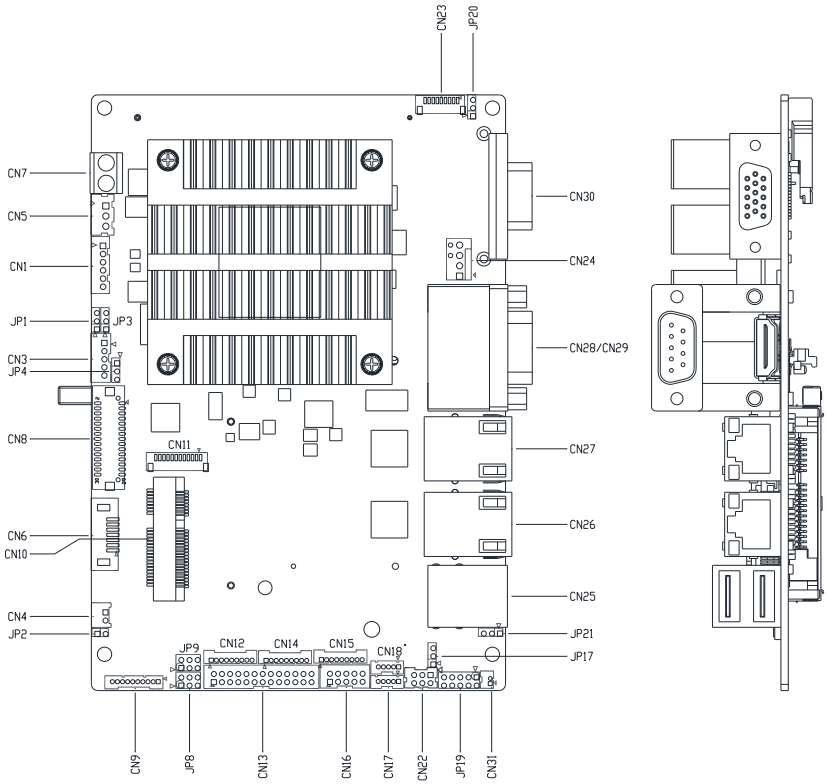

Advanced Version (Solder Side)

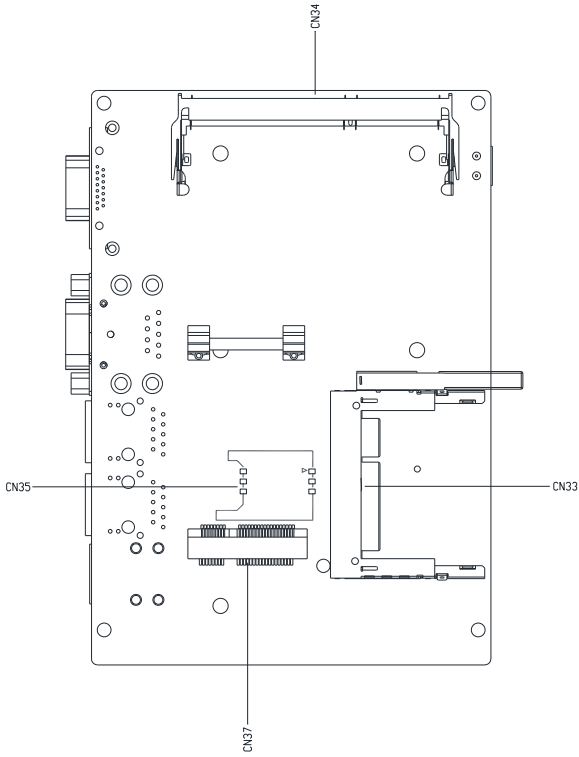


2.3 List of Jumpers


Please refer to the table below for all of the board's jumpers that you can configure for your application

| Label | Function |
|-------|--|
| JP1 | LVDS Port Backlight Inverter VCC Selection |
| JP3 | LVDS Port Backlight Lightness Control Mode Selection |
| JP4 | LVDS Port Operating VDD Selection |
| JP8 | COM3 Pin8 Function Selection |
| JP9 | COM2 Pin8 Function Selection |
| JP17 | Auto Power Button Enable/ Disable Selection |
| JP19 | Front Panel Connector |
| JP20 | Touch Screen 4/5/8-wire Mode Selection |
| JP21 | Clear CMOS Jumper |

2.3.1 LVDS Port Backlight Inverter VCC Selection (JP1)




+12V



+5V (Default)

2.3.2 LVDS Port Backlight Lightness Control Mode Selection (JP3)





VR Mode (Default)






PWM Mode




2.3.3 LVDS Port Operating VDD Selection (JP4)

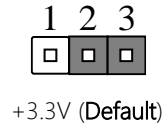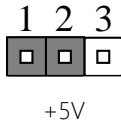



2.3.4 COM3 Pin8 Function Selection (JP8)

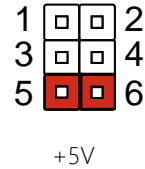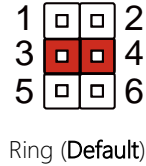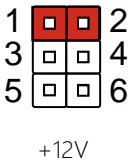


2.3.5 COM2 Pin8 Function Selection (JP9)

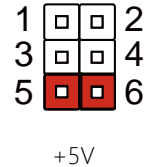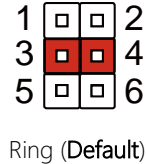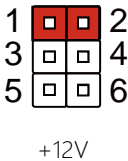

2.3.6 Auto Power Button Enable/Disable Selection (JP17)

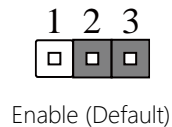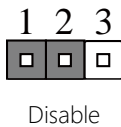


2.3.7 Front Panel Connector (JP19)

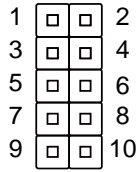


| Pin | Function | Pin | Function |
|-----|------------|-----|------------|
| 1 | PWR_BTN- | 2 | PWR_BTN+ |
| 3 | HDD_LED- | 4 | HDD_LED+ |
| 5 | SPEAKER- | 6 | SPEAKER+ |
| 7 | PWR_LED | 8 | PWR_LED+ |
| 9 | H/W RESET- | 10 | H/W RESET+ |

2.3.8 Touchscreen 4/ 5/ 8-Wire Selection (JP20)




4/8-Wire Mode (**Default**)




5-Wire Mode

2.3.9 Clear CMOS Jumper (JP21)



Normal (**Default**)



Clear CMOS


2.4 List of Connectors

Please refer to the table below for all of the board's connectors that you can configure for your application

| Label | Function |
|-------|--|
| CN1 | +5VSB Output w/SMBus |
| CN3 | LVDS Port Inverter / Backlight Connector |
| CN4 | +5V Output for SATA HDD |
| CN5 | External +5VSB Input |
| CN6 | SATA Port |
| CN7 | External +12V Input |
| CN8 | LVDS Port |
| CN9 | Audio I/O Port |
| CN10 | Mini Card Slot (Half-Size Mini Card) |
| CN11 | LPC Port |
| CN12 | COM Port 2 |
| CN14 | COM Port 3 |
| CN15 | COM Port 4 |
| CN16 | Digital IO Port |
| CN17 | USB 2.0 Port 3 |
| CN18 | USB 2.0 Port 2 |
| CN19 | SPI Debug Port |
| CN22 | PS/2 Keyboard/Mouse Combo Port |
| CN23 | Touchscreen Connector |
| CN24 | CPU FAN (Optional) |
| CN25 | USB Ports 0 and 1 |
| CN26 | LAN (RJ-45) Port2 |
| CN27 | LAN (RJ-45) Port1 |


| Label | Function |
|-------|--------------------------------------|
| CN28 | COM Port 1 (D-SUB 9) |
| CN29 | HDMI Port |
| CN30 | VGA Port |
| CN31 | Battery |
| CN33 | CFast Slot |
| CN34 | DDR3L SO-DIMM Slot |
| CN35 | UIM Card Socket |
| CN37 | Mini Card Slot (Full-Size Mini Card) |

2.4.1 +5VSB Output w/SMBus (CN1)

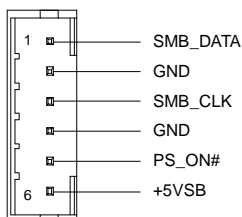

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | SMB_DATA | I/O | +3.3V |
| 2 | GND | GND | |
| 3 | SMB_CLK | I/O | +3.3V |
| 4 | GND | GND | |
| 5 | PS_ON# | OUT | +5V |
| 6 | +5VSB | PWR | +5V |

2.4.2 LVDS Port Inverter / Backlight Connector (CN3)

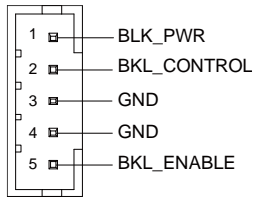


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | BKL_PWR | PWR | +5V / +12V |
| 2 | BKL_CONTROL | OUT | |
| 3 | GND | GND | |
| 4 | GND | GND | |
| 5 | BKL_ENABLE | OUT | +3.3V |

Note 1: LVDS BKL_PWR can be set to +5V or +12V by JP1.

Note 2: LVDS BKL_CONTROL can be set by JP3.

Note 3: Driving current of Pin 1/BKL_PWR supports up to 1.5A.


2.4.3 +5V Output for SATA HDD (CN4)

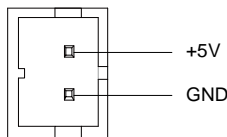

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | +5V | PWR | +5V |
| 2 | GND | GND | |

Note: Maximum current rating of Pin 1/+5V is 1.0A


2.4.4 External +5VSB Input (CN5)

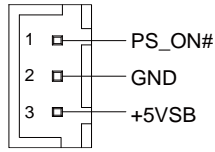

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | PS_ON# | OUT | +3.3V |
| 2 | GND | GND | |
| 3 | +5VSB | PWR | +5V |


Note: Since every power supply discharge design is different, it is recommended to wait at least 3 seconds before restarting after shutting down to ensure ATX power is fully discharged; or make sure 5V standby power has been discharged to below 2V.

2.4.5 SATA Port (CN6)

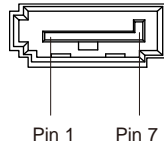


| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | GND | GND | |
| 2 | SATA_TX+ | DIFF | |
| 3 | SATA_TX- | DIFF | |
| 4 | GND | GND | |
| 5 | SATA_RX- | DIFF | |
| 6 | SATA_RX+ | DIFF | |
| 7 | GND | GND | |

2.4.6 External +12V Input (CN7)

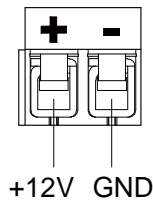

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | +12V | PWR | +12V |
| 2 | GND | GND | |

2.4.7 LVDS Port (CN8)

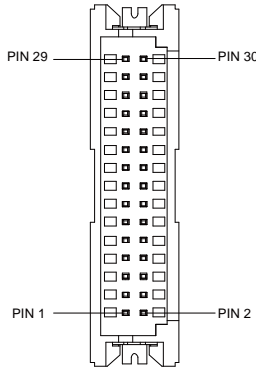


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | BKL_ENABLE | OUT | |
| 2 | BKL_CONTROL | OUT | |
| 3 | LCD_PWR | PWR | +3.3V/+5V |
| 4 | GND | GND | |
| 5 | LVDS_A_CLK- | DIFF | |
| 6 | LVDS_A_CLK+ | DIFF | |
| 7 | LCD_PWR | PWR | +3.3V/+5V |
| 8 | GND | GND | |
| 9 | LVDS_DA0- | DIFF | |
| 10 | LVDS_DA0+ | DIFF | |
| 11 | LVDS_DA1- | DIFF | |
| 12 | LVDS_DA1+ | DIFF | |
| 13 | LVDS_DA2- | DIFF | |
| 14 | LVDS_DA2+ | DIFF | |
| 15 | LVDS_DA3- | DIFF | |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 16 | LVDS_DA3+ | DIFF | |
| 17 | DDC_DATA | I/O | +3.3V |
| 18 | DDC_CLK | I/O | +3.3V |
| 19 | LVDS_DB0- | DIFF | |
| 20 | LVDS_DB0+ | DIFF | |
| 21 | LVDS_DB1- | DIFF | |
| 22 | LVDS_DB1+ | DIFF | |
| 23 | LVDS_DB2- | DIFF | |
| 24 | LVDS_DB2+ | DIFF | |
| 25 | LVDS_DB3- | DIFF | |
| 26 | LVDS_DB3+ | DIFF | |
| 27 | LCD_PWR | PWR | +3.3V/+5V |
| 28 | GND | GND | |
| 29 | LVDS_B_CLK- | DIFF | |
| 30 | LVDS_B_CLK+ | DIFF | |

Note 1: LVDS LCD_PWR can be set to +3.3V or +5V by JP4.

Note 2: Driving current of LCD_PWR supports up to 2.0A


2.4.8 Audio I/O Port (CN9)

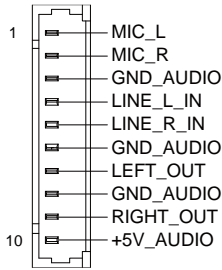

| Pin | Pin Name | Signal Type | Signal Level |
|-----|-----------|-------------|--------------|
| 1 | MIC_L | IN | |
| 2 | MIC_R | IN | |
| 3 | GND_AUDIO | GND | |
| 4 | LINE_L_IN | IN | |
| 5 | LINE_R_IN | IN | |
| 6 | GND_AUDIO | GND | |
| 7 | LEFT_OUT | OUT | |
| 8 | GND_AUDIO | GND | |
| 9 | RIGHT_OUT | OUT | |
| 10 | +5V_AUDIO | PWR | +5V |

Note: Maximum current rating of Pin 10/ +5V is 1.0A.

2.4.9 Mini-Card Slot (Half Mini-Card) (CN10)

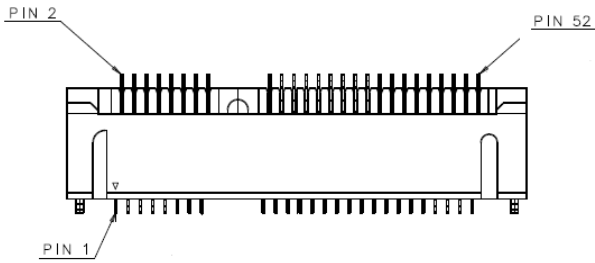

| Pin | Pin Name | Signal Type | Signal Level |
|-----|---------------|-------------|--------------|
| 1 | PCIE_WAKE# | IN | |
| 2 | +3.3VSB/+3.3V | PWR | +3.3V |
| 3 | NC | | |
| 4 | GND | GND | |
| 5 | NC | | |
| 6 | +1.5V | PWR | +1.5V |
| 7 | PCIE_CLK_REQ# | IN | |
| 8 | NC | | |
| 9 | GND | GND | |
| 10 | NC | | |
| 11 | PCIE_REF_CLK- | DIFF | |
| 12 | NC | | |
| 13 | PCIE_REF_CLK+ | DIFF | |
| 14 | NC | | |
| 15 | GND | GND | |
| 16 | NC | | |
| 17 | NC | | |


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------------|-------------|--------------|
| 18 | GND | GND | |
| 19 | NC | | |
| 20 | W_DISABLE# | OUT | +3.3V |
| 21 | GND | GND | |
| 22 | PCIE_RST# | OUT | +3.3V |
| 23 | PCIE_RX-/mSATARX+ | DIFF | |
| 24 | +3.3VSB/+3.3V | PWR | +3.3V |
| 25 | PCIE_RX+/mSATARX- | DIFF | |
| 26 | GND | GND | |
| 27 | GND | GND | |
| 28 | +1.5V | PWR | +1.5V |
| 29 | GND | GND | |
| 30 | SMB_CLK | I/O | +3.3V |
| 31 | PCIE_TX-/mSATATX- | DIFF | |
| 32 | SMB_DATA | I/O | +3.3V |
| 33 | PCIE_TX+/mSATATX+ | DIFF | |
| 34 | GND | GND | |
| 35 | GND | GND | |
| 36 | USB_D- | DIFF | |
| 37 | GND | GND | |
| 38 | USB_D+ | DIFF | |
| 39 | +3.3VSB/+3.3V | PWR | +3.3V |
| 40 | GND | GND | |
| 41 | +3.3VSB/+3.3V | PWR | +3.3V |
| 42 | NC | | |
| 43 | GND | GND | |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|---------------|-------------|--------------|
| 44 | NC | | |
| 45 | NC | | |
| 46 | NC | | |
| 47 | NC | | |
| 48 | +1.5V | PWR | +1.5V |
| 49 | NC | | |
| 50 | GND | GND | |
| 51 | NC | | |
| 52 | +3.3VSB/+3.3V | PWR | +3.3V |

Note 1: CN10 can be set for Mini Card or mSATA by through BOM Option.

Note 2: You can choose the function either from mSATA or from CFast on the motherboard.

2.4.10 LPC Port (CN11)

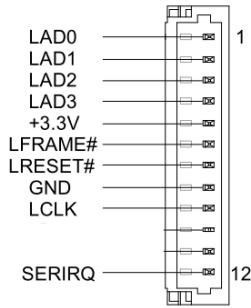


| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | LAD0 | I/O | +3.3V |
| 2 | LAD1 | I/O | +3.3V |
| 3 | LAD2 | I/O | +3.3V |
| 4 | LAD3 | I/O | +3.3V |
| 5 | +3.3V | PWR | +3.3V |
| 6 | LFRAME# | IN | |
| 7 | LRESET# | OUT | +3.3V |
| 8 | GND | GND | |
| 9 | LCLK | OUT | |
| 10 | NC | | |
| 11 | NC | | |
| 12 | SERIRQ | I/O | +3.3V |

2.4.11 COM Port 2 (CN12)

Note 1: COM2 RS-232/422/485 can be set by BIOS setting. Default is RS-232.


Note 2: Pin 8 function can be set by JP9.

Note 3: The maximum current rating of Pin 8 is 1.0A

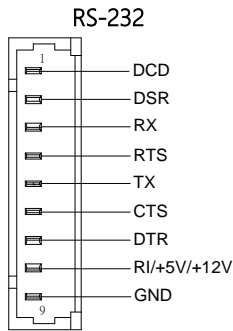


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | DCD | IN | |
| 2 | DSR | IN | |
| 3 | RX | IN | |
| 4 | RTS | OUT | ±5V |
| 5 | TX | OUT | ±5V |
| 6 | CTS | IN | |
| 7 | DTR | OUT | ±5V |
| 8 | RI/+5V/+12V | IN/ PWR | +5V/+12V |
| 9 | GND | GND | |

RS-422

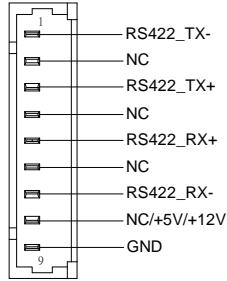

| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | RS422_TX- | OUT | ±5V |
| 2 | NC | | |
| 3 | RS422_TX+ | OUT | ±5V |
| 4 | NC | | |
| 5 | RS422_RX+ | IN | |
| 6 | NC | | |
| 7 | RS422_RX- | IN | |
| 8 | NC/+5V/+12V | PWR | +5V/+12V |
| 9 | GND | GND | |

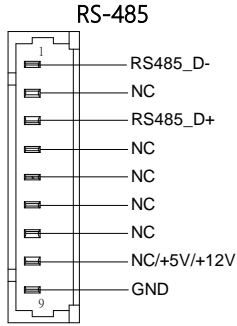


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | RS485_D- | I/O | ±5V |
| 2 | NC | | |
| 3 | RS485_D+ | I/O | ±5V |
| 4 | NC | | |
| 5 | NC | | |
| 6 | NC | | |
| 7 | NC | | |
| 8 | NC/+5V/+12V | PWR | +5V/+12V |
| 9 | GND | GND | |

2.4.12 COM Port 3 (CN14)

Note 1: COM3 RS-232/422/485 can be set by BIOS setting. Default is RS-232.


Note 2: Pin 8 function can be set by JP8.

Note 3: Maximum current rating of Pin 8 is 1.0A

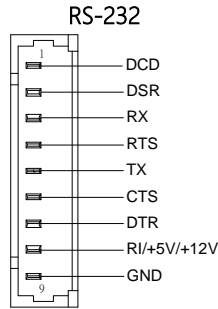


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | DCD | IN | |
| 2 | DSR | IN | |
| 3 | RX | IN | |
| 4 | RTS | OUT | ±5V |
| 5 | TX | OUT | ±5V |
| 6 | CTS | IN | |
| 7 | DTR | OUT | ±5V |
| 8 | RI/+5V/+12V | IN/ PWR | +5V/+12V |
| 9 | GND | GND | |

RS-422

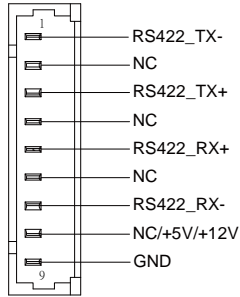


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | RS422_TX- | OUT | ±5V |
| 2 | NC | | |
| 3 | RS422_TX+ | OUT | ±5V |
| 4 | NC | | |
| 5 | RS422_RX+ | IN | |
| 6 | NC | | |
| 7 | RS422_RX- | IN | |
| 8 | NC/+5V/+12V | PWR | +5V/+12V |
| 9 | GND | GND | |

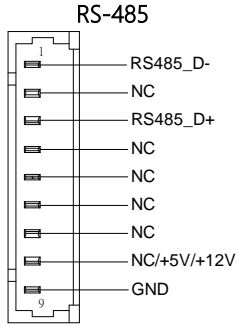


| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 1 | RS485_D- | I/O | ±5V |
| 2 | NC | | |
| 3 | RS485_D+ | I/O | ±5V |
| 4 | NC | | |
| 5 | NC | | |
| 6 | NC | | |
| 7 | NC | | |
| 8 | NC/+5V/+12V | PWR | +5V/+12V |
| 9 | GND | GND | |

2.4.13 COM Port 4 (CN15)

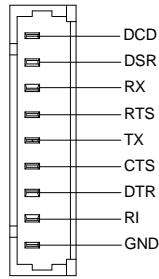

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | DCD | IN | |
| 2 | DSR | IN | |
| 3 | RX | IN | |
| 4 | RTS | OUT | ±9V |
| 5 | TX | OUT | ±9V |
| 6 | CTS | IN | |
| 7 | DTR | OUT | ±9V |
| 8 | RI | IN | |
| 9 | GND | GND | |


2.4.14 Digital I/O Port (CN16)

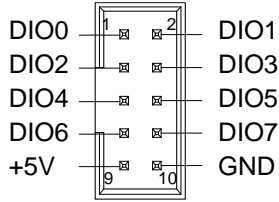

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | DIO0 | I/O | +5V |
| 2 | DIO1 | I/O | +5V |
| 3 | DIO2 | I/O | +5V |
| 4 | DIO3 | I/O | +5V |
| 5 | DIO4 | I/O | +5V |
| 6 | DIO5 | I/O | +5V |
| 7 | DIO6 | I/O | +5V |
| 8 | DIO7 | I/O | +5V |
| 9 | +5V | PWR | +5V |
| 10 | GND | GND | |

Note: Maximum current rating of Pin 9/+5V is 1.0A.


2.4.15 USB 2.0 Port 3 (CN17)

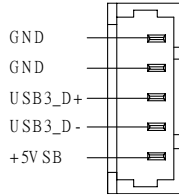

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | +5VSB | PWR | +5V |
| 2 | USB3_D- | DIFF | |
| 3 | USB3_D+ | DIFF | |
| 4 | GND | GND | |
| 5 | GND | GND | |

Note: Maximum current rating of Pin 1/+5V is 0.5A


2.4.16 USB 2.0 Port 2 (CN18)

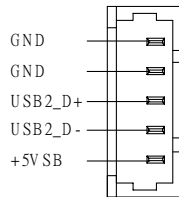

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | +5VSB | PWR | +5V |
| 2 | USB2_D- | DIFF | |
| 3 | USB2_D+ | DIFF | |
| 4 | GND | GND | |
| 5 | GND | GND | |


Note: Maximum current rating of Pin 1/+5V is 0.5A.

2.4.17 BIOS Debug Port (CN19)

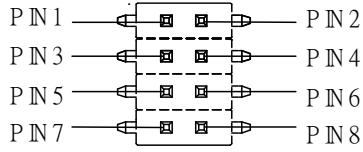

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | +3.3VSB | PWR | +3.3V |
| 2 | GND | GND | |
| 3 | SPI_CS | IN | |
| 4 | SPI_CLK | IN | |
| 5 | SPI_MISO | OUT | |
| 6 | SPI_MOSI | IN | |
| 7 | NC | | |
| 8 | NC | | |


2.4.18 PS/2 Keyboard/Mouse Combo Port (CN22)

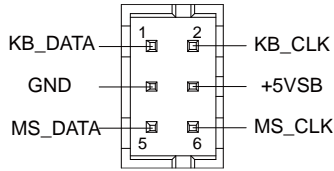

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | KB_DATA | I/O | +5V |
| 2 | KB_CLK | I/O | +5V |
| 3 | GND | GND | |
| 4 | +5VSB | PWR | +5V |
| 5 | MS_DATA | I/O | +5V |
| 6 | MS_CLK | I/O | +5V |


Note: Maximum current rating of Pin 4/+5V is 0.5A

2.4.19 Touchscreen Connector (CN23)

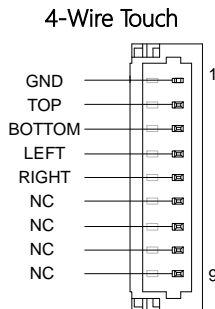


| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | GND | GND | |
| 2 | TOP | IN | |
| 3 | BOTTOM | IN | |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 4 | LEFT | IN | |
| 5 | RIGHT | IN | |
| 6 | NC | | |
| 7 | NC | | |
| 8 | NC | | |
| 9 | NC | | |

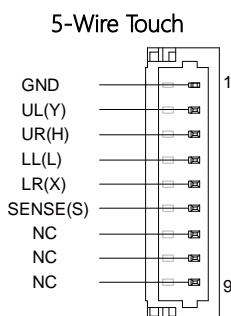

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | GND | GND | |
| 2 | UL(Y) | IN | |
| 3 | UR(H) | IN | |
| 4 | LL(L) | IN | |
| 5 | LR(X) | IN | |
| 6 | SENSE(S) | IN | |
| 7 | NC | | |
| 8 | NC | | |
| 9 | NC | | |


8-Wire Touch

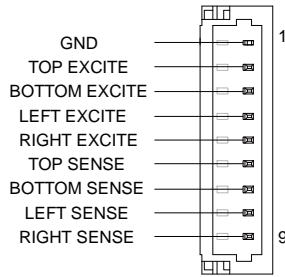

| Pin | Pin Name | Signal Type | Signal Level |
|-----|---------------|-------------|--------------|
| 1 | GND | GND | |
| 2 | TOP EXCITE | IN | |
| 3 | BOTTOM EXCITE | IN | |
| 4 | LEFT EXCITE | IN | |
| 5 | RIGHT EXCITE | IN | |
| 6 | TOP SENSE | IN | |
| 7 | BOTTOM SENSE | IN | |
| 8 | LEFT SENSE | IN | |
| 9 | RIGHT SENSE | IN | |

Note: Touch mode can be set by JP20


2.4.20 CPU FAN (Optional) (CN24)

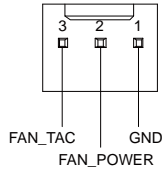

| Pin | Pin Name | Signal Type | Signal Level |
|-----|-----------|-------------|--------------|
| 1 | GND | GND | |
| 2 | FAN_POWER | PWR | +12V |
| 3 | FAN_TAC | IN | |

Note: Maximum current rating of Pin 2/FAN_POWER is 1.0A

2.4.21 USB Ports 0 and 1 (CN25)

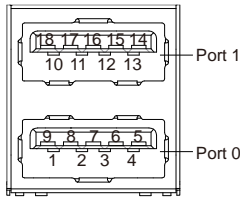


| Pin | Pin Name | Signal Type | Signal Level |
|-----|------------|-------------|--------------|
| 1 | +5VSB | PWR | +5V |
| 2 | USB0_D- | DIFF | |
| 3 | USB0_D+ | DIFF | |
| 4 | GND | GND | |
| 5 | USB0_SSRX- | DIFF | |
| 6 | USB0_SSRX+ | DIFF | |
| 7 | GND | GND | |
| 8 | USB0_SSTX- | DIFF | |
| 9 | USB0_SSTX+ | DIFF | |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 10 | +5VSB | PWR | +5V |
| 11 | USB1_D- | DIFF | |
| 12 | USB1_D+ | DIFF | |
| 13 | GND | GND | |
| 14 | NC | | |
| 15 | NC | | |
| 16 | GND | GND | |
| 17 | NC | | |
| 18 | NC | | |

Note 1: Only Port0 supports USB3.2 Gen 1.

Note 2: Maximum current rating of USB3.2 GEN1/+5V is 0.9A. Maximum current rating of USB2.0/+5V is 0.5A.


2.4.22 LAN (RJ-45) Port2 (CN26)

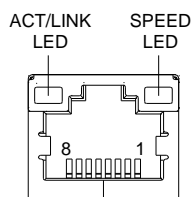

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | MDI0+ | DIFF | |
| 2 | MDI0- | DIFF | |
| 3 | MDI1+ | DIFF | |
| 4 | MDI2+ | DIFF | |
| 5 | MDI2- | DIFF | |
| 6 | MDI1- | DIFF | |


| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 7 | MDI3+ | DIFF | |
| 8 | MDI3- | DIFF | |

2.4.23 LAN (RJ-45) Port1 (CN27)

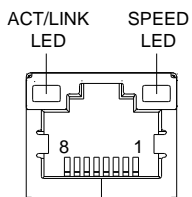

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | MDI0+ | DIFF | |
| 2 | MDI0- | DIFF | |
| 3 | MDI1+ | DIFF | |
| 4 | MDI2+ | DIFF | |
| 5 | MDI2- | DIFF | |
| 6 | MDI1- | DIFF | |
| 7 | MDI3+ | DIFF | |
| 8 | MDI3- | DIFF | |


2.4.24 COM Port 1 (D-SUB 9) (CN28)



| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | DCD | IN | |
| 2 | RX | IN | |
| 3 | TX | OUT | ±9V |
| 4 | DTR | OUT | ±9V |
| 5 | GND | GND | |
| 6 | DSR | IN | |
| 7 | RTS | OUT | ±9V |
| 8 | CTS | IN | |
| 9 | RI | IN | |

Note: COM Port 1 can be optionally configured for D-SUB9 or Wafer Box connector (CN20).


2.4.25 HDMI Port (CN29)

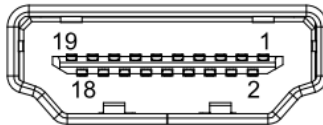

| Pin | Pin Name | Signal Type | Signal Level |
|-----|------------|-------------|--------------|
| 1 | TMDS_DAT2+ | DIFF | |
| 2 | GND | GND | |
| 3 | TMDS_DAT2- | DIFF | |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|-------------|-------------|--------------|
| 4 | TMDS_DAT1+ | DIFF | |
| 5 | GND | GND | |
| 6 | TMDS_DAT1- | DIFF | |
| 7 | TMDS_DAT0+ | DIFF | |
| 8 | GND | GND | |
| 9 | TMDS_DAT0- | DIFF | |
| 10 | TMDS_CLK+ | DIFF | |
| 11 | GND | GND | |
| 12 | TMDS_CLK- | DIFF | |
| 13 | NC | | |
| 14 | NC | | |
| 15 | DDC_CLK | I/O | +5V |
| 16 | DDC_DATA | I/O | +5V |
| 17 | GND | GND | |
| 18 | +5V | PWR | +5V |
| 19 | HPLG_DETECT | IN | |


2.4.26 VGA Port (CN30)



| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | RED | OUT | |
| 2 | GREEN | OUT | |
| 3 | BLUE | OUT | |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|---------------|-------------|--------------|
| 4 | NC | | |
| 5 | GND | GND | |
| 6 | RED_GND_RTN | GND | |
| 7 | GREEN_GND_RTN | GND | |
| 8 | BLUE_GND_RTN | GND | |
| 9 | +5V | PWR | +5V |
| 10 | CRT_PLUG# | | |
| 11 | NC | | |
| 12 | DDC_DATA | I/O | +5V |
| 13 | HSYNC | OUT | |
| 14 | VSYNC | OUT | |
| 15 | DDC_CLK | I/O | +5V |

2.4.27 Battery (CN31)



| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | +3.3V | PWR | +3.3V |
| 2 | GND | GND | |

2.4.28 CFast Slot (CN33)

| Pin | Pin Name | Signal Type | Signal Level |
|------|----------|-------------|--------------|
| S1 | GND | GND | |
| S2 | SATA_TX+ | DIFF | |
| S3 | SATA_TX- | DIFF | |
| S4 | GND | GND | |
| S5 | SATA_RX- | DIFF | |
| S6 | SATA_RX+ | DIFF | |
| S7 | GND | GND | |
| PC1 | NC | | |
| PC2 | GND | GND | |
| PC3 | NC | | |
| PC4 | NC | | |
| PC5 | NC | | |
| PC6 | NC | | |
| PC7 | GND | GND | |
| PC8 | NC | | |
| PC9 | NC | | |
| PC10 | NC | | |
| PC11 | NC | | |
| PC12 | NC | | |
| PC13 | +3.3V | PWR | +3.3V |
| PC14 | +3.3V | PWR | +3.3V |
| PC15 | GND | GND | |
| PC16 | GND | GND | |
| PC17 | NC | | |


2.4.29 DDR3L SO-DIMM Slot (CN34)

Standard Specifications

2.4.30 UIM Card Socket (CN35)

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 1 | UIM_PWR | PWR | |
| 2 | UIM_RST | IN | |
| 3 | UIM_CLK | IN | |
| 4 | GND | GND | |
| 5 | UIM_VPP | PWR | |
| 6 | UIM_DATA | I/O | |

2.4.31 Mini-Card Slot (Full Mini-Card) (CN37)

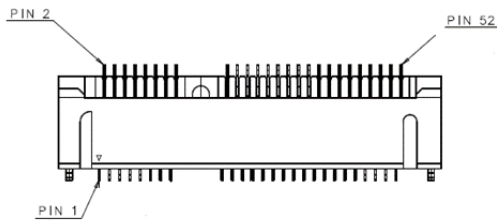

| Pin | Pin Name | Signal Type | Signal Level |
|-----|------------|-------------|--------------|
| 1 | PCIE_WAKE# | IN | |
| 2 | +3.3VSB | PWR | +3.3V |
| 3 | NC | | |
| 4 | GND | GND | |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|---------------|-------------|--------------|
| 5 | NC | | |
| 6 | +1.5V | PWR | +1.5V |
| 7 | PCIE_CLK_REQ# | IN | |
| 8 | UIM_PWR | PWR | |
| 9 | GND | GND | |
| 10 | UIM_DATA | I/O | |
| 11 | PCIE_REF_CLK- | DIFF | |
| 12 | UIM_CLK | IN | |
| 13 | PCIE_REF_CLK+ | DIFF | |
| 14 | UIM_RST | IN | |
| 15 | GND | GND | |
| 16 | UIM_VPP | PWR | |
| 17 | NC | | |
| 18 | GND | GND | |
| 19 | NC | | |
| 20 | W_DISABLE# | OUT | +3.3V |
| 21 | GND | GND | |
| 22 | PCIE_RST# | OUT | +3.3V |
| 23 | PCIE_RX- | DIFF | |
| 24 | +3.3VSB | PWR | +3.3V |
| 25 | PCIE_RX+ | DIFF | |
| 26 | GND | GND | |
| 27 | GND | GND | |
| 28 | +1.5V | PWR | +1.5V |
| 29 | GND | GND | |
| 30 | SMB_CLK | I/O | +3.3V |

| Pin | Pin Name | Signal Type | Signal Level |
|-----|----------|-------------|--------------|
| 31 | PCIE_TX- | DIFF | |
| 32 | SMB_DATA | I/O | +3.3V |
| 33 | PCIE_TX+ | DIFF | |
| 34 | GND | GND | |
| 35 | GND | GND | |
| 36 | USB_D- | DIFF | |
| 37 | GND | GND | |
| 38 | USB_D+ | DIFF | |
| 39 | +3.3VSB | PWR | +3.3V |
| 40 | GND | GND | |
| 41 | +3.3VSB | PWR | +3.3V |
| 42 | NC | | |
| 43 | GND | GND | |
| 44 | NC | | |
| 45 | NC | | |
| 46 | NC | | |
| 47 | NC | | |
| 48 | +1.5V | PWR | +1.5V |
| 49 | NC | | |
| 50 | GND | GND | |
| 51 | NC | | |
| 52 | +3.3VSB | PWR | +3.3V |

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The system uses certain routines to perform testing and initialization during the boot up sequence. If an error, fatal or non-fatal, is encountered, the system will output a few short beeps or an error message. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be output, and the BIOS setup program will need to be run to set the configuration information in memory.

There are three situations in which the CMOS settings will need to be set or changed:

Starting the system for the first time

The system hardware has been changed

The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention. The battery must be replaced when it runs down.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between elements

Advanced – Access advanced hardware settings and options

Chipset – Chipset settings and options including North Bridge and South Bridge settings.

Security – The setup administrator password can be set here


Boot – Boot options including BBS priority and Quiet Boot options

Save & Exit – Save your changes and exit the program


3.3 Setup Submenu: Main



3.4 Setup Submenu: Advanced

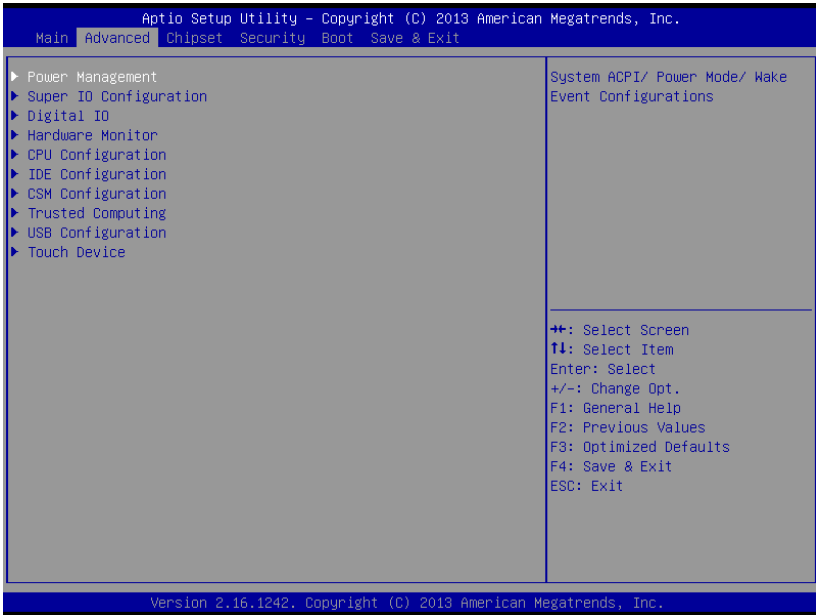

3.4.1 Power Management

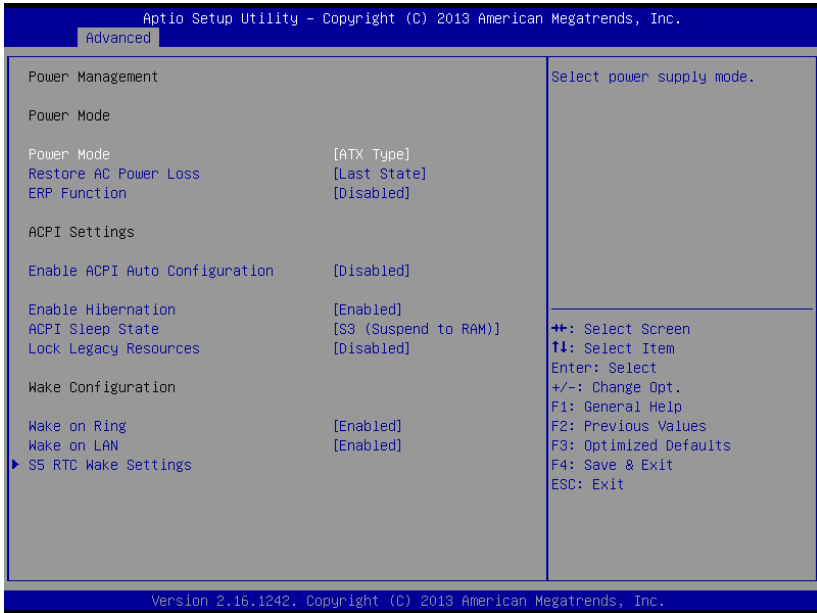


| Options Summary | | |
|--|------------|-----------------------------------|
| Power Mode | ATX Type | Optimal Default, Failsafe Default |
| | AT Type | |
| Select power supply mode | | |
| Restore AC Power Loss | Last State | Optimal Default, Failsafe Default |
| | Power On | |
| | Power Off | |
| Select AC power state when power is re-applied after a power failure | | |
| ERP Function | Disabled | Optimal Default, Failsafe Default |
| | Enabled | |
| Please set Auto Power Button as disable to use this item. | | |
| Enable ACPI Auto Configuration | Disabled | Optimal Default, Failsafe Default |
| | Enable | |
| Enables or Disables BIOS ACPI Auto Configuration | | |

Table Continues on Next Page...


| Options Summary | | |
|--|---------------------|-----------------------------------|
| Enable Hibernation | Disabled | Optimal Default, Failsafe Default |
| | Enable | |
| Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS | | |
| ACPI Sleep State | Suspend Disabled | |
| | S3 (Suspend to RAM) | Optimal Default, Failsafe Default |
| Select the highest ACPI sleep state the system will enter when the SUSOEND button is pressed. | | |
| Lock Legacy Resources | Disabled | Optimal Default, Failsafe Default |
| | Enable | |
| Enables or Disables Lock of Legacy Resources | | |
| Wake on Ring | Enable | Optimal Default, Failsafe Default |
| | Disable | |
| Enabled/Disabled wake from Ring | | |
| Wake on LAN | Enable | Optimal Default, Failsafe Default |
| | Disable | |
| Enabled/Disabled wake from LAN | | |

3.4.1.1 S5 RTC Wake Settings

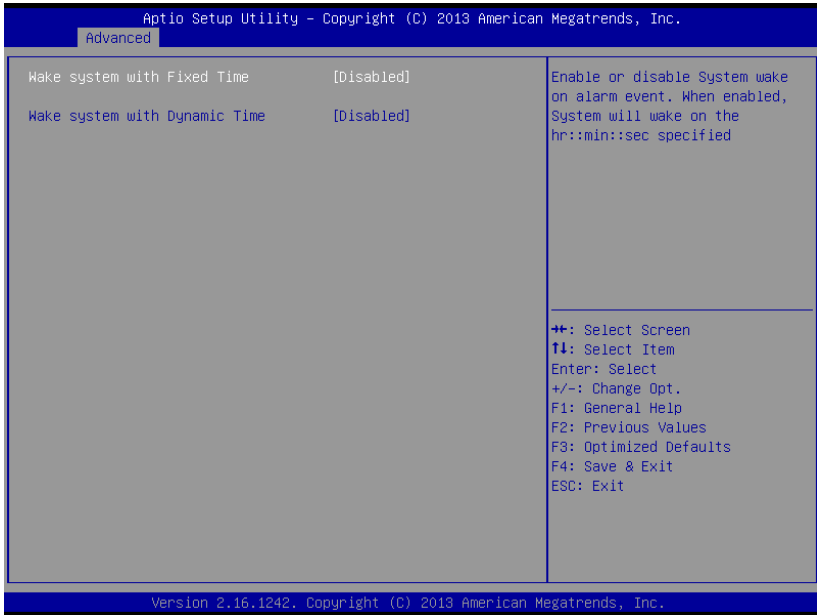


| Options Summary | | |
|---|-------------------------|-----------------------------------|
| Wake system with Fixed Time | Enable | |
| | Disable | Optimal Default, Failsafe Default |
| | Wake up day | 0 |
| | Wake up hour | 0 |
| | Wake up minute | 0 |
| | Wake up second | 0 |
| Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified | | |
| Wake system with Dynamic Time | Enable | |
| | Disable | Optimal Default, Failsafe Default |
| | Wake up minute increase | 1 |
| Enable or disable System wake on alarm event. When enabled, System will wake on the current time + Increase minute(s) | | |

3.4.2 Super IO Configuration

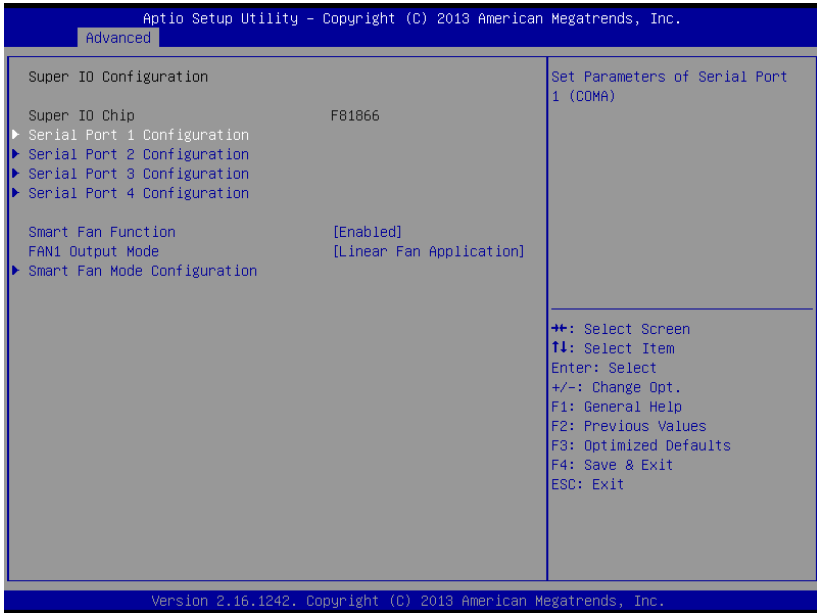


| Options Summary | | |
|--|------------------------------|-----------------------------------|
| Smart Fan Function | Enabled | Optimal Default, Failsafe Default |
| | Disabled | |
| Enable or Disable Smart Fan | | |
| FAN1 Output Mode | Output PWM mode (open drain) | |
| | Linear Fan Application | Optimal Default, Failsafe Default |
| | Output PWM mode (push pull) | |
| Output PWM mode (push pull) to control 4-wire fans. Linear fan application circuit to control 3-wire fan speed by fan's power terminal. Output PWM mode (open drain) to control Intel 4-wire fans. | | |

3.4.2.1 Serial Port 1 Configuration

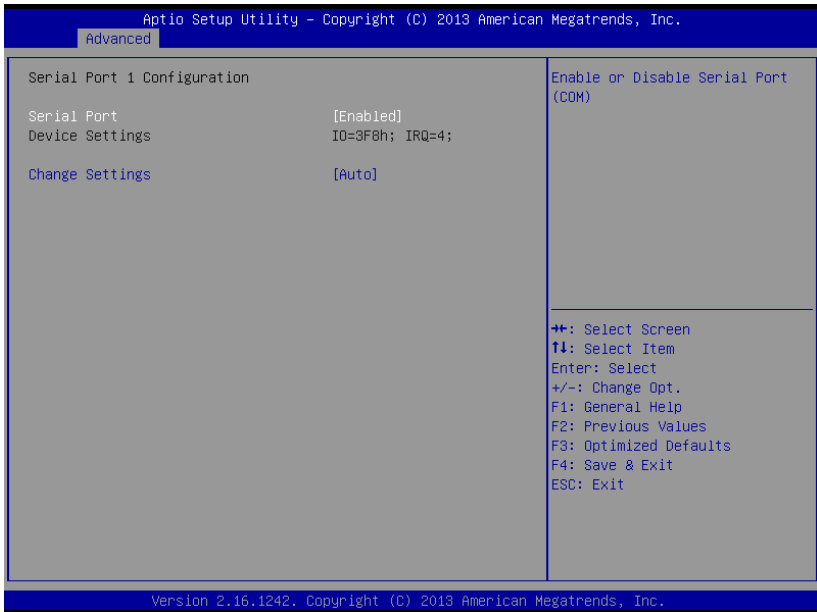


| Options Summary | | |
|---|----------------------------------|-----------------------------------|
| Serial Port | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable or Disable Serial Port (COM) | | |
| Change Settings | Auto | Optimal Default, Failsafe Default |
| | IO=3F8h; IRQ=4; | |
| | IO=3F8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=2F8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=3E8h; IRQ=3,4,5,7,9,10,11,12; | |
| IO=2F8h; IRQ=3,4,5,7,9,10,11,12; | | |
| Select an optimal setting for Super IO Device | | |

3.4.2.2 Serial Port 2 Configuration

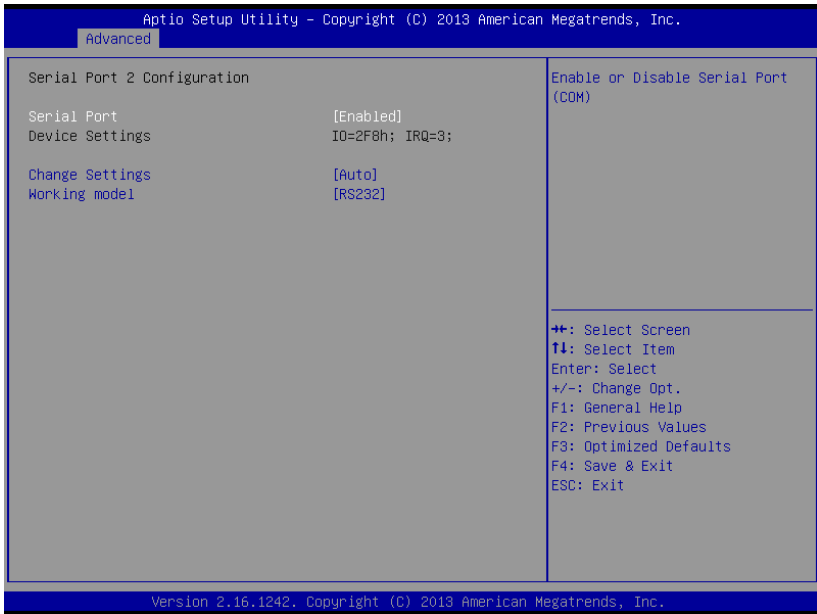


| Options Summary | | |
|---|----------------------------------|-----------------------------------|
| Serial Port | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable or Disable Serial Port (COM) | | |
| Change Settings | Auto | Optimal Default, Failsafe Default |
| | IO=2F8h; IRQ=3; | |
| | IO=3F8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=2F8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=3E8h; IRQ=3,4,5,7,9,10,11,12; | |
| Select an optimal setting for Super IO Device | | |
| Working model | RS422 | |
| | RS232 | Optimal Default, Failsafe Default |
| | RS485 | |
| Select working model | | |

3.4.2.3 Serial Port 3 Configuration

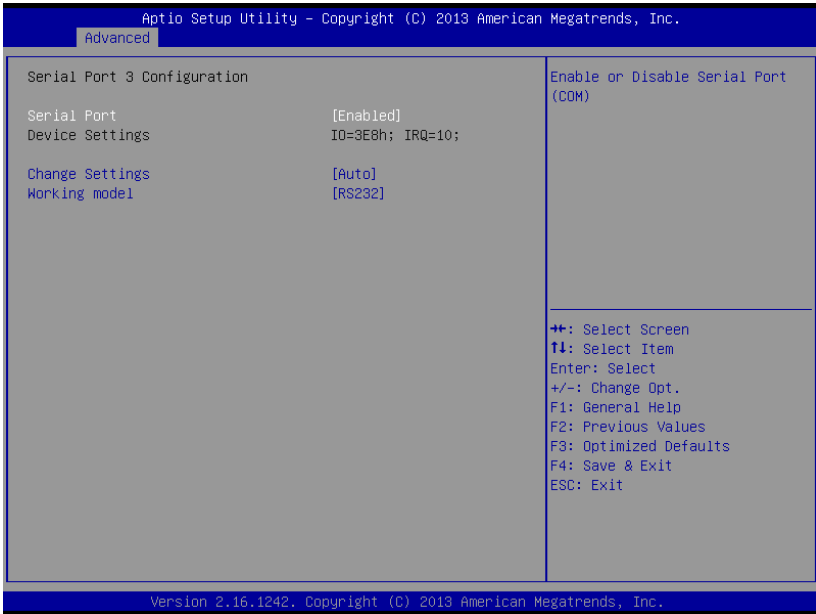

| Options Summary | | |
|---|----------------------------------|-----------------------------------|
| Serial Port | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable or Disable Serial Port (COM) | | |
| Change Settings | Auto | Optimal Default, Failsafe Default |
| | IO=3E8h; IRQ=10; | |
| | IO=3E8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=2E8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=2D0h; IRQ=3,4,5,7,9,10,11,12; | |
| Select an optimal setting for Super IO Device | | |
| Working model | RS422 | |
| | RS232 | Optimal Default, Failsafe Default |
| | RS485 | |
| Select working model | | |


3.4.2.4 Serial Port 4 Configuration

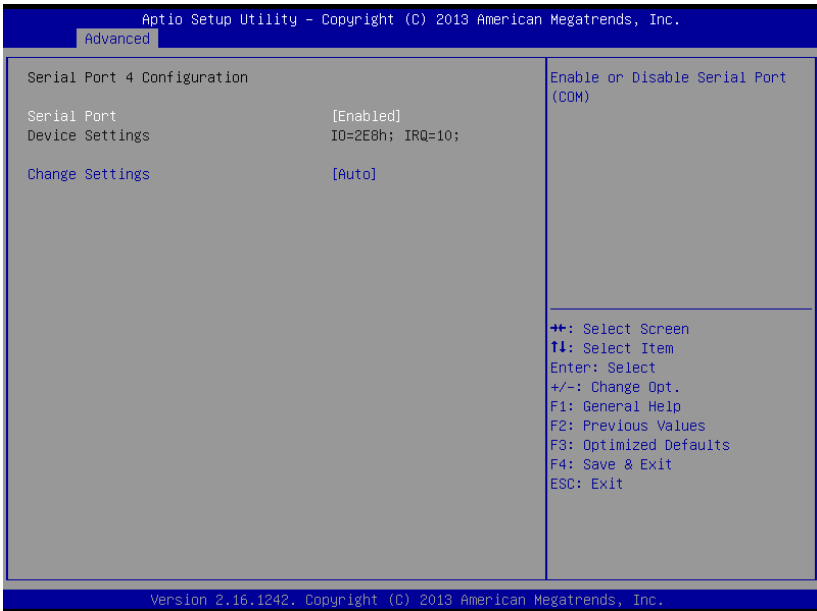

| Options Summary | | |
|---|----------------------------------|-----------------------------------|
| Serial Port | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable or Disable Serial Port (COM) | | |
| Change Settings | Auto | Optimal Default, Failsafe Default |
| | IO=2E8h; IRQ=10; | |
| | IO=3E8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=2E8h; IRQ=3,4,5,7,9,10,11,12; | |
| | IO=2D0h; IRQ=3,4,5,7,9,10,11,12; | |
| IO=2D8h; IRQ=3,4,5,7,9,10,11,12; | | |
| Select an optimal setting for Super IO Device | | |

3.4.2.5 Smart Fan Mod Configuration

Manual Duty Mode

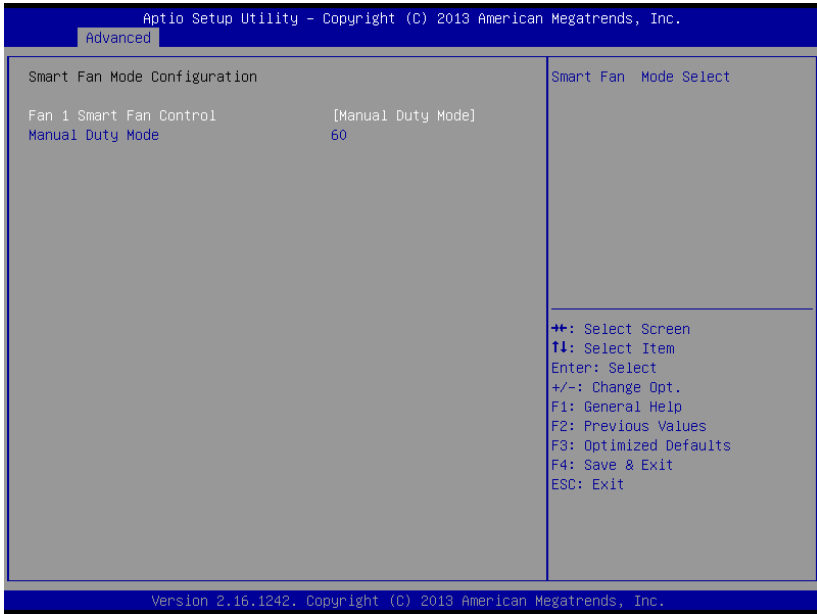

| Options Summary | | |
|--|----------------------|-----------------------------------|
| Fan 1 Smart Fan Control | Manual Duty Mode | Optimal Default, Failsafe Default |
| | Auto Duty-Cycle Mode | |
| Smart Fan Mode Select | | |
| Manual Duty Mode | 60 | Optimal Default, Failsafe Default |
| Manual mode fan control, user can write expected duty cycle (PWM fan type) 1-100 | | |


Auto Duty-Cycle Mode



Options Summary


| | | |
|---|----|---|
| Temperature 1 | 60 | The values shown in this table are the Optimal Default, Failsafe Default settings for each field. |
| Temperature 2 | 50 | |
| Temperature 3 | 40 | |
| Temperature 4 | 30 | |
| Duty Cycle 1 | 85 | |
| Duty Cycle 2 | 70 | |
| Duty Cycle 3 | 60 | |
| Duty Cycle 4 | 50 | |
| Auto fan speed control. Fan speed will follow different temperature by different duty cycle 1-100 | | |

3.4.3 Digital IO

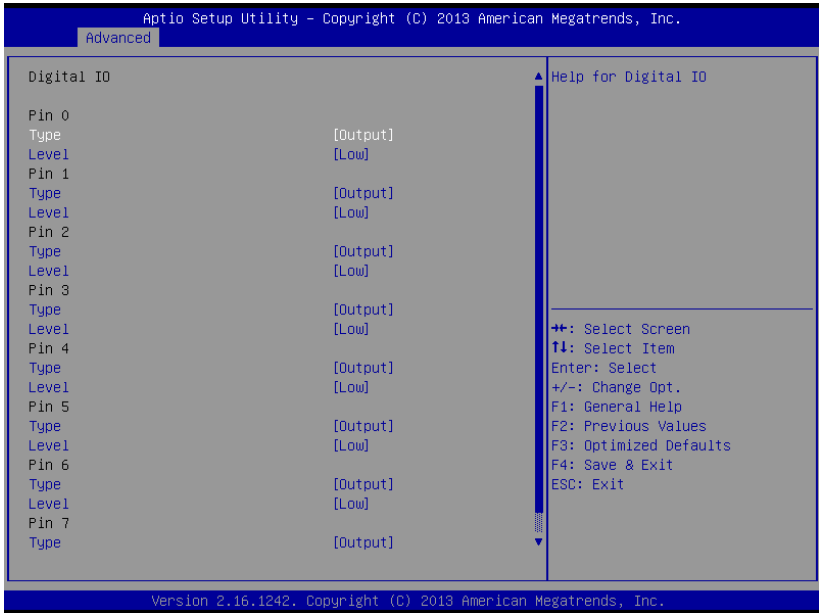


| Options Summary | | |
|---------------------|--------|-----------------------------------|
| Type | Output | Optimal Default, Failsafe Default |
| | Input | |
| Help for Digital IO | | |
| Level | Low | Optimal Default, Failsafe Default |
| | High | |
| Help for Digital IO | | |

3.4.4 Hardware Monitor

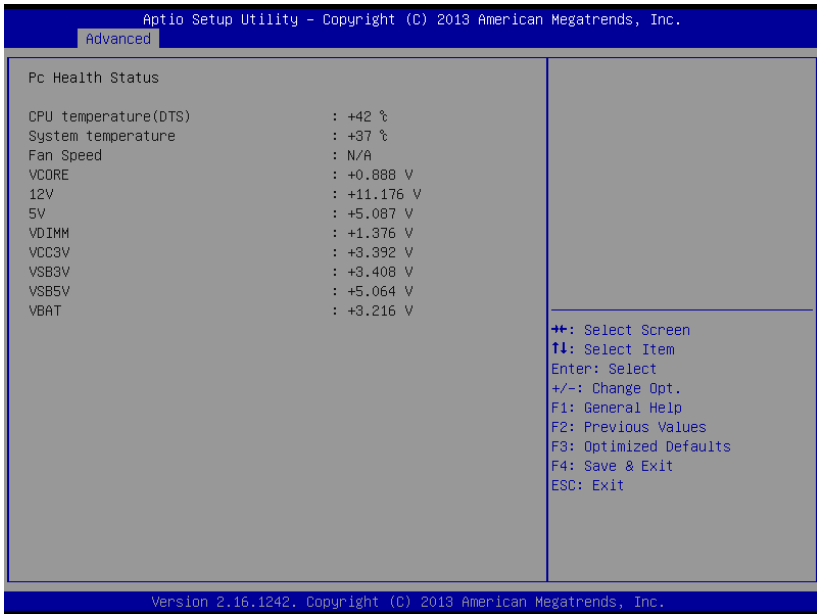


3.4.5 CPU Configuration

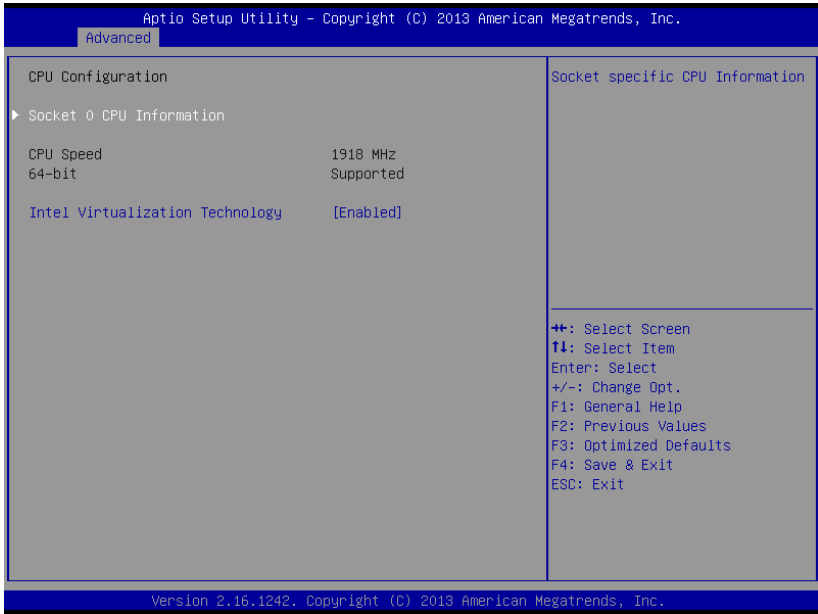


| Options Summary | | |
|--|----------|-----------------------------------|
| Intel Virtualization Technology | Disabled | Optimal Default, Failsafe Default |
| | Enabled | |
| When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology | | |

3.4.5.1 Socket 0 CPU Information

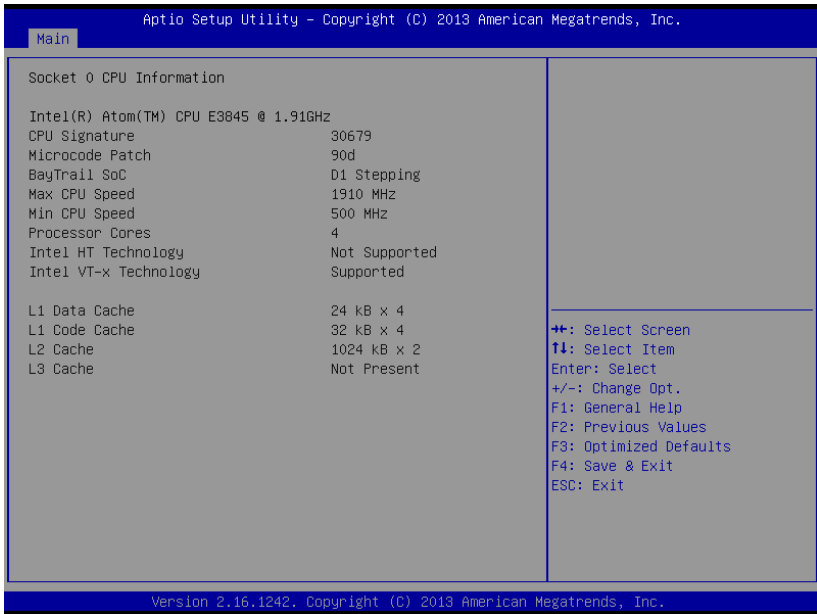

3.4.6 IDE Configuration

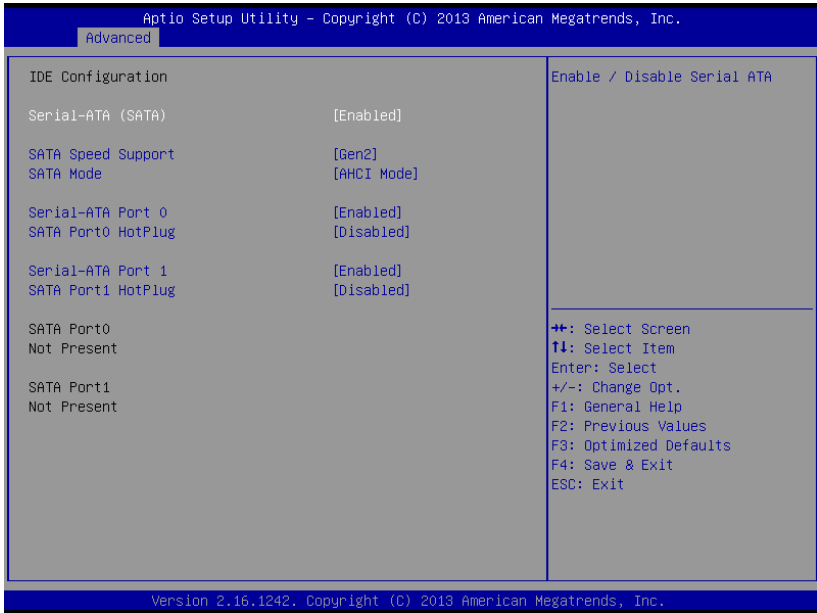


| Options Summary | | |
|--|-----------|-----------------------------------|
| Serial-ATA (SATA) | Enabled | Optimal Default, Failsafe Default |
| | Disabled | |
| Enable / Disable Serial ATA | | |
| SATA Speed Support | Gen1 | |
| | Gen2 | Optimal Default, Failsafe Default |
| SATA Speed Support Gen1 or Gen2 | | |
| SATA Mode | IDE Mode | |
| | AHCI Mode | Optimal Default, Failsafe Default |
| Enable/ Disable SATA Port | | |
| IDE: Configure SATA controllers as legacy IDE | | |
| AHCI: Configure SATA controllers to operate in AHCI mode | | |
| Serial-ATA Port 0 | Enabled | Optimal Default, Failsafe Default |
| | Disabled | |
| Enable / Disable Serial ATA Port 0 | | |

Table Continues on Next Page...

| Options Summary | | |
|-------------------------------------|----------|-----------------------------------|
| SATA Port0 HotPlug | Enabled | |
| | Disabled | Optimal Default, Failsafe Default |
| Enable / Disable SATA Port0 HotPlug | | |
| Serial-ATA Port 1 | Enabled | Optimal Default, Failsafe Default |
| | Disabled | |
| Enable / Disable Serial ATA Port 1 | | |
| SATA Port1 HotPlug | Enabled | |
| | Disabled | Optimal Default, Failsafe Default |
| Enable / Disable SATA Port1 HotPlug | | |

3.4.7 CSM Configuration

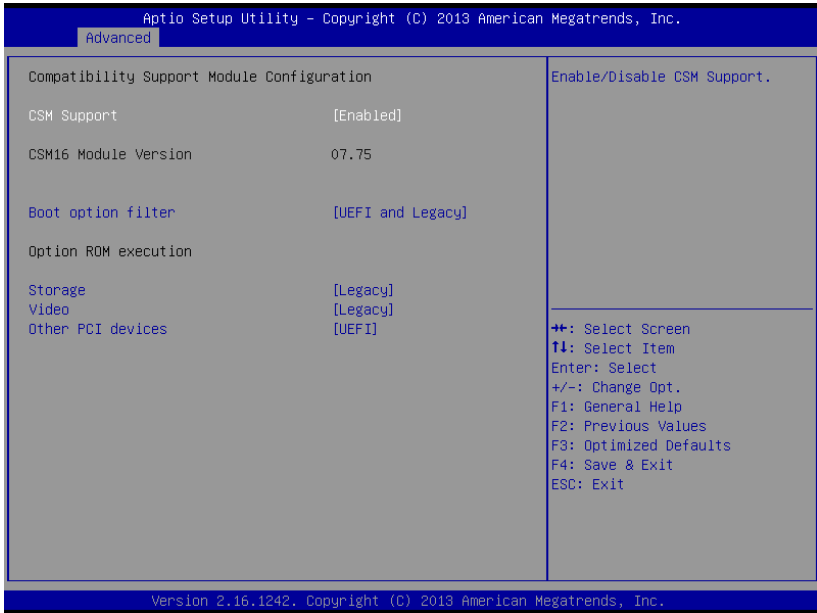

| Options Summary | | |
|---|-----------------|-----------------------------------|
| CSM Support | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable/ Disable CSM Support | | |
| Boot option filter | UEFI and Legacy | Optimal Default, Failsafe Default |
| | Legacy only | |
| | UEFI only | |
| This option controls Legacy/ UEFI ROMs priority | | |
| Storage | Do not launch | Optimal Default, Failsafe Default |
| | UEFI | |
| | Legacy | |
| Controls the execution of UEFI and Legacy Storage OpROM | | |
| Video | Do not launch | Optimal Default, Failsafe Default |
| | UEFI | |
| | Legacy | |
| Controls the execution of UEFI and Legacy Video OpROM | | |

Options Summary


| | | |
|--|--------|-----------------------------------|
| Other PCI devices | UEFI | Optimal Default, Failsafe Default |
| | Legacy | |
| Determines OpROM execution policy for devices other than Network, Storage or Video | | |

3.4.8 Trusted Computing




| Options Summary | | |
|--|----------|-----------------------------------|
| Security Device Support | Disabled | Optimal Default, Failsafe Default |
| | Enabled | |
| <p>Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.</p> | | |

3.4.9 USB Configuration

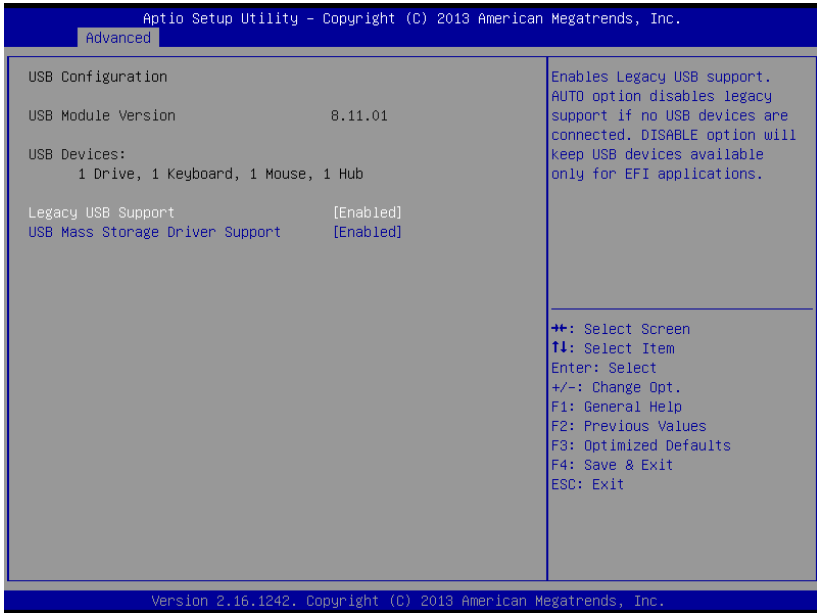


| Options Summary | | |
|--|----------|-----------------------------------|
| Legacy USB Support | Enabled | Optimal Default, Failsafe Default |
| | Disabled | |
| | Auto | |
| Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications. | | |
| USB Mass Storage Driver Support | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable/Disable USB Mass Storage Driver Support. | | |

3.4.10 Touch Device

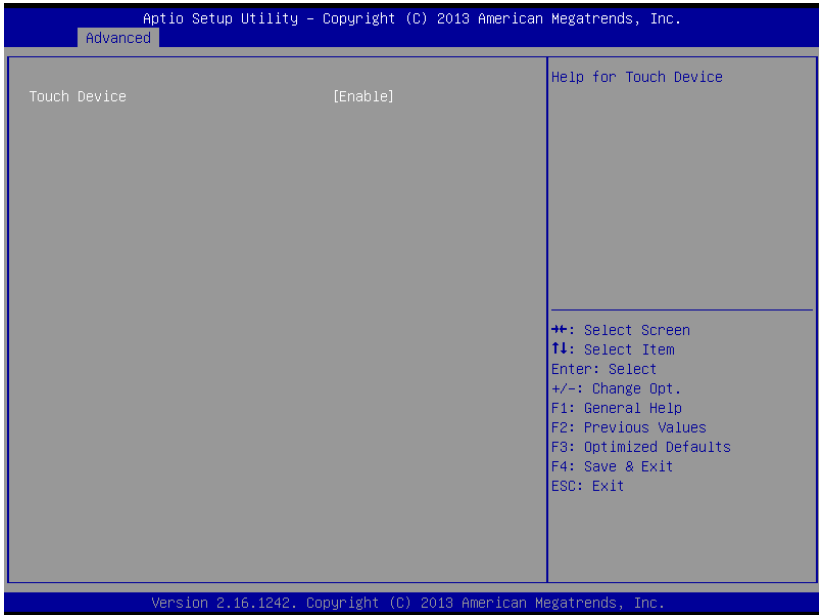


| Options Summary | | |
|-----------------------|---------|-----------------------------------|
| Touch Device | Enable | Optimal Default, Failsafe Default |
| | Disable | |
| Help for Touch Device | | |

3.5 Setup Submenu: Chipset

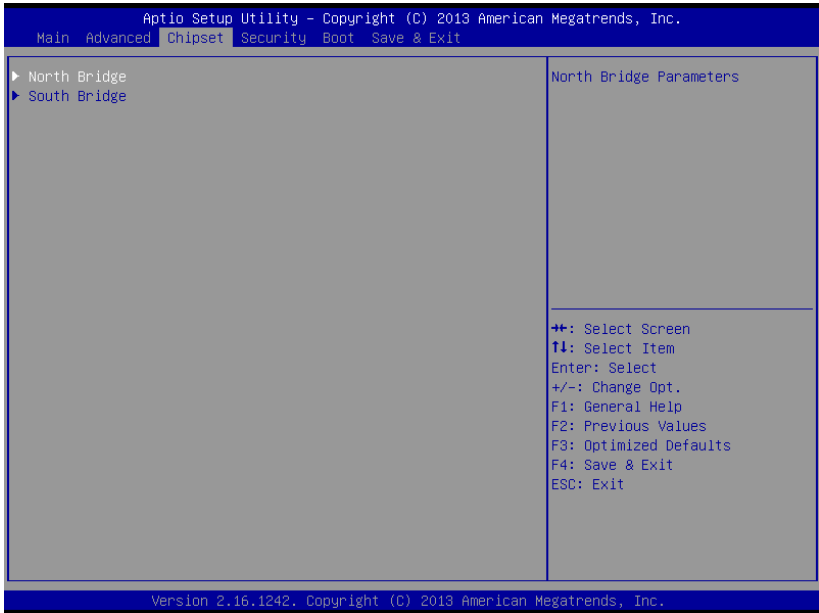


3.5.1 North Bridge

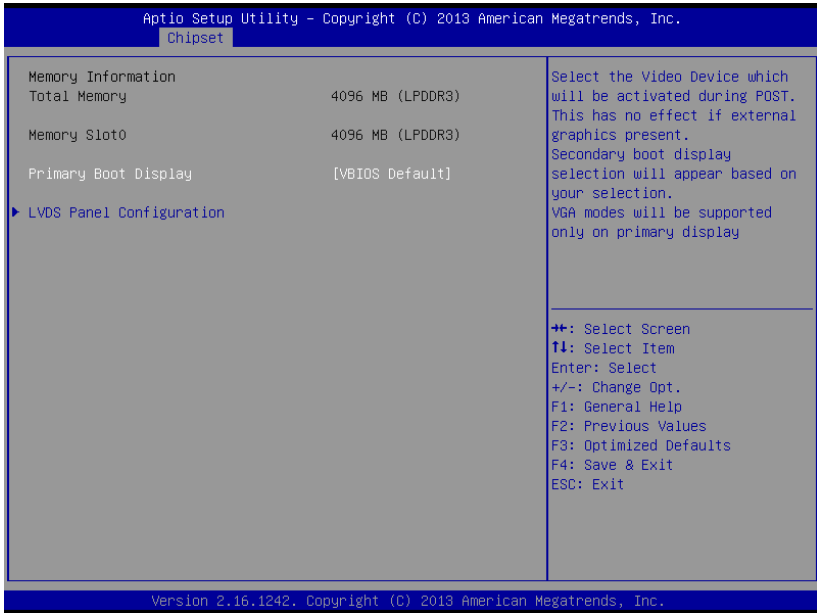

| Options Summary | | |
|--|---------------|-----------------------------------|
| Primary Boot Display | VBIOS Default | Optimal Default, Failsafe Default |
| | CRT | |
| | HDMI | |
| | LVDS | |
| <p>Select the Video Device which will be activated during POST. This has no effect if external graphics present.</p> <p>Secondary boot display selection will appear based on your selection.</p> <p>VGA modes will be supported only on primary display</p> | | |

3.5.1.1 LVDS Panel Configuration

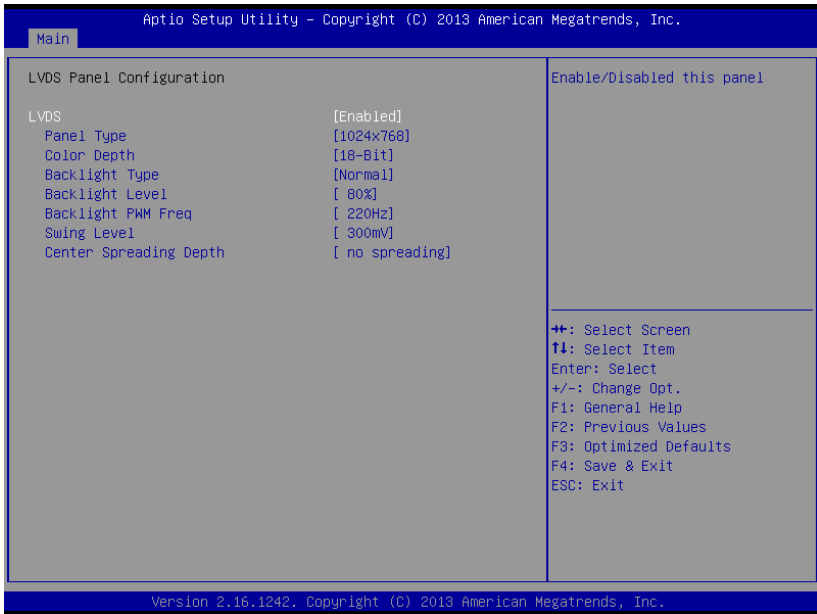


| Options Summary | | |
|-----------------------------|-----------|-----------------------------------|
| LVDS | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable/ Disabled this panel | | |
| Panel Type | 640x480 | |
| | 800x480 | |
| | 800x600 | |
| | 1024x600 | |
| | 1024x768 | Optimal Default, Failsafe Default |
| | 1280x768 | |
| | 1280x800 | |
| | 1280x1024 | |
| | 1366x768 | |
| | 1440x900 | |
| | 1600x1200 | |
| | 1920x1080 | |
| 1920x1200 | | |
| Select Panel Type | | |

| Options Summary | | |
|--|----------|-----------------------------------|
| Color Depth | 18-Bit | Optimal Default, Failsafe Default |
| | 24-Bit | |
| | 36-Bit | |
| | 48-Bit | |
| Select Color Depth | | |
| Backlight Type | Normal | Optimal Default, Failsafe Default |
| | Inverted | |
| Select backlight control signal type | | |
| Backlight Level | 0% | |
| | 10% | |
| | 20% | |
| | 30% | |
| | 40% | |
| | 50% | |
| | 60% | |
| | 70% | |
| | 80% | Optimal Default, Failsafe Default |
| | 90% | |
| 100% | | |
| Select backlight control level | | |
| Backlight PWM Freq | 100Hz | |
| | 200Hz | |
| | 220Hz | Optimal Default, Failsafe Default |
| | 500Hz | |
| | 1kHz | |
| | 2.2kHz | |
| | 6.5kHz | |
| Select PWM frequency of backlight control signal | | |
| Swing Level | 150mV | |
| | 200mV | |
| | 250mV | |
| | 300mV | Optimal Default, Failsafe Default |
| | 350mV | |
| | 400mV | |
| | 450mV | |
| Select Swing Level | | |


Table Continues on Next Page...

| Options Summary | | |
|-------------------------------|--------------|-----------------------------------|
| Center Spreading Depth | no spreading | Optimal Default, Failsafe Default |
| | 0.5% | |
| | 1.0% | |
| | 1.5% | |
| | 2.0% | |
| | 2.5% | |
| Select Center Spreading Depth | | |

3.5.2 South Bridge

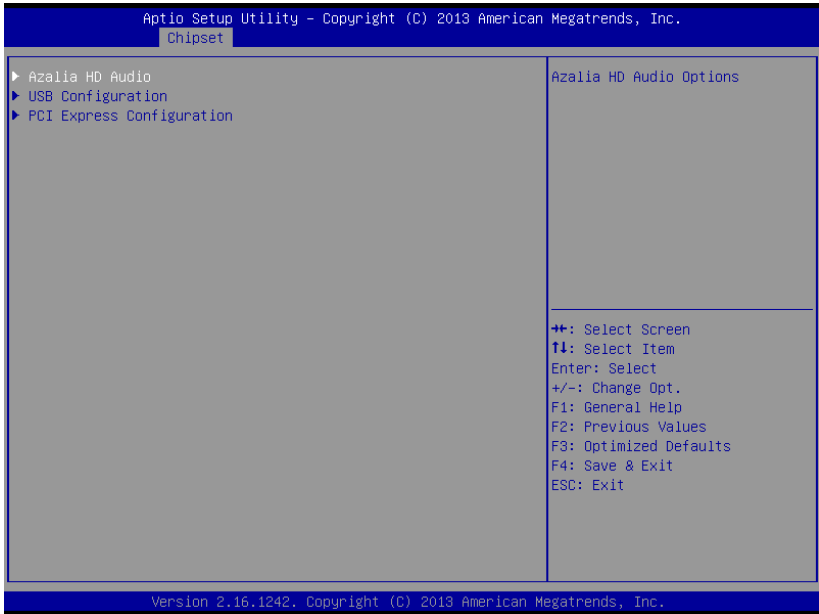


3.5.2.1 Azalia HD Audio

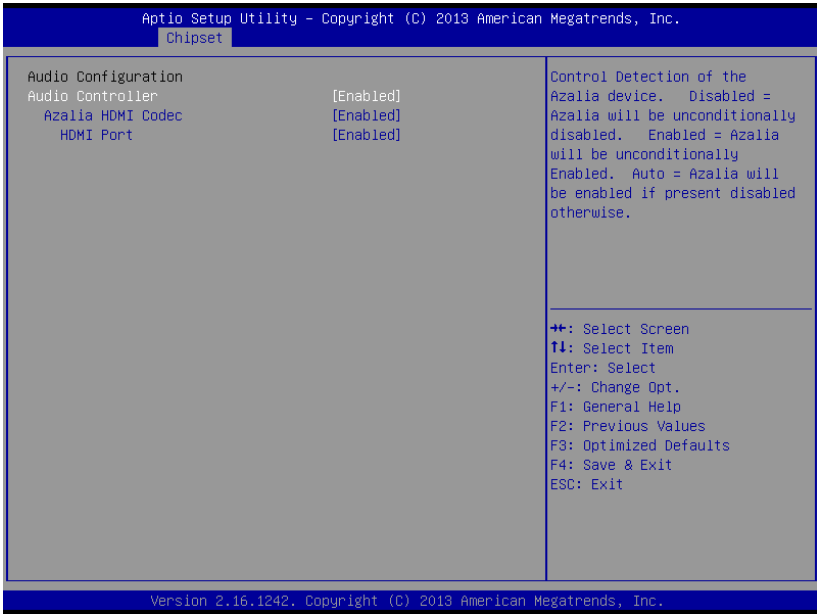


| Options Summary | | |
|--|----------|-----------------------------------|
| Audio Controller | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled. Enable = Azalia will be unconditionally Enabled. | | |
| Azalia HDMI Codec | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable/Disable internal HDMI Codec for Azalia | | |
| HDMI Port | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable/Disable HDMI Port | | |

3.5.2.2 USB Configuration

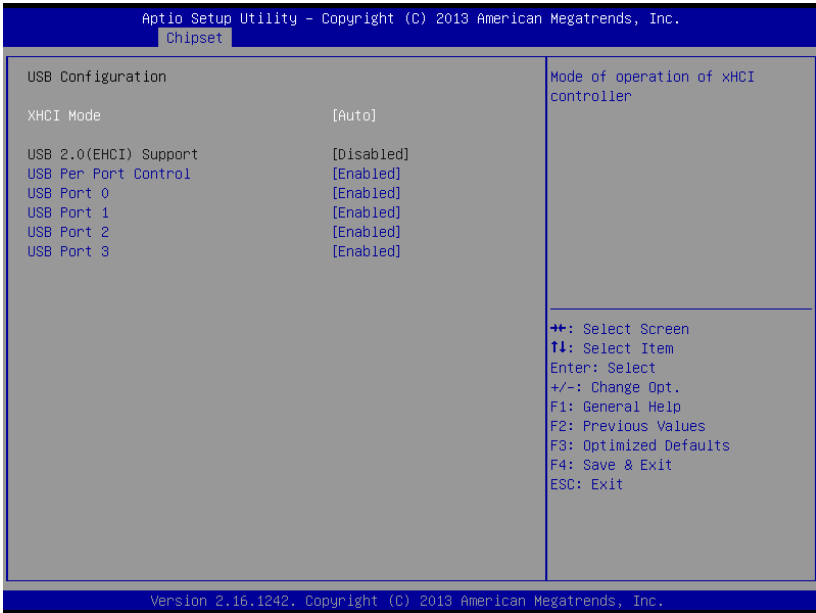


| Options Summary | | |
|--|------------|-----------------------------------|
| XHCI Mode | Enabled | |
| | Disabled | |
| | Auto | Optimal Default, Failsafe Default |
| | Smart Auto | |
| Mode of operation of xHCI controller | | |
| USB Per Port Control | Enabled | Optimal Default, Failsafe Default |
| | Disabled | |
| Control each of the USB ports (0~3). Enable: Enable USB per port; Disable: Use USB Port X settings | | |
| USB Port X | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable / Disable USB port X | | |

3.5.2.3 PCI Express Configuration

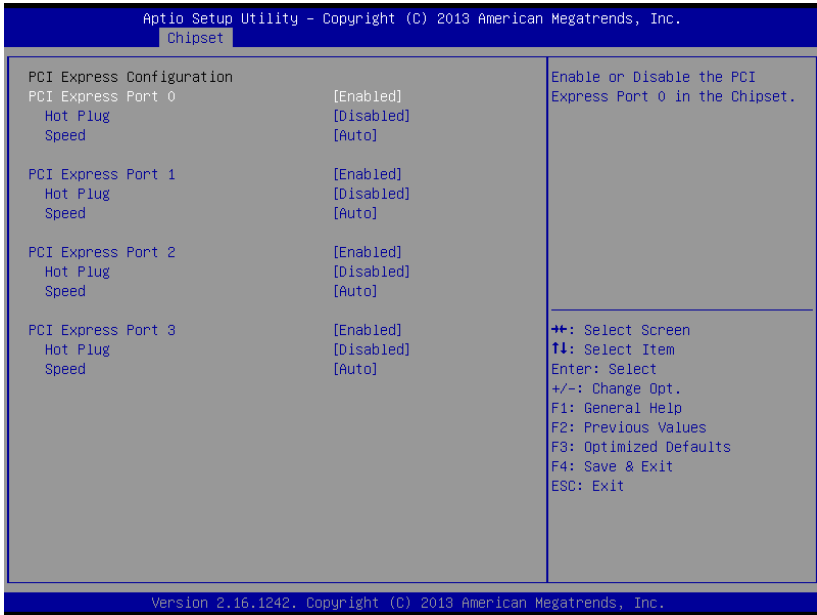

| Options Summary | | |
|--|----------|-----------------------------------|
| PCI Express Root Port X | Enabled | Optimal Default, Failsafe Default |
| | Disabled | |
| Enable or Disable the PCI Express Port X in the Chipset. | | |
| Hot Plug | Disabled | |
| | Enabled | Optimal Default, Failsafe Default |
| Enable or disable PCI Express Hot Plug. | | |
| Speed | Auto | Optimal Default, Failsafe Default |
| | Gen 2 | |
| | Gen 1 | |
| Configure PCIe Port Speed | | |

3.6 Setup Submenu: Security

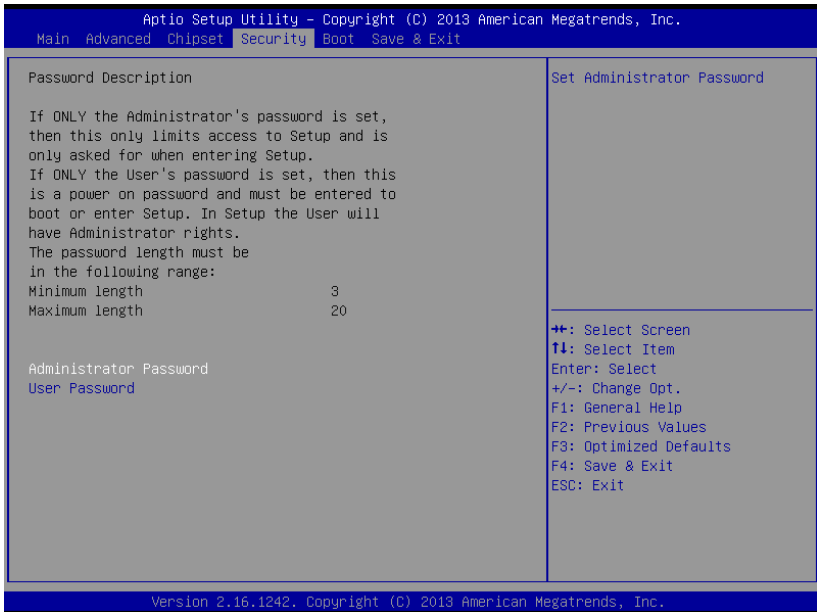

Change User/Administrator Password


You can set an Administrator Password or User Password. An Administrator Password must be set before you can set a User Password. The password will be required during boot up, or when the user enters the Setup utility. A User Password does not provide access to many of the features in the Setup utility.

Select the password you wish to set, and press Enter. In the dialog box, enter your password (must be between 3 and 20 letters or numbers). Press Enter and retype your password to confirm. Press Enter again to set the password.

Removing the Password


Select the password you want to remove and enter the current password. At the next dialog box press Enter to disable password protection.

3.7 Setup Submenu: Boot

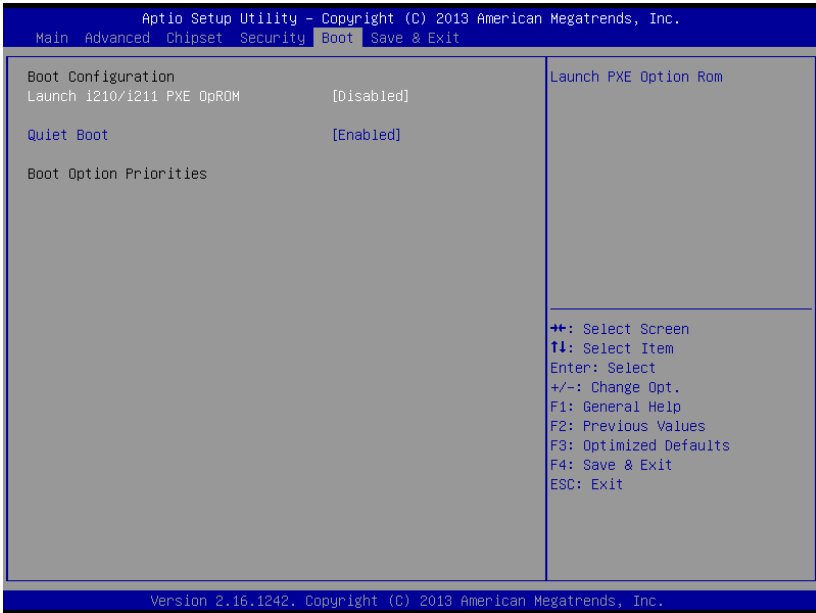

| Options Summary | | |
|---------------------------------------|----------|---------|
| Launch i210/i211 PXE OpROM | Disabled | Default |
| | Enabled | |
| Launch PXE Option Rom | | |
| Quiet Boot | Disabled | |
| | Enabled | Default |
| Enables or disables Quiet Boot option | | |

3.8 Setup Submenu: Save & Exit

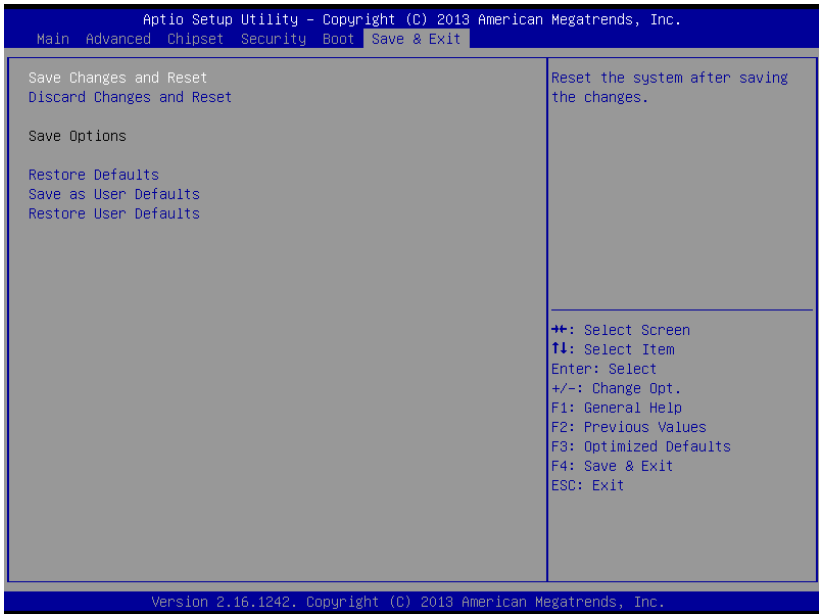

Chapter 4

Drivers Installation

4.1 Driver Download/Installation

Drivers for the GENE-BT05 can be downloaded from the product page on the AAEON website by following this link:

<https://www.aaeon.com/en/p/3-and-half-inches-subcompact-boards-gene-bt05>

Download the driver(s) you need and follow the steps below to install them.

Step 1 – Install Chipset Drivers

1. Open the **Step1 - Chipset** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 2 – Install Graphics Driver

1. Open the **Step2 - Graphic** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 3 – Install LAN Driver

1. Click on the **Step3 - LAN** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 4 – Install Audio Driver (Windows 8 only)

1. Open the **Step4 - Audio** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 5 – Install TXE Drivers

1. Open the **Step5 - TXE** folder select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 6 – Install PenMount Touch 6000 Driver

1. Open the **Step6 - PenMount Touch 6000** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 7 – Install TPM Driver

1. Open the **Step7 - TPM** folder followed by the **Atmel TPM Driver Installer 3.0.3.15.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

Step 8 – Install MBI Driver

1. Open the **Step8 - MBI** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically


Step 9 – Install USB 3.0 Driver (Windows 7 only)

1. Open the **Step9 - USB3.0** folder followed by the **Setup.exe** file
2. Follow the instructions
3. Drivers will be installed automatically


Step 10 – Install Serial Port Driver (Optional)

For Windows 7:


1. Change User Account Control settings to **Never notify**

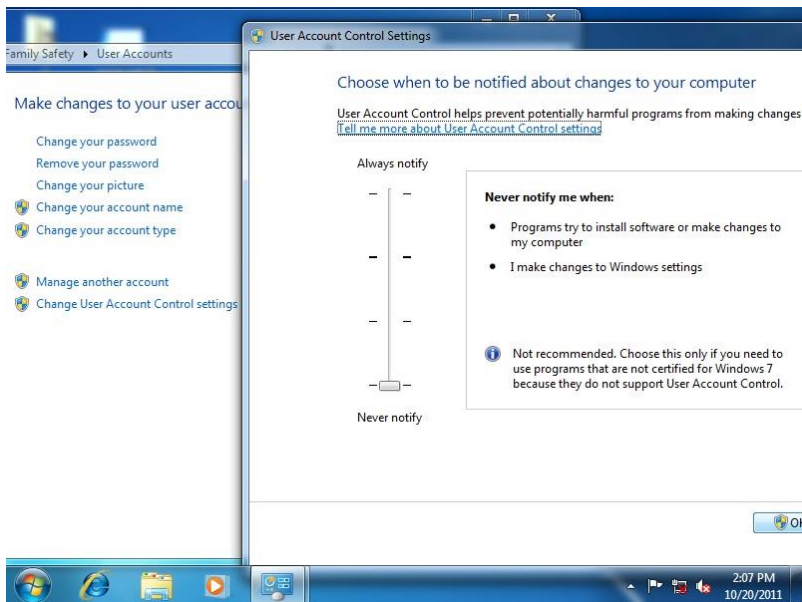

2. Reboot and log in as administrator

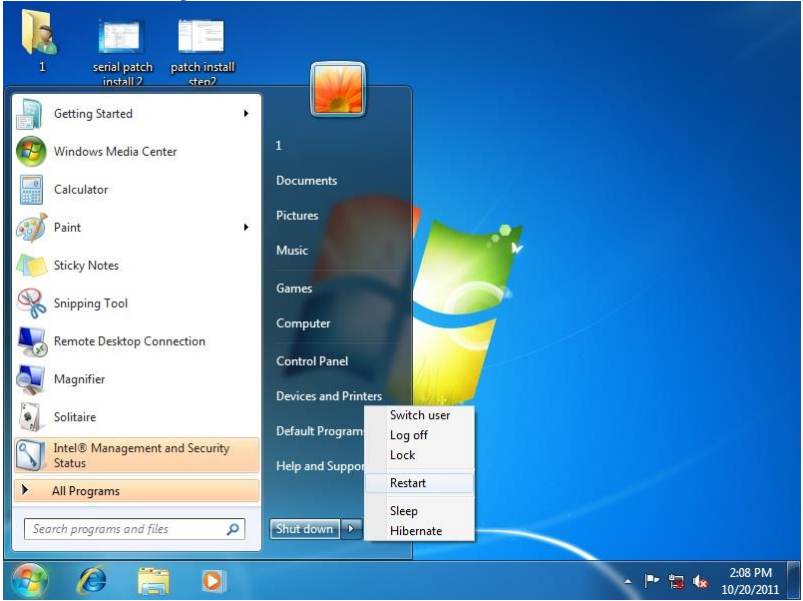


3. Run patch.bat as administrator

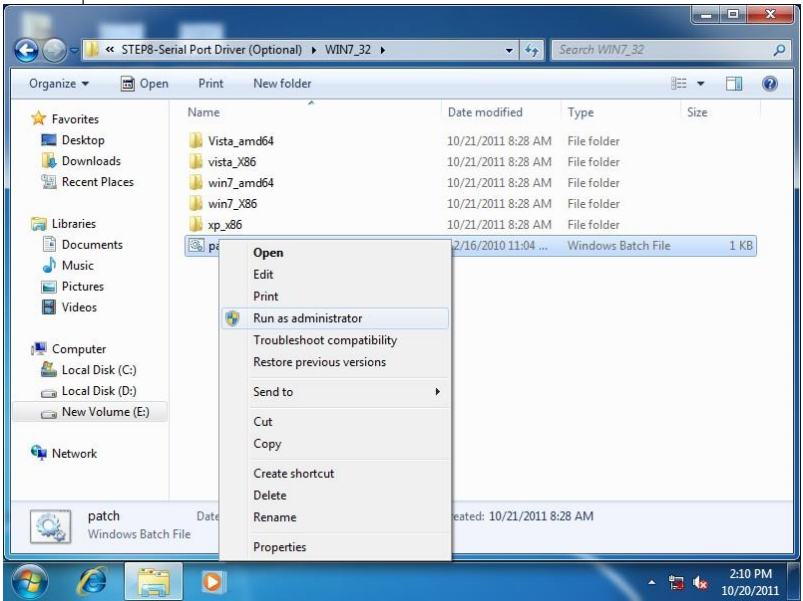


For Windows 8/ Windows 10:

1. Open the Apps Screen, right click on the **Command Prompt** tile and select **Run as Administrator**

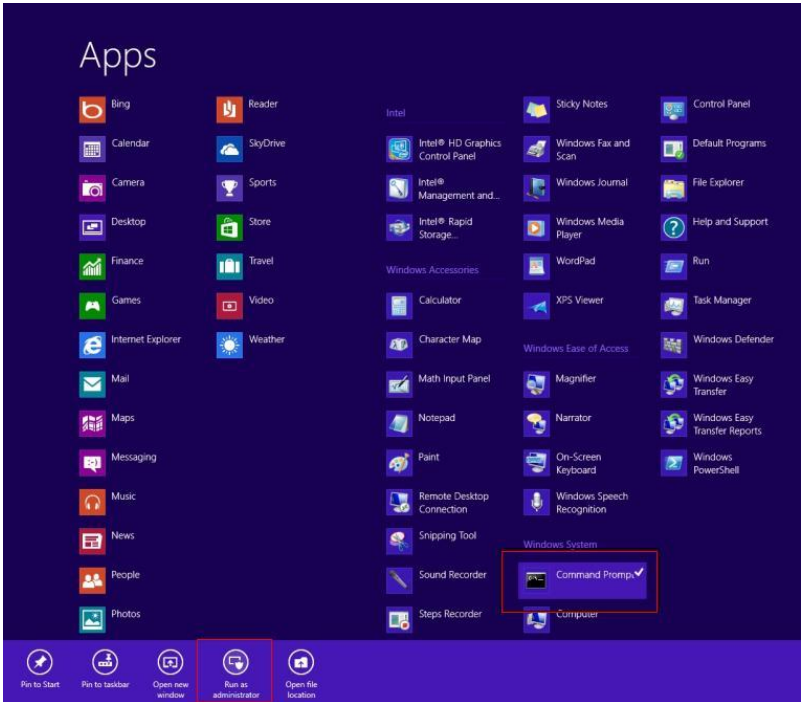


- To install the driver (patch.bat), you will first have to locate the file in command prompt. To do that, first go to the directory which contains the file by entering **<drive letter>**: eg. if the driver is in D drive, enter **D:**
- You are now at the directory containing the installation file. Next, go to the folder in which the file resides by entering **cd <folder>** eg: if the file is in a folder named abc, enter **cd <abc>**.
- You are now at the folder where the file is located. Enter the **patch.bat** to open and install the drivers. If your file is in a subfolder, enter the **cd <folder>** command again to access the subfolder (screenshot below is for reference only).

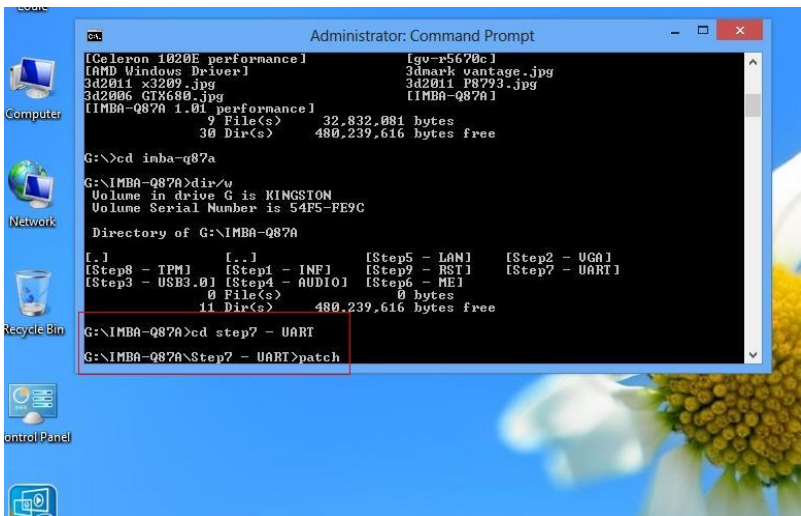

- Reboot after installation completes.

- To confirm the installation, go to Device Manager, expand the Ports (COM & LPT) tree and double click on any of the COM ports to open its properties. Go to the Driver tab, select Driver Details and click on **serial.sys**, you should see its provider as **Windows (R) Win 7 DDK Provider**.

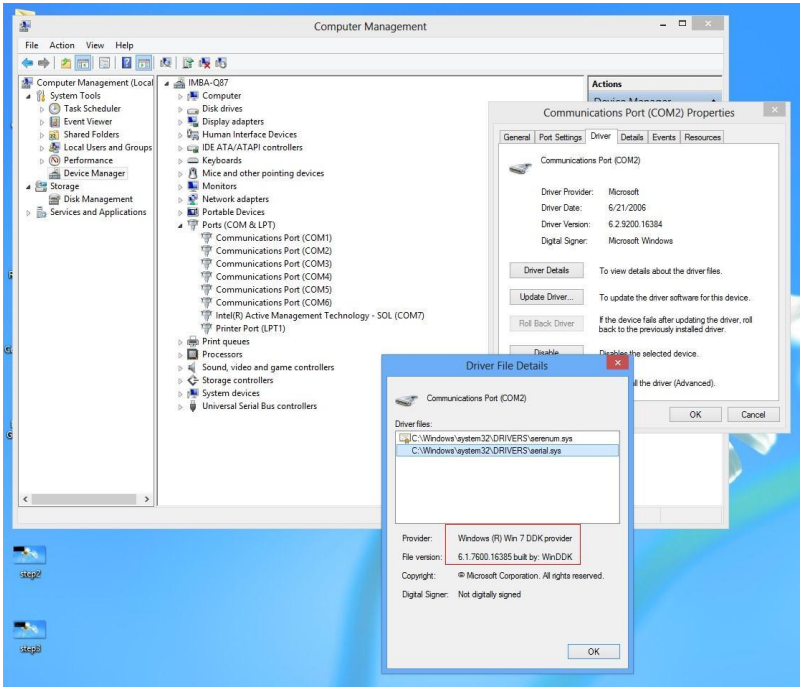

Appendix A

Watchdog Timer Programming

A.1 Watchdog Timer Registers

Table 1 : Watch dog relative IO address

| I/O Base Address | Default Value | Note |
|------------------|---------------|---|
| | 0xA00 | I/O Base address for Watchdog operation. This address is assigned by SIO LDN7, register 0x60-0x61. |

Table 2 : Watchdog relative register table

| Register | Offset | BitNum | Value | Note |
|-------------------------|--------|--------|-------|---|
| Watchdog WDTRST# Enable | 0x00 | 7 | 1 | Enable/Disable time out output via WDTRST# 0: Disable 1: Enable |
| Pulse Width | 0x05 | 0:1 | 01 | Width of Pulse signal 00: 1ms (do not use) 01: 25ms 10: 125ms 11: 5s <i>Pulse width is must longer than 16ms.</i> |
| Signal Polarity | 0x05 | 2 | 0 | 0: low active 1: high active <i>Must set this bit to 0</i> |
| Counting Unit | 0x05 | 3 | 0 | Select time unit. 0: second 1: minute |
| Output Signal Type | 0x05 | 4 | 1 | 0: Level 1: Pulse <i>Must set this bit to 1</i> |
| Watchdog Timer Enable | 0x05 | 5 | 1 | 0: Disable 1: Enable |
| Timeout Status | 0x05 | 6 | 1 | 1: timeout occurred. Write a 1 to clear timeout status |
| Timer Counter | 0x06 | | | Time of watchdog timer (0~255) |

A.2 Watchdog Sample Program

```

*****// WDT I/O
operation relative definition (Please reference to Table 1)
#define WDTAddr 0xA00 // WDT I/O base address
Void WDTWriteByte(byte Register, byte Value);
byte WDTReadByte(byte Register);
Void WDTSetReg(byte Register, byte Bit, byte Val);
// Watch Dog relative definition (Please reference to Table 2)
#define DevReg 0x00 // Device configuration register
#define WDRstBit 0x80 // Watchdog WDTRST# (Bit7)
#define WDRstVal 0x80 // Enabled WDTRST#
#define TimerReg 0x05 // Timer register
#define PSWidthBit 0x00 // WDTRST# Pulse width (Bit0:1)
#define PSWidthVal 0x01 // 25ms for WDTRST# pulse
#define PolarityBit 0x02 // WDTRST# Signal polarity (Bit2)
#define PolarityVal 0x00 // Low active for WDTRST#
#define UnitBit 0x03 // Unit for timer (Bit3)
#define ModeBit 0x04 // WDTRST# mode (Bit4)
#define ModeVal 0x01 // 0:level 1: pulse
#define EnableBit 0x05 // WDT timer enable (Bit5)
#define EnableVal 0x01 // 1: enable
#define StatusBit 0x06 // WDT timer status (Bit6)
#define CounterReg 0x06 // Timer counter register
*****

```

```
*****
VOID Main(){
// Procedure : AaeonWDTConfig
// (byte)Timer : Counter of WDT timer.(0x00~0xFF)
// (boolean)Unit : Select time unit(0: second, 1: minute).
AaeonWDTConfig(Counter, Unit);
// Procedure : AaeonWDTEnable
// This procedure will enable the WDT counting.
WDTSetBit(TimerReg, PSWidthBit, PSWidthVal);
// Watchdog WDTRST# Enable
WDTSetBit(DevReg, WDTRstBit, WDTRstVal);
}
VOID WDTClearTimeoutStatus(){
WDTSetBit(TimerReg, StatusBit, 1);
}
*****
```

```
*****
VOID WDTWriteByte(byte Register, byte Value){
    IOWriteByte(WDTAddr+Register, Value);
}
byte WDTReadByte(byte Register){
    return IOReadByte(WDTAddr+Register);
}
VOID WDTSetBit(byte Register, byte Bit, byte Val){
    byte TmpValue;
    TmpValue = WDTReadByte(Register);
    TmpValue &= ~(1 << Bit);
    TmpValue |= Val << Bit;
    WDTWriteByte(Register, TmpValue);
}
*****
```

Appendix B

I/O Information

B.1 I/O Address Map




































| Address Range | Device Name |
|---|--|
| [0000000000000000 - 000000000000006F] | PCI bus |
| [0000000000000020 - 0000000000000021] | Programmable interrupt controller |
| [0000000000000024 - 0000000000000025] | Programmable interrupt controller |
| [0000000000000028 - 0000000000000029] | Programmable interrupt controller |
| [000000000000002C - 000000000000002D] | Programmable interrupt controller |
| [000000000000002E - 000000000000002F] | Motherboard resources |
| [0000000000000030 - 0000000000000031] | Programmable interrupt controller |
| [0000000000000034 - 0000000000000035] | Programmable interrupt controller |
| [0000000000000038 - 0000000000000039] | Programmable interrupt controller |
| [000000000000003C - 000000000000003D] | Programmable interrupt controller |
| [0000000000000040 - 0000000000000043] | System timer |
| [000000000000004E - 000000000000004F] | Motherboard resources |
| [0000000000000050 - 0000000000000053] | System timer |
| [0000000000000061 - 0000000000000061] | Motherboard resources |
| [0000000000000063 - 0000000000000063] | Motherboard resources |
| [0000000000000065 - 0000000000000065] | Motherboard resources |
| [0000000000000067 - 0000000000000067] | Motherboard resources |
| [0000000000000070 - 0000000000000070] | Motherboard resources |
| [0000000000000070 - 0000000000000077] | System CMOS/real time clock |
| [0000000000000078 - 000000000000007F] | PCI bus |
| [0000000000000080 - 000000000000008F] | Motherboard resources |
| [0000000000000092 - 0000000000000092] | Motherboard resources |
| [00000000000000A0 - 00000000000000A1] | Programmable interrupt controller |
| [00000000000000A4 - 00000000000000A5] | Programmable interrupt controller |
| [00000000000000A8 - 00000000000000A9] | Programmable interrupt controller |
| [00000000000000AC - 00000000000000AD] | Programmable interrupt controller |
| [00000000000000B0 - 00000000000000B1] | Programmable interrupt controller |
| [00000000000000B2 - 00000000000000B3] | Motherboard resources |
| [00000000000000B4 - 00000000000000B5] | Programmable interrupt controller |
| [00000000000000B8 - 00000000000000B9] | Programmable interrupt controller |
| [00000000000000BC - 00000000000000BD] | Programmable interrupt controller |
| [000000000000002E8 - 000000000000002EF] | Communications Port (COM4) |
| [000000000000002F8 - 000000000000002FF] | Communications Port (COM2) |
| [00000000000000378 - 0000000000000037F] | Printer Port (LPT1) |
| [000000000000003B0 - 000000000000003BB] | Intel(R) Atom(TM) Processor E3800 Series/Intel(R) Celeron(R) Processor N2920/J1900 |
| [000000000000003C0 - 000000000000003DF] | Intel(R) Atom(TM) Processor E3800 Series/Intel(R) Celeron(R) Processor N2920/J1900 |
| [000000000000D000 - 000000000000DFFF] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A |
| [000000000000E000 - 000000000000EFFF] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48 |
| [000000000000F000 - 000000000000F01F] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port |
| [000000000000F020 - 000000000000F03F] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23 |
| [000000000000F040 - 000000000000F043] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23 |
| [000000000000F050 - 000000000000F057] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23 |
| [000000000000F060 - 000000000000F063] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23 |
| [000000000000F070 - 000000000000F077] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23 |
| [000000000000F080 - 000000000000F087] | Intel(R) Atom(TM) Processor E3800 Series/Intel(R) Celeron(R) Processor N2920/J1900 |


















































B.2 Memory Address Map

| Address Range | Device |
|---------------------------------------|--|
| [0000000000A0000 - 0000000000BFFFF] | Intel(R) Atom(TM) Processor E3800 Series/Intel(R) Celeron(R) Processor N2920/J1900 |
| [0000000000A0000 - 0000000000BFFFF] | PCI bus |
| [0000000000C0000 - 0000000000DFFFF] | PCI bus |
| [0000000000E0000 - 0000000000FFFFFF] | PCI bus |
| [00000000C0000000 - 00000000CFFFFFFF] | Intel(R) Atom(TM) Processor E3800 Series/Intel(R) Celeron(R) Processor N2920/J1900 |
| [00000000C0000000 - 00000000D0816FFF] | PCI bus |
| [00000000D0000000 - 00000000D03FFFFF] | Intel(R) Atom(TM) Processor E3800 Series/Intel(R) Celeron(R) Processor N2920/J1900 |
| [00000000D0400000 - 00000000D04FFFFF] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Trusted Execution Engine Interface - |
| [00000000D0500000 - 00000000D05FFFFF] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Trusted Execution Engine Interface - |
| [00000000D0600000 - 00000000D061FFFF] | Intel(R) I211 Gigabit Network Connection |
| [00000000D0600000 - 00000000D06FFFFF] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A |
| [00000000D0620000 - 00000000D0623FFF] | Intel(R) I211 Gigabit Network Connection |
| [00000000D0700000 - 00000000D071FFFF] | Intel(R) I211 Gigabit Network Connection #2 |
| [00000000D0700000 - 00000000D07FFFFF] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48 |
| [00000000D0720000 - 00000000D0723FFF] | Intel(R) I211 Gigabit Network Connection #2 |
| [00000000D0800000 - 00000000D080FFFF] | Intel(R) USB 3.0 eXtensible Host Controller |
| [00000000D0810000 - 00000000D0813FFF] | High Definition Audio Controller |
| [00000000D0814000 - 00000000D081401F] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port |
| [00000000D0816000 - 00000000D08167FF] | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23 |
| [00000000E0000000 - 00000000FFFFFFF] | Motherboard resources |
| [00000000FED00000 - 00000000FED003FF] | High precision event timer |
| [00000000FED01000 - 00000000FED01FFF] | Motherboard resources |
| [00000000FED03000 - 00000000FED03FFF] | Motherboard resources |
| [00000000FED04000 - 00000000FED04FFF] | Motherboard resources |
| [00000000FED08000 - 00000000FED08FFF] | Motherboard resources |
| [00000000FED0C000 - 00000000FED0FFFF] | Motherboard resources |
| [00000000FED1C000 - 00000000FED1CFFF] | Motherboard resources |
| [00000000FEE00000 - 00000000FEEFFFFF] | Motherboard resources |
| [00000000FEF00000 - 00000000FEF7FFFF] | Motherboard resources |
| [00000000FF000000 - 00000000FFFFFFF] | Intel(R) 82802 Firmware Hub Device |


B.3 IRQ Mapping Chart

| Interrupt request (IRQ) | |
|-------------------------|---------------------------------|
| (ISA) 0x00000000 (00) | System timer |
| (ISA) 0x00000003 (03) | Communications Port (COM2) |
| (ISA) 0x00000004 (04) | Communications Port (COM1) |
| (ISA) 0x00000008 (08) | High precision event timer |
| (ISA) 0x0000000A (10) | Communications Port (COM3) |
| (ISA) 0x0000000A (10) | Communications Port (COM4) |
| (ISA) 0x00000051 (81) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000052 (82) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000053 (83) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000054 (84) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000055 (85) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000056 (86) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000057 (87) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000058 (88) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000059 (89) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000005A (90) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000005B (91) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000005C (92) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000005D (93) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000005E (94) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000005F (95) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000060 (96) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000061 (97) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000062 (98) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000063 (99) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000064 (100) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000065 (101) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000066 (102) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000067 (103) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000068 (104) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000069 (105) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000006A (106) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000006B (107) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000006C (108) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000006D (109) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000006E (110) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000006F (111) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000070 (112) | Microsoft ACPI-Compliant System |
| (ISA) 0x00000071 (113) | Microsoft ACPI-Compliant System |

| | | |
|---|------------------------|---------------------------------|
|  | (ISA) 0x0000007E (126) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000007F (127) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000080 (128) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000081 (129) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000082 (130) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000083 (131) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000084 (132) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000085 (133) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000086 (134) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000087 (135) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000088 (136) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000089 (137) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008A (138) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008B (139) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008C (140) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008D (141) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008E (142) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008F (143) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000090 (144) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000091 (145) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000092 (146) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000093 (147) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000094 (148) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000095 (149) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000096 (150) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000097 (151) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000098 (152) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000099 (153) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009A (154) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009B (155) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009C (156) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009D (157) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009E (158) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009F (159) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A0 (160) | Microsoft ACPI-Compliant System |

| | | |
|---|-------------------------|---|
|  | (ISA) 0x000000A1 (161) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A2 (162) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A3 (163) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A4 (164) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A5 (165) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A6 (166) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A7 (167) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A8 (168) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A9 (169) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AA (170) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AB (171) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AC (172) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AD (173) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AE (174) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AF (175) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B0 (176) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B1 (177) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B2 (178) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B3 (179) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B4 (180) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B5 (181) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B6 (182) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B7 (183) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B8 (184) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B9 (185) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BA (186) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BB (187) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BC (188) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BD (189) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BE (190) | Microsoft ACPI-Compliant System |
|  | (PCI) 0x0000000B (11) | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12 |
|  | (PCI) 0x00000010 (16) | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48 |
|  | (PCI) 0x00000011 (17) | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A |
|  | (PCI) 0x00000013 (19) | Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23 |
|  | (PCI) 0x00000016 (22) | High Definition Audio Controller |
|  | (PCI) 0xFFFFFFFF1 (-15) | Intel(R) I211 Gigabit Network Connection |
|  | (PCI) 0xFFFFFFFF2 (-14) | Intel(R) I211 Gigabit Network Connection |
|  | (PCI) 0xFFFFFFFF3 (-13) | Intel(R) I211 Gigabit Network Connection |
|  | (PCI) 0xFFFFFFFF4 (-12) | Intel(R) I211 Gigabit Network Connection |
|  | (PCI) 0xFFFFFFFF5 (-11) | Intel(R) I211 Gigabit Network Connection |
|  | (PCI) 0xFFFFFFFF6 (-10) | Intel(R) I211 Gigabit Network Connection |
|  | (PCI) 0xFFFFFFFF7 (-9) | Intel(R) I211 Gigabit Network Connection #2 |
|  | (PCI) 0xFFFFFFFF8 (-8) | Intel(R) I211 Gigabit Network Connection #2 |
|  | (PCI) 0xFFFFFFFF9 (-7) | Intel(R) I211 Gigabit Network Connection #2 |
|  | (PCI) 0xFFFFFFFFA (-6) | Intel(R) I211 Gigabit Network Connection #2 |
|  | (PCI) 0xFFFFFFFFB (-5) | Intel(R) I211 Gigabit Network Connection #2 |
|  | (PCI) 0xFFFFFFFFC (-4) | Intel(R) I211 Gigabit Network Connection #2 |
|  | (PCI) 0xFFFFFFFFD (-3) | Intel(R) USB 3.0 eXtensible Host Controller |
|  | (PCI) 0xFFFFFFFFE (-2) | Intel(R) Atom(TM) Processor E3800 Series/Intel(R) Celeron(R) Processor N2920/J1900 |

B.4 DMA Channel Assignments

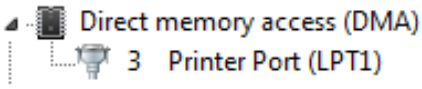

Appendix C

Mating Connectors

C.1 List of Mating Connectors and Cables

| Connector Label | Function | Mating Connector | | Available Cable | Cable P/N |
|-----------------|---------------------------------------|------------------|-----------------|---------------------------|------------|
| | | Vendor | Model no | | |
| CN1 | External AUX Power and PS_ON# | JST | PHR-6 | N/A | N/A |
| CN3 | LVDS Inverter Connector | JST | PHR-5 | N/A | N/A |
| CN4 | +5Vout Connector | JST | PHR-2 | 2 Pins For SATA HDD Power | 1702150155 |
| CN5 | External +5VSB Power Input and PS_ON# | JST | XHP-3 | ATX Cable | 170220020B |
| CN6 | SATA Connector | Molex | 887505318 | SATA Cable | 1709070500 |
| CN7 | +12V Vin Connector | Molex | 19211-0003 | Power Cable | 170204010R |
| CN8 | LVDS Connector | HIROSE | DF13-30DS-1.25C | N/A | N/A |
| CN9 | Audio Connector | Molex | 51021-1000 | Audio Cable | 1709100254 |
| CN11 | LPC Connector | JST | SHR-12V-S-B | AAEON LPC Cable | 1703120130 |
| CN12 | COM Port #2 Connector | Molex | 51021-0900 | Serial Port Cable | 1701090150 |
| CN14 | COM Port #3 Connector | Molex | 51021-0900 | Serial Port Cable | 1701090150 |
| CN15 | COM Port #4 Connector | Molex | 51021-0900 | Serial Port Cable | 1701090150 |

| Connector Label | Function | Mating Connector | | Available Cable | Cable P/N |
|-----------------|------------------------|------------------|------------|------------------|------------|
| | | Vendor | Model no | | |
| CN16 | Digital IO Connector | Molex | 51110-1050 | N/A | N/A |
| CN17 | USB Port #3 Connector | Molex | 51021-0500 | USB Cable | 1700050207 |
| CN18 | USB Port #2 Connector | Molex | 51021-0500 | USB Cable | 1700050207 |
| CN22 | PS/2 KB/MS Connector | JST | PHDR-06VS | PS/2 KB/MS Cable | 1700060152 |
| CN23 | Touch Screen Connector | JST | SHR-9V-S-B | N/A | N/A |
| CN24 | CPU Fan Connector | Molex | 22-01-2035 | N/A | N/A |
| CN31 | External RTC Connector | Molex | 51021-0200 | Battery Cable | 175011901M |

Appendix D

Electrical Specifications for I/O Ports

D.1 Electrical Specifications for I/O Ports

| I/O | Reference | Signal Name | Voltage/Current Output |
|--|-----------|------------------|--|
| LVDS Port Inverter / Backlight Connector | CN3 | +5V/+12V | +5V/1.5A or +12V/1.5A |
| +5V Output for SATA HDD | CN4 | +5V | +5V/1A |
| LVDS Port | CN8 | +3.3V/+5V | +3.3V/2A or +5V/2A |
| Audio I/O Port | CN9 | +5V | +5V/1A |
| Mini-Card Slot (Half-Mini Card) | CN10 | +3.3VSB +1.5V | +3.3V/1.1A +1.5V/0.375A |
| LPC Port | CN11 | +3.3V | +3.3V/0.5A |
| COM Port 2 | CN12 | +5V/+12V | +5V/1A or +12V/1A |
| COM Port 3 | CN14 | +5V/+12V | +5V/1A or +12V/1A |
| Digital IO Port | CN16 | +5V | +5V/1A |
| USB 2.0 Ports 3 | CN17 | +5VSB | +5V/0.5A (per channel) |
| USB 2.0 Ports 2 | CN18 | +5VSB | |
| PS/2 Keyboard/Mouse Combo Port | CN22 | +5VSB | +5V/0.5A |
| CPU FAN | CN24 | +12V | +12V/1A |
| USB Ports 0 and 1 | CN25 | +5VSB | +5V/0.9A for USB3.2 +5V/0.5A for USB2.0 |
| HDMI Port | CN29 | +5V | +5V/1A |
| VGA Port | CN30 | +5V | +5V/1A (reserved) |
| CFast Slot | CN33 | +3.3V | +3.3V/0.5A |
| Mini-Card Slot (Full-Mini Card) | CN37 | +3.3VSB +1.5V | +3.3V/1.1A +1.5V/0.375A |